

2026 Jeep
CHEROKEE



OWNER HANDBOOK

ROADSIDE ASSISTANCE

24 HOURS, 7 DAYS A WEEK AT YOUR SERVICE.

CALL 1-800-521-2779 OR VISIT CHRYSLER.RSAHELP.COM (USA)

CALL 1-800-363-4869 OR VISIT FCA.ROADSIDEAID.COM (CANADA)

SERVICES: Flat Tire Service, Out of Gas/Fuel Delivery, 12 Volt Battery Jump Assistance, Lockout Service and Towing Service.

Please see the Customer Assistance chapter in this Owner Handbook for further information.

FCA US LLC reserves the right to modify the terms or discontinue the Roadside Assistance Program at any time. The Roadside Assistance Program is subject to restrictions and conditions of use, that are determined solely by FCA US LLC.

This Owner Handbook illustrates and describes the operation of features and equipment that are either standard or optional on this vehicle. This manual may also include a description of features and equipment that are no longer available or were not ordered on this vehicle. Please disregard any features and equipment described in this manual that are not on this vehicle. FCA US LLC reserves the right to make changes in design and specifications, and/or make additions to or improvements to its products without imposing any obligation upon itself to install them on products previously manufactured.

With respect to any vehicles sold in Canada, the name FCA US LLC shall be deemed to be deleted and the name FCA Canada Inc. used in substitution therefore.

This Owner Handbook is intended to familiarize you with the important features of your vehicle. Your most up-to-date Owner Handbook, Owner's Manual, Radio Instruction Manual and Warranty Booklet can be found by visiting the website on the back cover.



WARNING: Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to **www.P65Warnings.ca.gov/passenger-vehicle**.





1

INTRODUCTION
Page 4



2

INTERIOR
Page 9




3

EXTERIOR
Page 33



4

EMERGENCY
Page 40

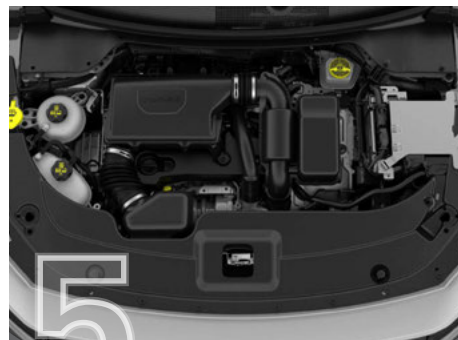

5

SPECIFICATIONS
Page 47



6

INDEX
Page 54

INTRODUCTION

OWNER HANDBOOK INTRODUCTION	4
SYMBOLS KEY	4
IF YOU NEED ASSISTANCE	5
Roadside Assistance	5
FCA US LLC Customer Center	5
FCA Canada Customer Care	5
Mexico	5
Puerto Rico And US Virgin Islands	5
Customer Assistance For The Hearing Or Speech Impaired (TDD/TTY)	6
Service Contract	6
Warranty Information	6
Ordering and Accessing Additional Owner's Information	6
Change Of Ownership Or Address	7
General Information	7

INTERIOR

INTERIOR OVERVIEW	9
STARTING AND OPERATING	10
Keyless Enter 'n Go™ — Passive Entry	10
MULTIMEDIA	10
Uconnect Systems	10
Uconnect Settings	11
Pair/Delete A Device	11
Apple CarPlay®	12
Android Auto™	12
Uconnect Voice Recognition — If Equipped	13

Off-Road Pages	13
INTERIOR STORAGE AND EQUIPMENT	13
Electrical Power Outlets	13
Power Inverters — If Equipped	14
USB Control	15
Wireless Charging Pad — If Equipped	15
INSTRUMENT CLUSTER	17
10-inch Instrument Cluster	17
Location And Controls	18
Warning Lights And Messages	20
INTERIOR COMFORT SETTINGS	20
Climate Controls	20
Automatic Climate Control Descriptions And Functions	20
Automatic Temperature Control (ATC)	21
Climate Voice Recognition	22
Front Heated Seats	22
Front Ventilated Seats	22
Power Adjustment Front Seats	22
Head Restraints	22
EXTERIOR LIGHTS	24
Headlight Switch	24
Automatic High Beams — If Equipped	24
Automatic Headlights	25
Headlights On Automatically With Wipers	25
WINDSHIELD WIPERS AND WASHERS	25
Windshield Wiper Operation	25
Rain Sensing Wipers — If Equipped	26
UNIVERSAL GARAGE DOOR OPENER (HOMELINK®)	26
Troubleshooting Tips	27

CRUISE CONTROL SYSTEM	27
Adaptive Cruise Control (ACC)	28
PARKING ASSISTANCE	29
Parksense Front/Rear Park Assist System	29
ELECTRIC PARK BRAKE (EPB)	30

EXTERIOR

EXTERIOR OVERVIEW	33
EXTERIOR CAMERA VIEWS	34
Surround View Camera System — If Equipped	34
MANUAL DOOR LATCHING	34
HOOD	35
Opening The Hood	35
Closing The Hood	36
LIFTGATE	37
To Unlock/Open The Liftgate	37
To Lock/Close The Liftgate	37
HIGH VOLTAGE BATTERY	38
Hybrid Electric Vehicle App	39

EMERGENCY

ASSIST AND SOS SYSTEM— IF EQUIPPED ...	40
JACK USAGE PRECAUTIONS	43
TIRE SERVICE KIT — IF EQUIPPED	43
JUMP STARTING (HYBRID MODELS)	43
Preparations For Jump Start (Hybrid Models)	44

Jump Starting Procedure.....	45
FREEING A STUCK VEHICLE.....	46

SPECIFICATIONS

ENGINE COMPARTMENT	47
1.6L Engine	47
ENGINE BREAK-IN RECOMMENDATIONS	48
FLUID CAPACITIES	48
ENGINE FLUIDS AND LUBRICANTS.....	49
CHASSIS FLUIDS AND LUBRICANTS	50
SERVICING AND MAINTENANCE	51
Maintenance Plan	51
Engine Oil Life Reset	52
Trailer Towing	53

OWNER HANDBOOK INTRODUCTION

Thank you for choosing Jeep®. This Owner Handbook has been prepared to help you quickly become acquainted with important features of your vehicle. It contains most things you will need to operate and maintain your vehicle, including emergency information.

This handbook illustrates and describes the operation of certain features and equipment that come either standard or optional on your vehicle. It may include a description of features and equipment that your vehicle is not equipped with. FCA US LLC reserves the right to make changes in design and specifications and/or make additions to or improvements to its products without imposing any obligation upon itself to install them on products previously manufactured.

FCA US LLC is committed to protecting the environment and invites you to refer to the complete Owner's Manual on <http://www.mopar.com/om> (US) or <http://www.owners.mopar.ca/en/> (Canada).



Mobile App:



Download the Jeep® Mobile App from the Google Play® Store or Apple® App Store® for access to Remote Commands. Log in with your account information.



TECH
AUTHORITY

To order a hard copy of your Owner's Manual, visit:
www.techauthority.com

SYMBOLS KEY

WARNING!	These statements apply to operating procedures that could result in a collision, bodily injury and/or death.
CAUTION!	These statements apply to procedures that could result in damage to your vehicle.
NOTE:	A suggestion which will improve installation, operation, and reliability. If not followed, may result in damage.
TIP:	General ideas/solutions/suggestions on easier use of the product or functionality.
PAGE REFERENCE ARROW 	Follow this reference for additional information on a particular feature.
 FOOTNOTE	Supplementary and relevant information pertaining to the topic.

If you do not read the entire Owner's Manual, you may miss important information. Observe all Cautions and Warnings.

IF YOU NEED ASSISTANCE

FCA US LLC and its authorized dealers are interested in your satisfaction. We want you to be happy with our products and services.

Warranty service must be done by an authorized dealer. We strongly recommend that you take the vehicle to an authorized dealer. They know your vehicle the best, and are most concerned that you get prompt and high quality service. FCA US LLC's authorized dealers have the facilities, factory-trained technicians, special tools, and the latest information to ensure the vehicle is fixed correctly and in a timely manner.

Always talk to an authorized dealer's service manager first. If for some reason you are still not satisfied, speak to the general manager or owner of the authorized dealer. If an authorized dealer is unable to resolve the concern, you may contact FCA US LLC's Customer Assistance center.

Any communication to FCA US LLC's customer center should include the following information:

- Owner's name and address
- Owner's telephone number (home, mobile, and office)
- Authorized dealer name

- Vehicle Identification Number (VIN)
- Vehicle delivery date and mileage

ROADSIDE ASSISTANCE

Call 1-800-521-2779 or visit chrysler.rsahelp.com (USA)

Call 1-800-363-4869 or visit fca.roadsideaid.com (Canada)

Available: 24 Hours, 7 Days A Week

Your vehicle's VIN is required to receive covered services.

- Flat Tire Service
- Out of Gas/Fuel Delivery - This service is limited to two occurrences in a 12-month period. Up to two gallons of fuel will be provided by a service provider.
- 12V Battery Jump Assistance
- Lockout Service
- Towing Service

FCA US LLC CUSTOMER CENTER

P.O. Box 21-8004

Auburn Hills, MI 48321-8004

Phone: (877) 426-5337

FCA CANADA CUSTOMER CARE

P.O. Box 1621

Windsor, Ontario N9A 4H6

Phone: (800) 465-2001 English / (800) 387-9983 French

MEXICO

Customer Relations Office

Av. Prolongacion Paseo de la Reforma, 1240

Sante Fe C.P. 05109

Mexico, CDMX

In Mexico City: (800) 505-1300

Outside Mexico City: +(52) 55 50817568

PUERTO RICO AND US VIRGIN ISLANDS

FCA Caribbean LLC Customer Service

P.O. Box 191857

San Juan, Puerto Rico 00919-1857

Phone: (877) 426-5337

CUSTOMER ASSISTANCE FOR THE HEARING OR SPEECH IMPAIRED (TDD/TTY)

To assist customers who have hearing difficulties, FCA US LLC has installed special Telecommunication Devices for the Deaf (TDD) equipment at its customer center. Any hearing or speech impaired customer, who has access to a TDD or a conventional teletypewriter (TTY) in the United States, can communicate with FCA US LLC by dialing 1-800-380-2479.

Canadian residents with hearing difficulties that require assistance can use the special needs relay service offered by Bell Canada. For TTY teletypewriter users, dial 711 and for Voice callers, dial 1-800-855-0511 to connect with a Bell Relay Service operator.

SERVICE CONTRACT

You may have purchased a service contract for a vehicle to help protect you from the high cost of unexpected repairs after FCA US LLC's New Vehicle Limited Warranty expires. The FlexCare Vehicle Protection plans are the ONLY vehicle extended protection plans authorized, endorsed and backed by FCA US LLC to provide additional protection beyond your vehicle's warranty. If you purchased a FlexCare Vehicle Protection Plan, you will receive Plan Provisions and an Owner Identification Card in the mail within

three weeks of the vehicle delivery date. If you have any questions about the service contract, call the FlexCare National Customer Hotline at 1-800-521-9922.

For Canadian residents, you may have purchased additional coverage with an extended service contract. FCA Canada Inc. stands fully behind its service contracts. Be sure that the one you buy is a genuine Canada Inc. service contract. We are not responsible for other companies' contracts. If you purchased a contract other than a genuine FCA Canada Inc. service contract and you have a problem, you will have to contact the administrator of that contract for resolution. If you have any questions about the service contract, call the FlexCare National Customer Hotline at (800) 465-2001 English / (800) 387-9983 French).

FlexCare Vehicle Protection Plans offer valuable protection against repair costs after your vehicle warranties have expired. FlexCare Vehicle Protection plans are the ONLY vehicle extended protection plans authorized, endorsed and backed by FCA US LLC to provide additional protection beyond your vehicle's warranty.

FCA US LLC is not responsible for any service contract you may have purchased from another manufacturer. If you require service after the FCA US LLC New Vehicle Limited Warranty expires, please refer to the contract

documents, and contact the person listed in those documents.

We appreciate that you have made a major investment when you purchased the vehicle. An authorized dealer has also made a major investment in facilities, tools, and training to assure that you are absolutely delighted with the ownership experience.

WARRANTY INFORMATION

To access your warranty information online, visit www.mopar.com/om (US) or www.owners.mopar.ca/en or www.owners.mopar.ca/fr (Canada).



EV warranty service must be done by a certified EV Alfa Romeo, Chrysler, Dodge, FIAT®, Jeep®, Ram, or Business Link dealer. To find a certified dealer, visit the Find-A-Dealer feature on the Mopar website and select "Show certified EV dealers only".

ORDERING AND ACCESSING ADDITIONAL OWNER'S INFORMATION

To order the following manuals, you may use either the website or the phone numbers listed.

Service Manuals

These comprehensive Service Manuals provide a complete working knowledge of the vehicle, system, and/or components and is written in straightforward language with illustrations, diagrams, and charts.

Diagnostic Procedure Manuals

Diagnostic Procedure Manuals are filled with diagrams, charts and detailed illustrations. These manuals make it easy to find and fix problems on computer-controlled vehicle systems and features. They show exactly how to find and correct problems, using step-by-step troubleshooting and drivability procedures, proven diagnostic tests and a complete list of all tools and equipment.

To order a digital copy of your Service or Diagnostic Procedure manuals, visit: www.moparTSP.com (US and Canada).

Owner's Manuals

To access your Owner's Information online, visit www.mopar.com/om (US) or www.owners.mopar.ca/en/ (Canada) or visit: www.techauthority.com to order physical copies of Owner's Manuals (US).

Owner's Information and Radio Manuals can be ordered through Archway at: **1-800-387-1143 (Canada)**

CHANGE OF OWNERSHIP OR ADDRESS

*If you have purchased this vehicle used or have changed your address, please provide the following information and mail to:

FCA US LLC

P.O. Box 21-8008

Auburn Hills, MI 48321-8004

Make sure to include the following:

- Date of Sale (mm/dd/yy)
- Vehicle Identification Number (17 Character ID located on top left of the instrument panel)
- Exact Odometer Reading
- First and Last Name
- Phone Number
- Street Address, City, State and Zip Code
- Email Address

*Applies to US residents only.

GENERAL INFORMATION

The following regulatory statement applies to all Radio Frequency (RF) devices equipped in this vehicle:

This device complies with Part 15 of the FCC Rules and with Innovation, Science and Economic Development Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Innovation, Science and Economic Development applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage, et
2. L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

La operación de este equipo está sujeta a las siguientes dos condiciones:

1. Es posible que este equipo o dispositivo no cause interferencia perjudicial y
2. Este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

NOTE:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

INTERIOR OVERVIEW



- 1 — Garage Door Opener (HomeLink®) ➞ page 26
- 2 — Assist & SOS Buttons ➞ page 40
- 3 — Windshield Wipers and Washers ➞ page 25
- 4 — Instrument Cluster Display ➞ page 17
- 5 — Cruise Control Buttons ➞ page 27

- 6 — Uconnect Radio Screen Display ➞ page 10
- 7 — Instrument Cluster Controls ➞ page 18
- 8 — Uconnect Voice Command Buttons ➞ page 13
- 9 — Electric Park Brake ➞ page 30
- 10 — Headlight Switch ➞ page 24

- 11 — Gear Selector
- 12 — Start Button
- 13 — USB/AUX Media Hub ➞ page 15

STARTING AND OPERATING

KEYLESS ENTER 'N GO™ — PASSIVE ENTRY

Scan this QR code to learn more about Keyless Enter 'n Go™.



Keyless Enter 'n Go™ – Passive Entry allows you to lock and unlock the vehicle's door(s) without having to push the key fob lock or unlock buttons.


If equipped, the rear doors will also have Passive Entry capabilities.

To Unlock/Lock The Vehicle's Doors And Liftgate

With a valid Passive Entry key fob with you, grab the handle to unlock the vehicle. The driver's handle will unlock the driver's door only (unless otherwise programmed in Uconnect

Settings), whereas the passenger handle (or a rear handle when equipped with four-door Passive Entry) will unlock all doors and the liftgate automatically.

With a valid Passive Entry key fob on you, touch the Passive Entry lock icon on the door handle to lock all four doors and liftgate.

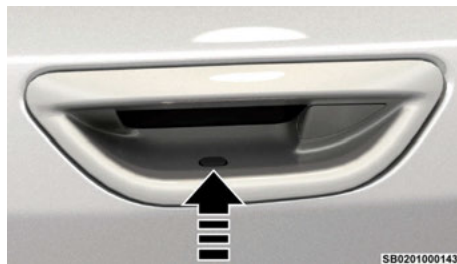

Touch The Door Handle Lock Icon To Lock

NOTE:

- DO NOT grab the door handle when pushing the lock button. This could unlock the door(s).
- Be sure to keep the vehicle key fob with you.

MULTIMEDIA

UCONNECT SYSTEMS

Scan this QR code to learn more about the Uconnect System.





Uconnect 5 NAV With 12.3-inch Display

- 1 — Home Button
- 2 — Radio/Media Button
- 3 — Comfort Button
- 4 — Navigation Button
- 5 — Phone Button
- 6 — Vehicle Button
- 7 — Apps Button

NOTE:

Uconnect screen images are for illustration purposes only and may not reflect exact software for your vehicle.

UCONNECT SETTINGS



Uconnect 5 NAV With 12.3-inch Display

- 1 — Uconnect Buttons On The Touchscreen
- 2 — Uconnect Buttons On The Faceplate

Scan this QR code to learn more about Uconnect Settings.



Press the Vehicle button, then press the Settings button toward the top of the touchscreen to get started with customizing your settings.

NOTE:

Depending on the vehicle's options, feature settings may vary.

- **Display** — Customize features such as display brightness or set navigation instructions to appear on the instrument cluster display.
- **Safety/Driving Assistance** — Customize settings such as the warning signal and steering wheel strength.
- **Phone/Bluetooth*** — Customize settings related to the paired device.
- **Camera** — Customize the vehicle's camera settings.
- **Seats & Comfort** — Customize comfort levels with heated seats or heated steering wheel.
- **Key Off Options** — Customize what the vehicle does when it shuts down.
- **Audio** — Customize audio settings.

PAIR/DELETE A DEVICE

Scan this QR code to learn more about pairing a device.



1. Make sure Bluetooth* is enabled on your mobile phone.
2. With the vehicle in the ACC or ON/RUN position, press the Phone button on the vehicle's touchscreen menu bar.

3. Press “Device Manager”.
4. Select “Add Device”.



Uconnect 5 NAV With 12.3-inch Display Pairing A Phone

5. Follow the prompts on your phone and on the touchscreen.

Follow these steps to remove your smartphone:

1. Press the Device Manager button on the touchscreen.
2. Press the Settings gear icon next to the phone or device you wish to remove.
3. Press “Delete Device”. The device should be removed.

APPLE CARPLAY®

Scan this QR code to learn more about Apple CarPlay®.



1. Ensure the iPhone® is unlocked for the very first connection, then ensure Siri is enabled in “Settings”.
2. Connect the iPhone® to one of the media USB ports in the vehicle, or pair the iPhone® with the system. You have no need to plug the device in if it is paired with the system.
3. Once the device is connected and recognized, the Phone icon on the menu bar changes to the Apple CarPlay® icon.

NOTE:

To use Apple CarPlay®, make sure cellular data is turned on and you are in an area with cellular coverage. Your data and cellular coverage is shown on the left side of the touchscreen within Apple CarPlay®. Data plan rates may apply.

ANDROID AUTO™

Scan this QR code to learn more about Android Auto™.



1. Connect the phone to one of the media USB ports in the vehicle, or pair the phone with the system. It is not necessary to plug your device in if it is paired with the system.
2. Once the device is connected and recognized, the Phone icon on the menu bar changes to the Android Auto™ icon.

NOTE:

To use Android Auto™, make sure you are in an area with cellular coverage. Android Auto™ may use cellular data, and your cellular coverage is shown in the upper right corner of the touchscreen. Data plan rates may apply.

Uconnect VOICE RECOGNITION — If EQUIPPED

Introduction

Scan this QR code to learn more about Voice Recognition.



Follow the below steps to start using Uconnect Voice Recognition. They provide the key voice commands and tips you need to know to control the vehicle's VR system.

Basic Voice Commands

The following basic voice commands can be given at any point while using the Uconnect system.

Push the VR button  or, for the Uconnect 5/5 NAV, say the vehicle's "Wake Up" word, "Hey, Uconnect". After the beep, say:

- **"Cancel"** to stop a current voice session.
- **"Help"** to hear a list of suggested Voice Commands.
- **"Repeat"** to listen to the system prompts again.


Notice the visual cues that inform you of the VR system's status on the Uconnect system.

NOTE:

If your vehicle is not equipped with Voice Recognition, you may still have voice recognition buttons. These buttons will work with Android Auto™ and Apple CarPlay® by initiating a Siri or Google Assistant voice recognition session. Depending on your device, you may need to press and hold the VR button for one second to begin a voice recognition session.

OFF-ROAD PAGES

Off-Road Pages is an application that provides vehicle status information while operation in off-road conditions. It supplies information relating to the status of the drivetrain, transfer case, coolant/oil gauges, pitch and roll of the vehicle and access to the trailcam system.

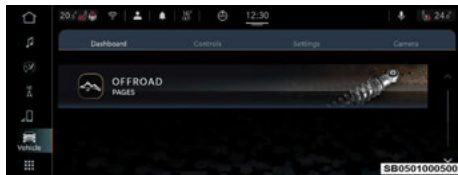

Uconnect 5/5 NAV Off-Road Pages

To access the Off-Road Pages:

1. Press the Vehicle button on the touchscreen and select "Dashboard".
2. Press "Off-Road Pages".
3. Press the desired button on the touchscreen to access that specific option within the Off-Road Pages.

INTERIOR STORAGE AND EQUIPMENT

ELECTRICAL POWER OUTLETS

The vehicle may be equipped with 12 Volt (13 Amp) power outlets that can be used to power cellular phones, small electronics, and other low powered electrical accessories. Power Outlets are located:

- Inside the storage area in the center console.
- In the right rear cargo area.

CAUTION!

Power outlets are designed for accessory plugs only. Do not insert any other object in the power outlets as this will damage the outlet and blow the fuse. Improper use of the power outlet can cause damage not covered by your New Vehicle Limited Warranty.



Center Console Power Outlet

NOTE:

Do not connect any of your devices that have a power rating higher than 180 W to the outlet. Do not use power adapters that do not fit the outlet as this may damage it.

WARNING!

To avoid serious injury or death:

- Only devices designed for use in this type of outlet should be inserted into any 12 Volt outlet.
- Do not touch with wet hands.
- Close the lid when not in use and while driving the vehicle.
- If this outlet is mishandled, it may cause an electric shock and failure.

CAUTION!

- Many accessories that can be plugged in draw power from the vehicle's battery, even when not in use (i.e., cellular phones, etc.). Eventually, if plugged in long enough, the vehicle's battery will discharge sufficiently to degrade battery life and/or prevent the vehicle from starting.
- Accessories that draw higher power (i.e., coolers, vacuum cleaners, lights, etc.) will degrade the battery even more quickly. Only use these intermittently and with greater caution.
- After the use of high power draw accessories, or long periods of the vehicle not being started (with accessories still plugged in), the vehicle must be driven a sufficient length of time to allow the generator to recharge the vehicle's battery.

POWER INVERTERS — If EQUIPPED

There is a 115 V (400 W) maximum inverter outlet located on the back of the center console to convert Direct Current (DC) to Alternating Current (AC).



Power Inverter

NOTE:

400 W is the maximum for the inverter, not each outlet. If two outlets are in use, 400 W is shared among the devices plugged in.

WARNING!

To avoid serious injury or death:

- Do not insert any objects into the receptacles.
- Do not touch with wet hands.
- Close the lid when not in use.
- If this outlet is mishandled, it may cause an electric shock and failure.

USB CONTROL

Your vehicle may be equipped with four USB ports: two in the Instrument Panel and two on the back of the center console.



Front USB Ports

Plugging in a mobile device to a USB port below the Uconnect screen may activate the Android Auto™ or Apple CarPlay® features.

To disable Android Auto™ or Apple CarPlay®, navigate to “Device Manager” in the “Phone/Bluetooth®” section of your Uconnect settings. For further information, refer to “Android Auto™” or “Apple CarPlay®” in your Radio Instruction Manual.

WIRELESS CHARGING PAD — IF EQUIPPED

Scan this QR code to learn more about Wireless Charging.



Your vehicle may be equipped with a wireless charging pad located below the center stack, within the storage compartment. It is designed to easily charge your Qi® enabled mobile phone on the go.



Wireless Charging Pad

Be sure to place your mobile device on the center of the charging pad, with the display

facing upward, and your device not covering the LED.

LED Indicator Status:



No Light: Charging pad is idle or searching for a device, or device may not be compatible with the Qi® standard.



Blue Light: Device is detected and is charging.



Red Light/Flashing: Internal error, or foreign object is detected.



Green Light: Device has completed battery charging (if device is equipped to transmit this information).

Important Notes Regarding This Vehicle's Wireless Charging Pad:

- Do not place the key fob or any other type of metal/magnetized object inside the mobile phone housing or near the wireless charging pad.
- The phone's protective case must be removed when placed on the wireless charging pad.

CAUTION!

The key fob should not be placed on the charging pad or within 6 inches (15 cm) of it. Doing so can cause excessive heat buildup and damage to the fob. Placing the fob in close proximity of the charging pad blocks the fob from being detected by the vehicle and prevents the vehicle from starting.

(Continued)

CAUTION!

To prevent malfunction or burns:

- Do not insert any metallic or magnetic materials (such as Coins, Keys, Metal Cards, Paper Clips) or Key Card between the charging pad and the phone while charging.

(Continued)

CAUTION!

- Do not attach metallic or magnetic materials (such as aluminum sticker) to the device side charging area.

INSTRUMENT CLUSTER

10-INCH INSTRUMENT CLUSTER



Instrument Cluster Descriptions

Scan this QR code to learn more about the instrument cluster.



1. Power Flow Gauge

- Indicates the current flow of power from the battery.

2. Main Menu Area

- Displays Main Menu items and information.

3. Speedometer

- Indicates vehicle speed.

4. Temperature Gauge

- Any reading within the normal range indicates that the engine cooling system is operating satisfactorily.
- The pointer will likely indicate a higher temperature when driving in hot weather, up mountain grades, or when towing a trailer. It should not be allowed to exceed the upper limits of the normal operating range.

WARNING!

A hot engine cooling system is dangerous. You or others could be badly burned by steam or boiling coolant. It is recommended to call an authorized dealer for service if your vehicle overheats.

CAUTION!

Driving with a hot engine cooling system could damage your vehicle. If the temperature gauge reads "H" pull over and stop the vehicle. Idle the vehicle with the air conditioner turned off until the pointer drops back into the normal range. If the pointer remains on the "H", turn the engine off immediately and call an authorized dealer for service.

5. Fuel Gauge


- The pointer shows the level of fuel in the fuel tank when the Start button is in the ON/RUN position.
-  The fuel pump symbol points to the side of the vehicle where the fuel door is located.

NOTE:

Some telltales will illuminate for a bulb check when the vehicle is first turned on.

LOCATION AND CONTROLS

The instrument cluster display features an interactive display which is located in the instrument cluster.

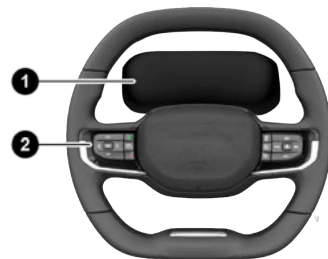


SB0301000049

Instrument Cluster Display And Controls Location

- 1 — Instrument Cluster Display Screen
2 — Instrument Cluster Display Controls

The system allows the driver to select information by pushing the following buttons mounted on the steering wheel:

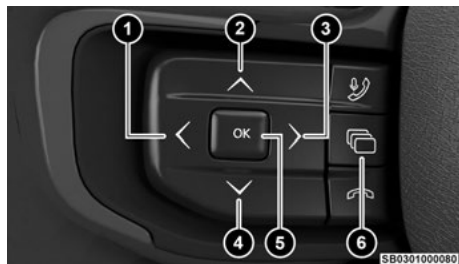

Instrument Cluster Display Controls

- 1 — Left Arrow Button
- 2 — Up Arrow Button
- 3 — Right Arrow Button
- 4 — Down Arrow Button
- 5 — OK Button
- 6 — Layout Button

Left And Right Arrow Buttons:

Using the **left** ◀ or **right** ▶ arrow button allows you to cycle through the Main Menu items. Changes the Main Screen area and Menu Title area.

Up And Down Arrow Buttons:

Using the **up** ▲ or **down** ▼ arrow button allows you to cycle through the submenu items of the Main Menu item.

NOTE:

- Holding the **up** ▲ or **down** ▼ or **left** ◀ or **right** ▶ arrow button will continuously loop through the currently selected menu or options presented on the screen.
- Upon returning to a Main Menu, the last submenu screen viewed within that Main Menu will be displayed.

OK Button:

For Digital Speedometer in the Driver Info menu:

- Pushing the **OK** button changes units (mph or km/h).

For Screen Setup in the Settings menu:

- **OK** button allows user to enter menu and submenus.
- Within each submenu layer, the **up** ▲ and **down** ▼ arrow buttons will allow the user to select the item of interest.
- Pushing the **OK** button makes the selection and a confirmation screen will appear (returning the user to the first page of the submenu).

Layout Button:

Press the Layout button on the steering wheel to access cluster layout options. Selected layout will continue to be displayed at next vehicle start.

- Classic: default layout with analog circular gauges.
- Modern: digital look with reduced information and no analog circular gauges.
- Center: centered speedometer and no main menu bar.
- Navigation: navigation map and control in cluster, no main menu bar.

Storage Mode — If Equipped

The Storage Mode helps to preserve the battery life. It may disable some features during vehicle storing. On the Battery Voltage screen in Vehicle Information, hold the OK button and follow the on-screen messages. To exit Storage Mode, start the vehicle.

WARNING!

- The Rear Seat Reminder Alert is not available when the vehicle is in Storage Mode.

(Continued)

WARNING!

- Make sure to check the rear seats for children and animals before engaging Storage Mode.



Storage Mode Activation Location

Scan this QR code to learn more about the Storage Mode.



WARNING LIGHTS AND MESSAGES

Warning lights, indicators, and messages appear to signify various vehicle conditions. See the Quick Start Guide or Owner's Manual for examples and detailed descriptions. Some

telltale are optional according to vehicle equipment.

INTERIOR COMFORT SETTINGS

CLIMATE CONTROLS

Scan this QR code to learn more about Climate Controls.



The Climate Control system allows you to regulate the temperature, air flow, and direction of air circulating throughout the vehicle. The controls are located on the touchscreen and on the instrument panel below the radio.



Uconnect 5 NAV With 12.3-Inch Display Temperature Controls

AUTOMATIC CLIMATE CONTROL DESCRIPTIONS AND FUNCTIONS

Max A/C Button



Press and release the MAX A/C button on the touchscreen to automatically turn the air conditioning on to the coldest temperature setting and the highest blower speed.

A/C Button



Push the button to engage the Air Conditioning (A/C) system.

Recirculation Button



Push the button to change the system between Recirculation mode and outside air mode.

Auto/Auto Eco Button



Press and release the Auto/AutoEco button to toggle between Auto and AutoEco. This activates the comfort settings to automatically control the front driver and passenger area's comfort by adjusting distribution and the amount of airflow. When the AutoEco button is selected, the climate system will be controlled to optimize for energy savings, but comfort may be compromised.

Rear Defrost Button

Push the button to turn on the rear window defroster and heated mirrors.

CAUTION!

Failure to follow these cautions can cause damage to the heating elements:

- Use care when washing the inside of the rear window. Do not use abrasive window cleaners on the interior surface of the

(Continued)

CAUTION!

window. Use a soft cloth and a mild washing solution, wiping parallel to the heating elements. Labels can be peeled off after soaking with warm water.

- Do not use scrapers, sharp instruments, or abrasive window cleaners on the interior surface of the window.
- Keep all objects a safe distance from the window.

Front Defrost Button

Push the button to change the current airflow setting to Defrost mode.

Driver And Passenger Temperature Switches

Press and slide the temperature bar towards the red arrow button on the touchscreen for warmer temperature settings. Press and slide the temperature bar towards the blue arrow button on the touchscreen for cooler temperature settings.

SYNC Button

Press the SYNC button on the touchscreen to synchronize the driver and front passenger temperature settings.

Blower Control

Use the blower bar on the touchscreen to increase or decrease the amount of air forced through the climate control system.

Mode Control

Select the Mode by pressing one of the Mode buttons on the touchscreen to change the airflow distribution mode.

Climate Control OFF Button

Press the button to turn the climate control system off.

AUTOMATIC TEMPERATURE CONTROL (ATC)

Automatic Operation

1. Push the AUTO button within the climate screen on the touchscreen.
2. Select the desired temperature on the touchscreen. The system then achieves and automatically maintains that comfort level.

NOTE:

There will be no need for you to move the temperature settings for cold or hot vehicles. The system automatically adjusts the temperature, mode, and blower speed to provide comfort as quickly as possible.

CLIMATE VOICE RECOGNITION

Push the VR/Phone button . After the beep, say one of the following commands:

- "Set the driver temperature to [Desired Temperature] degrees"
- "Set the passenger temperature to [Desired Temperature] degrees"

FRONT HEATED SEATS



Press the heated seat button to cycle through HI, MED, LO, and off settings.

WARNING!

- Persons who are unable to feel pain to the skin because of advanced age, chronic illness, diabetes, spinal cord injury, medication, alcohol use, exhaustion or other physical condition must exercise care when using the seat heater. It may cause burns even at low temperatures, especially if used for long periods of time.
- Do not place anything on the seat or seatback that insulates against heat, such as a blanket or cushion. This may cause the seat heater to overheat. Sitting in a seat that has been overheated could cause

(Continued)

WARNING!

serious burns due to the increased surface temperature of the seat.

FRONT VENTILATED SEATS



Press the ventilated seat button to cycle through HI, MED, LO, and off settings.

POWER ADJUSTMENT FRONT SEATS

Scan this QR code to learn more about Power Seats.



Your vehicle is equipped with 8-way power driver and front passenger seats, or 8-way power driver and 6-way power passenger seats. The power seat switches are located on the outboard side of the seat. There are two switches that control the movement of the seat cushion and the seatback.



Power Seat Switches

- 1 — Cushion Seat Switch
- 2 — Seatback and Bolster Adjustment Switch
- 3 — Power Lumbar Switch

WARNING!

Do not ride with the seatback reclined so that the shoulder belt is no longer resting against your chest. In a collision you could slide under the seat belt, which could result in serious injury or death.

HEAD RESTRAINTS

Head restraints are designed to reduce the risk of injury by restricting head movement in the event of a rear impact. Head restraints should be adjusted so that the top of the head restraint is located above the top of your ear.

WARNING!

- All occupants, including the driver, should not operate a vehicle or sit in a vehicle's seat until the head restraints are placed in their proper positions in order to minimize the risk of neck injury in the event of a crash.
- Head restraints should never be adjusted while the vehicle is in motion. Driving a vehicle with the head restraints improperly adjusted or removed could cause serious injury or death in the event of a collision.

Front Head Restraints

Your vehicle is equipped with front two-way driver and passenger head restraints.

To raise the head restraint, push the adjustment button, located on the left side of the head restraint, and pull upward on the head restraint. To lower the head restraint, push the adjustment button, and push downward on the head restraint.



Head Restraint Adjustment Button

NOTE:

The head restraints should only be removed by qualified technicians, for service purposes only. If either of the head restraints require removal, see an authorized dealer.

Rear Head Restraints


The rear head restraints have two positions: up or down. When the center seat is being occupied, the head restraint should be in the raised position. When there is no occupant in the center seat, the head restraint can be lowered for maximum visibility for the driver.

To raise the head restraint, pull upward on the head restraint. To lower the head restraint, push the adjustment button, located at the base of

the head restraint, and push downward on the head restraint.



Outboard Head Restraint Adjustment Button

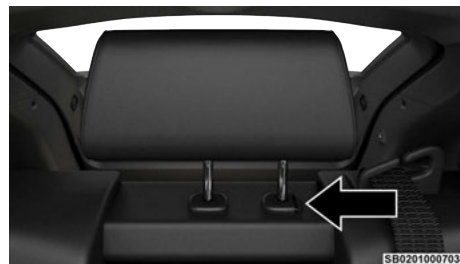

Center Head Restraint Adjustment Button

NOTE:

The head restraints should only be removed by qualified technicians, for service purposes only. If either of the head restraints require removal, see an authorized dealer.

WARNING!

ALL the head restraints MUST be reinstalled in the vehicle to properly protect the occupants.

EXTERIOR LIGHTS

HEADLIGHT SWITCH

The headlight switch is located on the left side of the instrument panel, next to the steering wheel. The headlight switch controls the operation of the headlights, parking lights, instrument panel lights, and fog lights (if equipped).



SB0201001159

Headlight Switch

- 1 — Headlight On/Off Button
- 2 — AUTO Headlight Control
- 3 — Parking Lights
- 4 — Front Fog Light Control
- 5 — Instrument Panel Dimmer Control

NOTE:

Vehicles sold in Canada have headlights that will be deactivated when the headlight switch is placed in the parking lights position. However, the Daytime Running Lights (DRLs) will be activated along with the front and rear marker lights. The DRLs may be deactivated when the parking brake is engaged, a turn signal is activated, or when front fog lights are enabled.

To turn on the headlights, press the Headlight On/Off button. When the headlight switch is on, the parking lights, taillights, license plate light

and instrument panel lights are also turned on. To turn off the headlights, press the Headlight On/Off button a second time.

NOTE:

- Your vehicle is equipped with plastic headlight and fog light (if equipped) lenses that are lighter and less susceptible to stone breakage than glass lights. Plastic is not as scratch resistant as glass and therefore different lens cleaning procedures must be followed.
- To minimize the possibility of scratching the lenses and reducing light output, avoid wiping with a dry cloth. To remove road dirt, wash with a mild soap solution followed by rinsing.

CAUTION!

Do not use abrasive cleaning components, solvents, steel wool or other abrasive materials to clean the lenses.

AUTOMATIC HIGH BEAMS — If EQUIPPED

Did you know your vehicle can automatically switch from high beams to low beams until an approaching vehicle is out of view?

To turn on this feature:

1. Within the Uconnect system, set “Auto Dim High Beams” to “ON”.

2. Push the AUTO button on the headlight switch.

AUTOMATIC HEADLIGHTS

With the vehicle power on, make sure the AUTO button is selected on your headlight switch; your vehicle will detect how bright it is outside and turn the headlights on/off as necessary.

HEADLIGHTS ON AUTOMATICALLY WITH WIPERS

If your vehicle is equipped with Automatic Headlights, it also has this customer-programmable feature. When your headlights are in the automatic mode and the vehicle is running, they will automatically turn on when the wiper system is on. This feature is programmable through the Uconnect system ➡ page 11.

NOTE:


When your headlights come on during the daytime, the vehicle will monitor outside brightness and decide if the instrument panel needs to be dimmed or not.

WINDSHIELD WIPERS AND WASHERS

Scan this QR code to learn more about wiper operation.



The windshield wiper/washer lever is located on the multifunction lever on the left side of the steering column. The front wipers are operated by rotating a switch, located on the end of the lever.

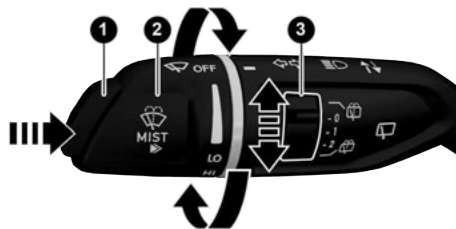

SB0201001162

Windshield Wiper Operation

- 1 — Tap For Mist, Hold For Washer
- 2 — Rotate For Front Wiper Operation
- 3 — Rotate For Rear Wiper and Washer Operation

WINDSHIELD WIPER OPERATION

Front Wipers

Rotate the end of the lever upward, to the first detent past the intermittent settings for low-speed wiper operation.

Rotate the end of the lever upward to the second detent past the intermittent settings for high-speed wiper operation.

Windshield Washers

To use the windshield washer, push the washer knob, located on the end of the multifunction lever, inward and hold. Washer fluid will be sprayed and the wipers will operate for two to three cycles after the washer knob is released.

Rear Window Wiper/Washer

A rotary switch on the center portion of the windshield wiper/washer lever controls the operation of the rear wiper/washer function. Rotate the switch downward to the first detent position for intermittent operation and to the second detent for continuous rear wiper operation.

Rotate the rear washer control to either the intermittent or constant position to activate the rear washer. The washer pump and wiper will continue to operate as long as the lever is held.

Mist

Tap the washer knob inward briefly and release. The wipers will cycle one time and automatically shut off.

NOTE:

The mist feature does not activate the washer pump; therefore, no washer fluid will be sprayed on the windshield. The washer function must be used in order to spray the windshield with washer fluid.

WARNING!

Sudden loss of visibility through the windshield could lead to a collision. You might not see other vehicles or other obstacles. To avoid sudden icing of the windshield during freezing weather, warm the windshield with the defroster before and during windshield washer use.

CAUTION!

Always remove any buildup of snow that prevents the windshield wiper blades from

(Continued)

CAUTION!

returning to the parked position. If the windshield wiper switch is turned off, and the blades cannot return to the parked position, damage to the wiper motor may occur.

RAIN SENSING WIPERS — IF EQUIPPED

This feature senses rain or snowfall on the windshield and automatically activates the wipers. Rotate the end of the windshield wiper lever to one of the four detent positions to activate this feature.

NOTE:

- The Rain Sensing feature will not operate when the wiper switch is in the low or high position.
- The Rain Sensing feature can be turned on and off through the Uconnect system.

UNIVERSAL GARAGE DOOR OPENER (HOMELINK®)

Scan this QR code to learn more about HomeLink® (Garage Door Opener).



The HomeLink® buttons are located in the overhead console or sun visor and contain three optional HomeLink® channels.



HomeLink® Buttons And Indicator Light

- **TO ERASE ALL SET CHANNELS:** Place the vehicle in the ACC or ON/RUN position. Push and hold the two outside HomeLink® buttons

(1 and 3) for up to 10 seconds, or until the HomeLink® indicator light flashes rapidly.

- **ROLLING OR NON-ROLLING?** Check your garage door opener motor in your garage for a "Learn", "Program", "Smart", or "Train" button by the hanging antenna. If you have one of these, you have a Rolling Code garage door opener.

1. Ensure the vehicle is parked outside, facing the garage door, and the ignition is in the ACC or ON/RUN position before programming.
2. Hold the hand-held garage door transmitter 1-3 inches from the HomeLink® button you want to program in the vehicle while keeping the HomeLink® indicator light in view. Press and release the HomeLink® button you wish to program.
3. Press and hold the button on the hand-held transmitter when the HomeLink® LED begins flashing orange slowly.
4. Once the LED changes from slow flashing orange to rapid flashing green, release the button for 3 seconds. Repeat this sequence slowly up to three times to complete the programming.

- If the LED indicator turns solid green, or blinks rapidly and the garage door operates when the HomeLink button is

pressed and released, programming is complete.

- If the LED flashes green rapidly but the device does not operate, continue to the next steps to complete the rolling code synchronization.
5. **For Rolling Code** garage door openers only, firmly push and release the "Learn", "Program", "Smart", or "Train" button on your garage door opener motor in your garage, then return to the vehicle and push and hold the programmed HomeLink® button for two seconds (holding for three seconds each time), then release. Repeat this sequence up to three times, or until the garage door operates.

WARNING!

- Your motorized door or gate will open and close while you are programming the universal transmitter. Do not program the transmitter if people or pets are in the path of the door or gate.
- Do not run your vehicle in a closed garage or confined area while programming the transmitter. Exhaust gas from your vehicle contains carbon monoxide which is odorless and colorless. Carbon monoxide is poisonous when inhaled and can cause you and others to be severely injured or killed.

If you have any problems, or require additional assistance, please call toll-free 1-800-355-3515 or visit HomeLink.com.

TROUBLESHOOTING TIPS

If you are having trouble programming HomeLink®, here are some of the most common solutions:

- Replace the battery in the garage door opener hand-held transmitter.
- Push the LEARN button on the garage door opener to complete the training for a rolling code.
- Did you unplug the device for programming and remember to plug it back in?

If you have any problems, or require assistance, please call toll-free 1-800-355-3515 or visit HomeLink.com.

CRUISE CONTROL SYSTEM

Scan this QR code to learn more about Adaptive Cruise Control.



Adaptive Cruise Control (ACC) will adjust the vehicle speed up to the preset speed to maintain a distance with the vehicle ahead.

ADAPTIVE CRUISE CONTROL (ACC)

Adaptive Cruise Control (ACC) increases the driving convenience provided by Cruise Control while traveling. However, it is not a safety system and not designed to prevent collisions.

ACC will allow you to keep Cruise Control engaged in light to moderate traffic conditions without the constant need to reset your Cruise Control. ACC utilizes a radar sensor and a forward facing camera designed to detect a vehicle directly ahead of you.

NOTE:

- If the ACC sensor detects a vehicle ahead, ACC will apply limited braking or acceleration (not to exceed the original set speed) automatically to maintain a preset following distance, while matching the speed of the vehicle ahead.
- Any chassis/suspension or tire size modifications to the vehicle will affect the performance of the Adaptive Cruise Control and Forward Collision Warning system.

WARNING!

- Adaptive Cruise Control (ACC) is a convenience system. It is not a substitute for active driver involvement. It is always the driver's responsibility to be attentive

(Continued)

WARNING!

of road, traffic, and weather conditions, vehicle speed, distance to the vehicle ahead and, most importantly, brake operation to ensure safe operation of the vehicle under all road conditions. Your complete attention is always required while driving to maintain safe control of your vehicle. Failure to follow these warnings can result in a collision and death or serious personal injury.

- The ACC system:
 - Does not react to pedestrians, oncoming vehicles, and stationary objects (e.g., a stopped vehicle in a traffic jam or a disabled vehicle).
 - Cannot take street, traffic, and weather conditions into account, and may be limited upon adverse sight distance conditions.
 - Does not always fully recognize complex driving conditions, which can result in wrong or missing distance warnings.
 - Will bring the vehicle to a complete stop and hold the vehicle in the stop position for approximately 10 minutes when following a vehicle ahead. If the vehicle ahead does not start moving within 10 minutes, the parking brake will

(Continued)

WARNING!

be activated, and the ACC system will be canceled.

- You should not utilize the ACC system:
 - When driving in fog, heavy rain, heavy snow, sleet, heavy traffic, and complex driving situations (i.e., in highway construction zones).
 - When entering a turn lane or highway off-ramp; when driving on roads that are winding, icy, snow-covered, slippery, or have steep uphill or downhill slopes.
 - When towing a trailer up or down steep slopes.
 - When circumstances do not allow safe driving at a constant speed.

Adaptive Cruise Control (ACC) Operation

The buttons on the right side of the steering wheel operate the ACC system.



Adaptive Cruise Control Buttons

- 1 — Distance Increase
- 2 — Adaptive Cruise Control On/Off
- 3 — CANCEL/Cancel
- 4 — Distance Decrease
- 5 — SET (+)/Accel
- 6 — Advanced Driving Assist (If Equipped)
- 7 — RES/Resume
- 8 — SET (-)/Decel

To Activate/Deactivate

Push and release the Adaptive Cruise Control (ACC) on/off button. The ACC menu in the instrument cluster displays “ACC Ready.”

To turn the system off, push and release the Adaptive Cruise Control (ACC) on/off button again. At this time, the system will turn off and the instrument cluster displays “Adaptive Cruise Control (ACC) Off.”

WARNING!

Leaving the Adaptive Cruise Control (ACC) system on when not in use is dangerous. You could accidentally set the system or cause it to go faster than you want. You could lose control and have a collision. Always leave the system off when you are not using it.

To Set A Desired Speed

When the vehicle reaches the speed desired, push the SET (+) button or the SET (-) button and release. The instrument cluster display will show the set speed.

To Resume

If there is a set speed in memory, push the RES (resume) button and then remove your foot from the accelerator pedal. The instrument cluster display will display the last set speed.

WARNING!

The Resume function should only be used if traffic and road conditions permit. Resuming a set speed that is too high or too low for prevailing traffic and road conditions could cause the vehicle to accelerate or decelerate too sharply for safe operation. Failure to follow these warnings can result in a collision and death or serious personal injury.

To Vary The Speed Setting

After setting a speed, you can increase the set speed by pushing the SET (+) button, or decrease speed by pushing the SET (-) button.

Setting The Following Distance In ACC

The specified following distance for ACC can be set by varying the distance setting between three bars in the instrument cluster display.

Press the Distance Increase button to increase the distance the distance of the vehicle in front, or press the Distance Decrease button to decrease the distance of the vehicle in front.

PARKING ASSISTANCE

PARKSENSE FRONT/REAR PARK ASSIST SYSTEM

Scan this QR code to learn more about the ParkSense system.



Enable and disable the ParkSense system using the ParkSense switch, located in front of the center console, below the climate controls.



ParkSense Switch

The ParkSense Park Assist system provides visual and audible indications of the distance between the rear and the front fascia/bumper and a detected obstacle when backing up or moving forward (e.g. during a parking maneuver). The vehicle brakes may be automatically applied and released when performing a reverse parking maneuver if the system detects a possible collision with an obstacle.

NOTE:

- The driver can disable the automatic braking function by turning ParkSense off via the ParkSense switch. The driver can also override automatic braking by changing the gear or by pressing the accelerator over 90% of its capacity during the braking event.

- Automatic brakes will not be available if there is a faulted condition detected with the ParkSense Park Assist system or the Braking System Module.
- The automatic braking function may only be applied if the vehicle deceleration is not enough to avoid colliding with a detected obstacle.
- The automatic braking function may not be applied fast enough for obstacles that move toward the rear of the vehicle from the left and/or right sides.
- The automatic braking function can be enabled/disabled from the Customer Programmable Features section of the Uconnect system.
- ParkSense will retain its last known configuration state for the automatic braking function through key cycles.

The automatic braking function is intended to assist the driver in avoiding possible collisions with detected obstacles when backing up in REVERSE gear.

NOTE:

- The system is designed to assist the driver and not to substitute the driver.
- The driver must stay in full control of the vehicle's acceleration and braking and is responsible for the vehicle's movements.

ParkSense will retain the last system state (enabled or disabled) from the last key cycle when the Start button is changed to the ON/RUN position.

ParkSense can be active only when the gear selector is in REVERSE or DRIVE. If ParkSense is enabled at one of these gear selector positions, the system will remain active until the vehicle speed is increased to approximately 7 mph (11 km/h) or above. The system will become active again if the vehicle speed is decreased to less than approximately 6 mph (9 km/h). A display warning will appear in the instrument cluster display if the vehicle is in REVERSE and the speed exceeds 7 mph (11 km/h).

ELECTRIC PARK BRAKE (EPB)

Scan this QR code to learn more about Electric Park Brake (EPB).



Your vehicle is equipped with an EPB that offers simple operation, and some additional features that make the parking brake more convenient and useful.

The parking brake is primarily intended to prevent the vehicle from rolling while parked. Before leaving the vehicle, make sure that the parking brake is applied. Also, be certain to leave the transmission in PARK.

You can engage the parking brake in two ways:

- Manually, by applying the EPB switch.
- Automatically, by enabling the Auto Park Brake feature in the customer programmable features section of the Uconnect settings.

The EPB switch is located on the instrument panel to the left of the steering wheel.



Electric Park Brake Switch

To apply the parking brake manually, pull up on the switch momentarily. You may hear a sound from the back of the vehicle while the parking brake engages. Once the parking brake

is fully engaged, the Brake Warning Light in the instrument cluster and an indicator on the switch will illuminate. If your foot is on the brake pedal while you apply the parking brake, you may notice a small amount of brake pedal movement. The parking brake can be applied even when the power button is OFF but the Brake Warning Light will not illuminate, however, it can only be released when the power button is in the ON/RUN position.

NOTE:

The EPB Warning Light will illuminate if the EPB switch is held for longer than 20 seconds in either the released or applied position. The light will extinguish upon releasing the switch.

If the Auto Park Brake feature is enabled, the parking brake will automatically engage whenever the transmission is placed in PARK. If your foot is on the brake pedal, you may notice a small amount of brake pedal movement while the parking brake is engaging.

The parking brake will release automatically when the power button is ON, the gear box is in DRIVE or REVERSE, the driver's seat belt is buckled, and an attempt is made to drive away.

To release the parking brake manually, the power button must be in the ON/RUN position. Put your foot on the brake pedal, then push the EPB switch down momentarily. You may hear a sound from the back of the vehicle while the parking

brake disengages. You may also notice a small amount of movement in the brake pedal. Once the parking brake is fully disengaged, the Brake Warning Light in the instrument cluster and the LED indicator on the switch will extinguish.

NOTE:

When parking on a hill, it is important to turn the front wheels toward the curb on a downhill grade and away from the curb on an uphill grade. Apply the parking brake before placing the gear selector in PARK, otherwise the load on the gear box locking mechanism may make it difficult to move the gear selector out of PARK.

WARNING!

- Never use the PARK position as a substitute for the parking brake. Always apply the parking brake fully when parked to guard against vehicle movement and possible injury or damage.
- When exiting the vehicle, always turn the ignition off, secure the key fob, and lock your vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to

(Continued)

WARNING!

touch the parking brake, brake pedal or the gear selector.

- Do not leave the key fob in or near the vehicle, or in a location accessible to children, and do not leave a vehicle equipped with Keyless Enter 'n Go™ in the ON/RUN position. A child could operate power windows, other controls, or move the vehicle.
- Be sure the parking brake is fully disengaged before driving; failure to do so can lead to a brake failure and a collision.
- Always fully apply the parking brake when leaving your vehicle, or it may roll and cause damage or injury. Also be certain to leave the transmission in PARK. Failure to do so may allow the vehicle to roll and cause damage or injury.

CAUTION!

If the Brake System Warning Light remains on with the parking brake released, a brake system malfunction is indicated. Have the brake system serviced by an authorized dealer immediately.

If exceptional circumstances should make it necessary to engage the parking brake while the vehicle is in motion, maintain upward pressure

on the EPB switch for as long as engagement is desired. The Brake Warning Light will illuminate, and a continuous chime will sound. The rear stop lamps will also be illuminated automatically while the vehicle remains in motion.

To disengage the parking brake while the vehicle is in motion, release the switch. If the vehicle is brought to a complete stop using the parking brake, when the vehicle reaches approximately 3 mph (5 km/h), the parking brake will remain engaged.

WARNING!

Driving the vehicle with the parking brake engaged, or repeated use of the parking brake to slow the vehicle, may cause serious damage to the brake system. Be sure the parking brake is fully disengaged before driving; failure to do so can lead to brake failure and a collision.

In the unlikely event of a malfunction of the EPB system, a yellow EPB Warning Light will illuminate. This may be accompanied by the Brake Warning Light flashing. In this event, urgent service of the EPB system is required. Do not rely on the parking brake to hold the vehicle stationary.

EXTERIOR OVERVIEW



SB0201001549

1 — Exterior Camera ➞ page 34

2 — Fuel Door

3 — Liftgate Release Button ➞ page 37

EXTERIOR CAMERA VIEWS

SURROUND VIEW CAMERA SYSTEM — IF EQUIPPED



Press this button under the Controls menu on the touchscreen to enter the Surround View Camera menu in the Uconnect system.

When the vehicle is shifted into REVERSE, the Rear View or Top View is the default view of the system.

WARNING!

Drivers must be careful when backing up even when using the Surround View Camera. Always check carefully behind your vehicle, and be sure to check for pedestrians, animals, other vehicles, obstructions, or blind spots before backing up. You are responsible for the safety of your surroundings and must continue to pay attention while backing up. Failure to do so can result in serious injury or death.

CAUTION!

- To avoid vehicle damage, Surround View should only be used as a parking aid. The

(Continued)

CAUTION!

Surround View camera is unable to view every obstacle or object in your drive path.

- To avoid vehicle damage, the vehicle must be driven slowly when using Surround View to be able to stop in time when an obstacle is seen. It is recommended that the driver look frequently over his/her shoulder when using Surround View.

MANUAL DOOR LATCHING

Scan this QR code to learn more about Manual Door Latching.



In the event of a power failure or depleted key fob battery, the front driver's door can be manually opened and manually closed.

1. To manually unlatch the driver door, first remove the cover plate over the latch release cylinder on the door handle. Use the emergency key from the key fob to pry off the cover, as shown in the following example:



Door Latch Release Cover

2. Insert the emergency key from the key fob into the latch release and turn it toward the rear of the vehicle. This will unlatch the door, allowing you to access the vehicle.



Latch Release

3. Replace the latch release cover by first inserting the tab on the right (1), then gently pushing in the tab on the left (2) until it clicks into place.



Replacing The Cover

Latching The Door

All doors can be manually latched by turning the latch cylinder on the inside door frame. Using the emergency key from the key fob, turn the latch and then shut the door.



Door Closing Manual Latch

WARNING!

- For personal security and safety in the event of a collision, lock the vehicle doors before you drive as well as when you park and leave the vehicle.
- When exiting the vehicle, always make sure the power button is in the OFF position, remove the key fob from the vehicle and lock your vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to

(Continued)

WARNING!

touch the parking brake, brake pedal or the gear selector.

- Do not leave the key fob in or near the vehicle, or in a location accessible to children, and do not leave the Keyless Enter 'n Go™ Propulsion System in the ON/RUN position. A child could operate power windows, other controls, or move the vehicle.

HOOD

OPENING THE HOOD

WARNING!

Always place the ignition in the OFF position before opening the hood. If the ignition is in the RUN position and the Propulsion System is active when the hood is opened, the engine could automatically start, and persons not clear of the vehicle could be injured by the engine's moving parts.

The Hood Release button is located on the instrument panel to the left of the steering wheel. Press the button once to open the hood.



Hood Release Button

NOTE:

- Vehicle must be at a stop and the gear selector must be in PARK.
- While lifting the hood, use both hands.
- Before lifting the hood, check that the wiper arms are not in motion and not in the lifted position.

Emergency Release Lever

The hood may also be manually released in the event of a depleted battery. The mechanical release lever is located under the drivers side of the instrument panel.



Emergency Hood Release Location

- 1 — Lock
- 2 — Hood Release Pull Strap

To open, unlock the emergency release door by turning the lock mechanism a quarter turn with a small tool such as a coin. Then pull the emergency release strap two times to release the hood.

Be sure to replace the strap and close lid by securing the lock mechanism once the mechanical release is no longer needed.

CLOSING THE HOOD

Be careful when lowering the hood as to not cause damage. Close the hood by following these steps:



Hand Placement Zone

1. In one continuous motion, gently lower the hood until it is resting on the latch mechanism.
2. Place two hands on center of hood, above the latch mechanism. Press down firmly until hood is latched.
3. Confirm hood is latched in place.

CAUTION!

- Do not drop or forcefully close hood. Doing so can cause damage to the hood.
- Only use force on the areas highlighted in the image above. Pressing down on areas outside of this area can cause damage.

WARNING!

Be sure the hood is fully latched before driving your vehicle. If the hood is not fully latched, it could open when the vehicle is in motion and block your vision. Failure to follow this warning could result in serious injury or death.

LIFTGATE

To UNLOCK/OPEN THE LIFTGATE

The power liftgate may be opened by pushing the liftgate button on the key fob, pushing the liftgate button on the overhead console, or by pulling the electronic release handle.

Push the liftgate button on the key fob twice within five seconds to open the power liftgate. Once the liftgate is open, pushing the button twice within five seconds a second time will close the liftgate.



SB0201001305

Electronic Liftgate Release Handle

The key fob and the overhead console button will release the liftgate when the liftgate is locked. The outside handle requires the liftgate to be unlocked. If the vehicle is equipped with Passive Entry, pulling the electronic liftgate release handle will unlock and release the liftgate, with a valid Passive Entry key fob within 5 ft (1.5 m) of the liftgate.

NOTE:

- When you pull the electronic liftgate release handle, either only the liftgate will unlock, or all the doors and the liftgate will unlock, depending on the selected setting in the Uconnect system.
- Use the power door lock switch on either front door trim panel or the key fob to lock and unlock the liftgate.

- The driver's door lock cylinder will not lock and unlock the liftgate.
- The vehicle must be in PARK or NEUTRAL and vehicle speed must be below 5 mph (8kph) to utilize the liftgate open/close button.

To LOCK/CLOSE THE LIFTGATE

There are several different ways to close the liftgate:

- Manually (grab the liftgate closing handle and pull downward)
- Key fob
- Hands-free (if equipped)
- Liftgate close button in the cargo area

With a valid Passive Entry key fob within 5 ft (1.5 m) of the liftgate, pushing the Passive Entry button, located to the left of the electronic liftgate release handle, will lock the vehicle only.

If the liftgate is fully open, the liftgate can be closed by pushing the liftgate close button located in the cargo area on the left rear trim panel, near the liftgate opening. If the liftgate is in motion, pushing the liftgate close button a second time will reverse the liftgate operation.



Liftgate Close Button

HIGH VOLTAGE BATTERY

Your vehicle is equipped with a Lithium-ion high voltage battery that is used to power the electric powertrain systems. The high voltage battery is located underneath the vehicle.

If your vehicle requires high voltage battery service, see an authorized dealer.

WARNING!

- Never try to remove the high voltage battery service disconnect. The high voltage battery service disconnect is used when your vehicle requires service by a qualified technician at an authorized dealership.

(Continued)

WARNING!

Failure to follow this warning can result in electrical shock, toxic emissions, fire, and other hazards which can cause death or serious injury including severe burns, respiratory injuries, and blindness.

- The high voltage battery and battery case have no parts that you or an unqualified technician can service. The high voltage system can be hot during and after starting and when the vehicle is shut off or charging. Under no circumstances should you or an unqualified technician open, disassemble, penetrate, or tamper with the high voltage battery, battery case, their cables, or connectors. High Voltage wires, connectors, and wire coverings are identified by their distinct orange color. Damage to these components can result in electrical shock, toxic emissions, fire, and other hazards which can cause death or serious injury including severe burns, respiratory injuries, and blindness. You should take the vehicle to an authorized dealership for any service or maintenance on these high voltage components.

Disposal of the High Voltage Battery

Your vehicle's high voltage battery is designed to last the life of your vehicle.

WARNING!

Your vehicle contains a sealed Lithium-ion high voltage battery. If the battery is disposed of improperly, there is a risk of electrical shock and toxic emissions which can cause severe burns, respiratory injuries, fires, and other hazards resulting in serious injury or death. Bring the vehicle to your dealership when the life of the battery is exhausted.

General Information

The vehicle is also equipped with a Battery Management system that is designed to maximize the life expectancy of the high voltage battery, maximize driving range, and ensure safe operation!

NOTE:

During start up and shut down, a clicking noise may be heard from within the vehicle. When the vehicle is preparing to start, the contactors inside the battery are closed to make the stored electricity inside available for vehicle use. After the vehicle is shut down, the contactors open to electrically isolate the battery from other vehicle systems. The clicking noise is the sound of these contactors as they open and close during normal operation.

WARNING!

In the event of a collision:

- If your vehicle is still drivable, pull off the road and place the Gear Box in the PARK position, apply the parking brake, and turn the vehicle off.
- Check your vehicle to see if there are exposed high-voltage parts or cables. Beware of any exposed high-voltage parts or cables. To avoid electrical shock which can result in serious injury or death, never touch wiring, connectors, and other high-voltage parts, such as the inverter unit and the Lithium-ion battery. High Voltage wires, connectors, and wire coverings are identified by their distinct orange color. To avoid electrical shock which can result in serious injury or death, never touch wiring, connectors, and other high-voltage parts, such as the inverter unit and the Lithium-ion battery.
- If your vehicle was not in a collision but the undercarriage received an impact from road debris or other source while driving, have the Lithium-ion battery inspected by an authorized dealer.
- Leaks or damage to the Lithium-ion battery may result in a fire and toxic emissions

(Continued)

WARNING!

which can cause severe burns, respiratory injuries, and other serious injuries or death. If you discover these leaks, contact emergency services immediately. Since the fluid leak may be Lithium Manganate from the Lithium-ion battery, never touch the fluid leak inside or outside of the vehicle. If the fluid contacts your skin or eyes, wash these areas immediately with a large amount of water and obtain immediate medical attention to help avoid serious injury.

- If a fire occurs in your vehicle, leave the vehicle as soon as possible and contact emergency services. Only use a type ABC, BC, or C fire extinguisher that is meant for use on electrical fires. Using a small amount of water, or the incorrect fire extinguisher can result in serious injury or death from electrical shock.
- If you are not able to safely assess the vehicle due to vehicle damage, do not touch the vehicle. Leave the vehicle and contact emergency services. Advise first responders that this is a electric vehicle.
- In the event of an accident that requires bodywork, refer to an authorized dealership.

HYBRID ELECTRIC VEHICLE APP

Within the Uconnect system is the Hybrid Vehicle App that allows you to see your vehicle's power flow and understand your driving history. To access this App, press the Apps or Vehicle button on the main menu bar of the radio's touchscreen, and locate the Hybrid Electric Vehicle App.

Power Flow

The Power Flow screen shows the current power readings for all of the following:

- Motors - Shows the amount of power (in kW) the vehicle has remaining.
- Climate - Shows the amount of power (in kW) the Climate Control system is using to maintain the current interior temperature.

Power Flow paths are indicated by the direction of the arrows on the touchscreen.

Driving History

The Driving History screen shows the miles (km) driven in kWh (battery powered) at the current time compared to a weekly average.

ASSIST AND SOS SYSTEM— IF EQUIPPED



Assist And SOS Buttons

- 1 — ASSIST Button
- 2 — SOS Button

If equipped, the overhead console contains an ASSIST and SOS button.

WARNING!

ALWAYS obey traffic laws and pay attention to the road. ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the features and applications in this vehicle. Only use the features and applications

(Continued)

WARNING!

when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

NOTE:

- Your vehicle may be transmitting data as authorized by the subscriber ➡ page 7.
- The ASSIST and SOS buttons will only function if you are connected to an operable LTE (voice/data) or 4G (data) network, which comes as a built-in function. Other Uconnect services will only be operable if your Wagoneer Connect service is active and you are connected to an operable LTE (voice/data) or 4G (data) network.

ASSIST Call

The ASSIST button is used to automatically connect you to any one of the following support centers:

- Roadside Assistance – If you get a flat tire, or need a tow, just push the ASSIST button and you will be connected to a representative for assistance. Roadside Assistance will know what vehicle you're driving and its location. Additional fees may apply for roadside assistance.
- Vehicle Customer Care -Total support for all other vehicle issues.

- Uconnect Customer Care - Total support for Radio, Connected Services, Phone and NAV issues.

SOS Call

1. Push the SOS Call button on the overhead console.

NOTE:

In case the SOS Call button is pushed in error, there will be a 10 second delay before the SOS Call system initiates a call to an SOS operator, during which the LED will blink green. To cancel the SOS Call connection, push the SOS call button on the overhead console or press the cancellation button on the Device Screen. Termination of the SOS Call will turn off the green LED light on the overhead console.

2. The LED light located within the ASSIST and SOS buttons on the overhead console will turn green once a connection to an SOS operator has been made.
3. Once a connection between the vehicle and an SOS operator is made, the SOS Call system may transmit the following important vehicle information to an SOS operator:
 - Indication that the occupant placed an SOS Call
 - The vehicle brand

- The last known GPS coordinates of the vehicle
4. You should be able to speak with the SOS operator through the vehicle audio system to determine if additional assistance is needed.

WARNING!

ALWAYS obey traffic laws and pay attention to the road. ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the features and applications in this vehicle. Only use the features and applications when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

NOTE:

- Your vehicle may be transmitting data as authorized by the subscriber.
- Once a connection is made between the vehicle's SOS Call system and the SOS operator, the SOS operator may be able to open a voice connection with the vehicle to determine if additional assistance is needed. Once the SOS operator opens a voice connection with the vehicle's SOS Call system, the operator should be able to speak with you or other vehicle occupants and hear sounds occurring in

the vehicle. The vehicle's SOS Call system will attempt to remain connected with the SOS operator until the SOS operator terminates the connection.

5. The SOS operator may attempt to contact appropriate emergency responders and provide them with important vehicle information and GPS coordinates.

WARNING!

- If anyone in the vehicle could be in danger (e.g., fire or smoke is visible, dangerous road conditions or location), do not wait for voice contact from an Emergency Services Agent. All occupants should exit the vehicle immediately and move to a safe location.
- Never place anything on or near the vehicle's operable network and GPS antennas. You could prevent operable network and GPS signal reception, which can prevent your vehicle from placing an emergency call. An operable network and GPS signal reception is required for the SOS Call system to function properly.
- The SOS Call system is embedded into the vehicle's electrical system. Do not add aftermarket electrical equipment to the vehicle's electrical system. This may prevent your vehicle from sending a signal to initiate

(Continued)

WARNING!

an emergency call. To avoid interference that can cause the SOS Call system to fail, never add aftermarket equipment (e.g., two-way mobile radio, CB radio, data recorder, etc.) to your vehicle's electrical system or modify the antennas on your vehicle. IF YOUR VEHICLE LOSES BATTERY POWER FOR ANY REASON (INCLUDING DURING OR AFTER AN ACCIDENT), THE UCONNECT FEATURES, APPS AND SERVICES, AMONG OTHERS, WILL NOT OPERATE.

- Modifications to any part of the SOS Call system could cause the air bag system to fail when you need it. You could be injured if the air bag system is not there to help protect you.

SOS Call System Limitations

Vehicles sold in Mexico **DO NOT** have SOS Call system capabilities.

SOS or other emergency line operators in Mexico may not answer or respond to SOS system calls.

If the SOS Call system detects a malfunction, any of the following may occur at the time the

malfunction is detected, and at the beginning of each power cycle:

- The overhead console lights located within the ASSIST and SOS buttons will continuously illuminate red.
- The Device Screen will display the following message “Vehicle Device Requires Service. Please Contact An Authorized Dealer.”
- An in-vehicle audio message will state “Vehicle device requires service. Please contact an authorized dealer.”

WARNING!

- Ignoring the overhead console light could mean you will not have SOS Call services. If the overhead console light is illuminated, have an authorized dealer service the SOS Call system immediately.
- The Occupant Restraint Control module turns on the Air Bag Warning Light on the instrument panel if a malfunction in any part of the system is detected. If the Air Bag Warning Light is illuminated, have an authorized dealer service the Occupant Restraint Control system immediately.

Even if the SOS Call system is fully functional, factors beyond FCA US LLC's control may prevent or stop the SOS Call system operation.

These include, but are not limited to, the following factors:

- The power start button is in the OFF position
- The vehicle's electrical systems are not intact
- The SOS Call system software and/or hardware are damaged during a crash
- The vehicle battery loses power or becomes disconnected during a vehicle crash
- LTE (voice/data) or 4G (data) network and/or Global Positioning Satellite signals are unavailable or obstructed
- Equipment malfunction at the SOS operator facility
- Operator error by the SOS operator
- LTE (voice/data) or 4G (data) network congestion
- Weather
- Buildings, structures, geographic terrain, or tunnels
- The power start button is in the OFF position
- The vehicle's electrical systems are not intact
- The SOS Call system software and/or hardware are damaged during a crash
- The vehicle battery loses power or becomes disconnected during a vehicle crash

- LTE (voice/data) or 4G (data) network and/or Global Positioning Satellite signals are unavailable or obstructed
- Equipment malfunction at the SOS operator facility
- Operator error by the SOS operator
- LTE (voice/data) or 4G (data) network congestion
- Weather
- Buildings, structures, geographic terrain, or tunnels

WARNING!

ALWAYS obey traffic laws and pay attention to the road. ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the features and applications in this vehicle. Only use the features and applications when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

NOTE:

- Your vehicle may be transmitting data as authorized by the subscriber.
- Never place anything on or near the vehicle's LTE (voice/data) or 4G (data) and GPS antennas. You could prevent LTE (voice/data)

or 4G (data) and GPS signal reception, which can prevent your vehicle from placing an emergency call. An operable LTE (voice/data) or 4G (data) network connection and a GPS signal is required for the SOS Call system to function properly.

NOTE:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION!

To avoid damage to the mirror during cleaning, never spray any cleaning solution directly onto the mirror. Apply the solution onto a clean cloth and wipe the mirror clean.

Automatic SOS — If Equipped

Automatic SOS is a hands-free safety service that can immediately connect you with help in the event that your vehicle's air bags deploy. Please refer to your provided radio supplement for complete information.

JACK USAGE PRECAUTIONS

- Scissor jack adapter area required is 2.5 x 1.8 in (65x47 mm).

- Jack safe working load must be at least 3,020 lbs (1,370 kg).

CAUTION!

Improper jacking and lifting techniques can cause damage to the vehicle's batteries.

TIRE SERVICE KIT — IF EQUIPPED

Scan this QR code to learn more about Tire Service Kit.




If a tire is punctured, you can make an emergency repair using the Tire Service Kit.

The Tire Service Kit is stowed under the load floor in rear loadspace.

1. Open liftgate.
2. Lift the access cover using the load floor handle.

Tire Service Kit And Components

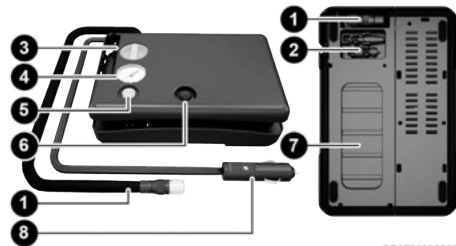

SB0701000009

Tire Service Kit Components

- 1 — Sealant/Air Hose
- 2 — Hose Accessories
- 3 — Mode Select Knob
- 4 — Pressure Gauge
- 5 — Deflation Button
- 6 — Power Switch
- 7 — Sealant Bottle
- 8 — Power Plug

JUMP STARTING (HYBRID MODELS)

If your vehicle has a discharged battery it can be jump started using a set of jumper cables and a battery in another vehicle or by using a portable battery booster pack. Jump starting

can be dangerous if done improperly so please follow the procedures in this section carefully.

Jump starting can be dangerous if done improperly so please follow the procedures in this section carefully.

NOTE:

When using a portable battery booster pack, follow the manufacturer's operating instructions and precautions.

WARNING!

Do not attempt jump starting if the battery is frozen. It could rupture or explode and cause personal injury.

CAUTION!


Do not use a portable battery booster pack or any other booster source with a system voltage greater than 12 Volts or damage to the battery, starter motor, alternator or electrical system may occur.

PREPARATIONS FOR JUMP START (HYBRID MODELS)


The battery jump post location in your vehicle is located on the driver's side of the engine compartment. Access the jump post by releasing the plastic clip and lifting up on the cover.

WARNING!

- Take care to avoid the radiator cooling fan whenever the hood is raised. It can start anytime the ignition switch is ON. You can be injured by moving fan blades.
- Remove any metal jewelry such as rings, watch bands and bracelets that could make an inadvertent electrical contact. You could be seriously injured.
- Batteries contain sulfuric acid that can burn your skin or eyes and generate hydrogen gas which is flammable and explosive. Keep open flames or sparks away from the battery.

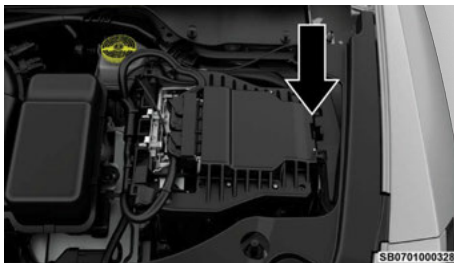

Jump Post Cover

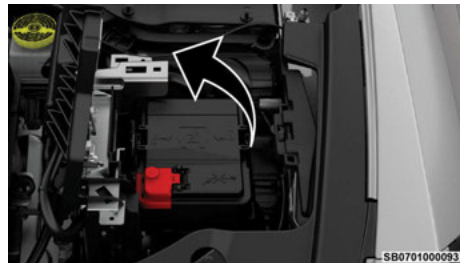

Jump Post Location

NOTE:

The positive battery post may be covered with a protective cap. Lift up on the cap to gain access to the positive battery post. Do not jump off fuses. Only jump directly off positive post which has a positive (+) symbol on or around the post.

See the following steps to prepare for jump starting:

1. Apply the parking brake, shift the automatic transmission into PARK (P) and place the ignition to OFF.
2. Turn off the heater, radio, and all electrical accessories.
3. Pull upward and remove the protective cap over the positive (+) battery post.

4. If using another vehicle to jump start the battery, park the vehicle within the jumper cable's reach, set the parking brake and make sure the ignition is OFF.

WARNING!

Do not allow vehicles to touch each other as this could establish a ground connection and personal injury could result.

JUMP STARTING PROCEDURE

WARNING!

Failure to follow this jump starting procedure could result in personal injury or property damage due to battery explosion.

CAUTION!

Failure to follow these procedures could result in damage to the charging system of the booster vehicle or the discharged vehicle.

Connecting The Jumper Cables

1. Connect the positive (+) end of the jumper cable to the remote positive (+) post of the discharged vehicle.

2. Connect the opposite end of the positive (+) jumper cable to the positive (+) post of the booster battery.
3. Connect the negative (-) end of the jumper cable to the negative (-) post of the booster battery.
4. Connect the opposite end of the negative (-) jumper cable to the good ground of the discharged vehicle. A "ground" is an exposed metallic/unpainted part of the frame or chassis, such as an accessory bracket or large bolt. The ground must be away from the battery.

WARNING!

Do not connect the jumper cable to the negative (-) post of the discharged battery. The resulting electrical spark could cause the battery to explode and could result in personal injury.

5. Start the engine in the vehicle that has the booster battery, let the engine idle a few minutes and then cycle the power button to ON/RUN in the vehicle with the discharged battery.
6. After a couple minutes (depending on the level of 12 Volt battery discharge), attempt to start the vehicle. Once the vehicle starts, follow the disconnecting procedure.

Disconnecting The Jumper Cables

1. Disconnect the negative (-) end of the jumper cable from the good ground of the vehicle with the discharged battery.
2. Disconnect the opposite end of the negative (-) jumper cable from the negative (-) post of the booster battery.
3. Disconnect the positive (+) end of the jumper cable from the positive (+) post of the booster battery.
4. Disconnect the opposite end of the positive (+) jumper cable from the remote positive (+) post of the discharged vehicle, and reinstall the protective cap.
5. Close the cover of the Front Power Distribution Center.

If frequent jump starting is required to start your vehicle you should have the battery and charging system inspected at an authorized dealer.

CAUTION!

Accessories plugged into the vehicle power outlets draw power from the vehicle's battery, even when not in use (i.e., cellular devices, etc.). Eventually, if plugged in long enough without vehicle operation, the vehicle's battery

(Continued)

CAUTION!

will discharge sufficiently to degrade battery life and/or prevent the vehicle from starting.

FREEING A STUCK VEHICLE

If your vehicle becomes stuck in mud, sand or snow, it can often be moved using a rocking motion. Turn the steering wheel right and left to clear the area around the front wheels. Push and hold the lock button on the gear selector. Then, shift back and forth between DRIVE (D) and REVERSE (R) while gently pressing the accelerator.

NOTE:

Shifts between DRIVE (D) and REVERSE (R) can only be achieved at wheel speeds of 5 mph (8 km/h) or less. Whenever the vehicle remains in NEUTRAL (N) for more than two seconds, you must press the brake pedal to engage DRIVE (D) or REVERSE (R).

Use the least amount of accelerator pedal pressure that will maintain the rocking motion without spinning the wheels.

NOTE:

Push the ESC OFF button to place the Electronic Stability Control (ESC) system in "Partial OFF" mode, before rocking the vehicle. Once the

vehicle has been freed, push the ESC OFF button again to restore "ESC On" mode.

WARNING!

Fast spinning tires can be dangerous. Forces generated by excessive wheel speeds may cause damage, or even failure, of the axle and tires. A tire could explode and injure someone. Do not spin your vehicle's wheels faster than 30 mph (48 km/h) or for longer than 30 seconds continuously without stopping when you are stuck and do not let anyone near a spinning wheel, no matter what the speed.

CAUTION!

- Spinning the wheels may lead to gear box overheating and failure. Allow the vehicle to rest with the gear box in NEUTRAL for at least one minute after every five rocking-motion cycles. This will minimize overheating and reduce the risk of gear box failure during prolonged efforts to free a stuck vehicle.
- When "rocking" a stuck vehicle by shifting between DRIVE and REVERSE, do not spin the wheels faster than 15 mph (24 km/h), or drivetrain damage may result.

(Continued)

CAUTION!

- Spinning the wheels too fast may lead to gear box overheating and failure. It can also damage the tires. Do not spin the wheels above 30 mph (48 km/h) while in gear (no gear box shifting occurring).

ENGINE COMPARTMENT

1.6L ENGINE



1 — Windshield Washer Bottle
2 — Coolant Surge Tank and Pressure Cap
3 — Oil Filler Cap

4 — Brake Master Cylinder Reservoir
5 — Battery Coolant Reservoir

6 — Air Cleaner
7 — Oil Dipstick

ENGINE BREAK-IN RECOMMENDATIONS

A long break-in period is not required for the engine and drivetrain (transmission and axle) in your vehicle.

Drive moderately during the first 300 miles (500 km). After the initial 60 miles (100 km), speeds up to 50 or 55 mph (80 or 90 km/h) are desirable.

While cruising, brief full-throttle acceleration within the limits of local traffic laws contributes

to a good break-in. Wide-open throttle acceleration can be detrimental and should be avoided.

The engine oil installed in the engine at the factory is a high-quality energy conserving type lubricant. Oil changes should be consistent with anticipated climate conditions under which vehicle operations will occur.

For the recommended viscosity and quality grades ➡ page 49.

CAUTION!

Never use Non-Detergent Oil or Straight Mineral Oil in the engine or damage may result.

NOTE:

A new engine may consume some oil during its first few thousand miles (kilometers) of operation. This should be considered a normal part of the break-in and not interpreted as a problem.

FLUID CAPACITIES

	US	Metric
Fuel (Approximate)		
All Models	13.7 gal	51.9 L
Engine Oil with Filter		
1.6L Engine	5 qt	4.73 L
Cooling System (Includes coolant recovery bottle filled to MAX level.)		
1.6L Engine	12 qt	11.4 L
1.6L Engine Intercooler	3.7 qt	3.5 L
1.6L HEV Battery Coolant (Contact an authorized dealer for service)	5.6 qt	5.3 L
1.6L HEV Power Electronics Coolant (Contact an authorized dealer for service)	5.7 qt	5.4 L

ENGINE FLUIDS AND LUBRICANTS

Component	Fluid, Lubricant, or Genuine Part
Engine Coolant	We recommend using Mopar® Antifreeze/Coolant 10 Year/150,000 Mile (240,000 km) Formula OAT (Organic Additive Technology) or equivalent meeting the requirements of the manufacturer Material Standard MS.90032.
Intercooler	We recommend using Mopar® Antifreeze/Coolant 10 Year/150,000 Mile (240,000 km) Formula OAT (Organic Additive Technology) or equivalent meeting the requirements of the manufacturer Material Standard MS.90032.
Battery, and Power Electric Coolant	We recommend using Mopar® Antifreeze/Coolant 10 Year/150,000 Mile (240,000 km) Formula OAT (Organic Additive Technology) or equivalent meeting the requirements of the manufacturer Material Standard MS.90032.
Engine Oil — 1.6L Engine	We recommend using Mopar® API SP/GF-6A Certified SAE 0W-20 Full Synthetic Engine Oil which meets the requirements of the manufacturer Material Standard MS-13340. Equivalent full synthetic 0W-20 API SP engine oil can be used but must have the API Donut trademark.
	CAUTION!
	Failure to use the recommended API SP/GF-6A or equivalent oil can cause engine damage not covered by the vehicle warranty.
Fuel Selection — 1.6L Engine	87 Octane (R+M)/2 Method, 0-15% Ethanol. The use of 91 or higher octane premium gasoline will allow these engines to operate to optimal performance. This increase in performance is most noticeable in hot weather or under heavy load conditions, such as while towing.

CAUTION!

- Mixing of coolant (antifreeze) other than specified Organic Additive Technology (OAT) coolant (antifreeze), may result in vehicle damage and may decrease corrosion protection. Organic Additive Technology (OAT) coolant is different and should not be mixed with Hybrid Organic Additive Technology (HOAT) coolant (antifreeze) or any “globally compatible” coolant (antifreeze). If a non-OAT coolant (antifreeze) is introduced into the cooling system in an emergency, the cooling system will need to be drained, flushed, and refilled with fresh OAT coolant (conforming to MS.90032), by an authorized dealer as soon as possible.
- Do not use water alone or alcohol-based coolant (antifreeze) products. Do not use additional rust inhibitors or antirust products, as they may not be compatible with the radiator coolant and may plug the radiator.
- This vehicle has not been designed for use with propylene glycol-based coolant (antifreeze). Use of propylene glycol-based coolant (antifreeze) is not recommended.

CHASSIS FLUIDS AND LUBRICANTS

Component	Fluid, Lubricant, or Genuine Part
Automatic Transaxle Fluid	Use only BN EVT Transaxle ATF TE.
Power Transfer Unit (PTU) Fluid	We recommend using AGF308A.
Rear Drive Module (RDM) Gear/Clutch Fluid	We recommend using Castrol BOT246FM.
RDM Hydraulic Fluid	We recommend using Castrol BOT248 PLUS.
Brake Master Cylinder	We recommend using Mopar® DOT 3 Brake Fluid, SAE J1703.

SERVICING AND MAINTENANCE

MAINTENANCE PLAN

Refer to the maintenance plan for the required maintenance intervals. More frequent maintenance may be needed in severe conditions, such as dusty areas and very short trip driving. In some extreme conditions, additional maintenance not specified in the maintenance schedule may be required.

WARNING!

- You can be badly injured working on or around a motor vehicle. Do only service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.
- Failure to properly inspect and maintain your vehicle could result in a component malfunction and affect vehicle handling and performance. This could cause an accident.

Once a Month or Before A Long Trip

- Check the engine oil level
- Check the operation of the interior and exterior lights
- Check the 12V battery terminals, cables and connections
- Check the brake pads, rotors, brake operation and fluid level
- Check the steering, suspension, axle boots and chassis components
- Check the wiper and washer operation, wiper blades and solvent reservoir
- Check the tire pressure
- Check the coolant fluid reservoir/s

Every 10,000 Miles (16,000 Km)

- Rotate the tires every 10,000 or if tread depth difference is 2/32 inch (1.5 mm) or greater, whichever comes first
- Inspect the CV/Universal joints

Every 12,000 Miles (19,000 Km)

- Replace the cabin air filter

Every 20,000 Miles (32,000 Km)

- Inspect front suspension, tie rod ends, boot seals, and replace if necessary
- Inspect the brake pads, replace as necessary

Every 30,000 Miles (48,000 Km)

- Inspect the front and rear axle fluid, change if using your vehicle for police, taxi, fleet, offroad or frequent trailer towing
- Inspect transfer case fluid
- Replace engine air cleaner filter

Every 60,000 Miles (96,000 Km)

- Replace spark plugs — 1.6L¹

Every 70,000 Miles (112,000 Km)

- Change transfer case fluid — Severe Usage (police, taxi, fleet, off-road, or frequent trailer towing.)

¹ The spark plug change interval is mileage-based only, yearly intervals do not apply.

Every 2 Years

- Replace the brake fluid ²

Every 100,000 Miles (160,000 Km)

- Replace PCV valve

Every 120,000 Miles (192,000 Km)

- Change transfer case fluid - Normal Usage

Every 150,000 Miles (240,000 Km)

- Flush and replace the coolant at 10 years or 150,000 miles (240,000 km) whichever comes first
- Replace accessory drive belt at 10 years or 150,000 miles (240,000 km), whichever comes first
- Inspect accessory drive belt tensioner and pulley at 10 years or 150,000 miles (240,000 km), whichever comes first, replace if necessary

ENGINE OIL LIFE RESET

Oil Change Required

Your vehicle is equipped with an engine oil change indicator system. The “Oil Change Required” message will display in the instrument cluster display for five seconds after a single chime has sounded, to indicate the next scheduled oil change interval. The engine oil change indicator system is duty cycle based, which means the engine oil change interval may fluctuate, dependent upon your personal driving style.

Unless reset, this message will continue to display each time the Start button is placed in the ON position. To turn off the message temporarily, push and release the **OK** or arrow buttons. To reset the oil change indicator system (after performing the scheduled maintenance), refer to the following procedure.

Use the steering wheel instrument cluster display controls for the following procedure(s):

1. Without pressing the brake pedal, place the Start button in the ON position (do not start the engine).
2. Push and release the **left** ◀ or **right** ▶ arrow button to find the Vehicle Info main menu item.

3. Push and release the **down** ▼ arrow button to access the Oil Life submenu.
4. Push and hold the **OK** button to reset oil life. If conditions are met, the gauge and numeric display will update to show 100%. If conditions are not met a pop-up message “To Reset Oil Life Engine Must Be Off With Ignition In Run” will display (for five seconds), and the user will remain at the Oil Life screen.
5. Push and release the **left** ◀ or **right** ▶ arrow button to exit the submenu screen.

NOTE:

If the indicator message illuminates when you start the vehicle, the oil change indicator system did not reset. If necessary, repeat this procedure.

Secondary Method Of Resetting Engine Oil Life

1. Without pressing the brake pedal, place the Start button in the ON position (do not start the engine).
2. Fully press the accelerator pedal, slowly, three times within 10 seconds.
3. Without pushing the brake pedal, push the Start button once to return to the OFF position.

² The brake fluid change interval is time based only, mileage intervals do not apply

NOTE:

If the indicator message illuminates when you start the vehicle, the oil change indicator system did not reset. If necessary, repeat this procedure.

TRAILER TOWING

In this section you will find safety tips and information on limits to the type of towing you can reasonably do with your vehicle. Before towing a trailer, carefully review this information to tow your load as efficiently and safely as possible.

To maintain the New Vehicle Limited Warranty coverage, follow the requirements and recommendations in this manual concerning vehicles used for trailer towing.

Trailer Towing Weights (Maximum Trailer Weight Ratings)


Model	Engine	Wheelbase (in)	Axle Ratio	GCWR	Frontal Area	Maximum GTW	Maximum TW
Cherokee AWD	1.6L I4 EP TUR-BO HEV	113	4.16	8,400 lb (3,810 kg)	30 sq ft (2.79 sq m)	3,500 lb (1,587 kg)	350 lb (158 kg)

Trailer Hitch Receiver Cover Removal — If Equipped

Your vehicle may be equipped with a trailer hitch receiver cover, this must be removed to access the trailer hitch receiver. This cover is located at the bottom center of the rear fascia/bumper.

1. Turn the two locking retainers located at the bottom of the hitch receiver cover a quarter turn counterclockwise and pull bottom of the hitch receiver cover outward (towards you).
2. Pull the bottom of the cover outward (towards you) then downwards to disengage

the tabs located at the top of the hitch receiver cover to remove.

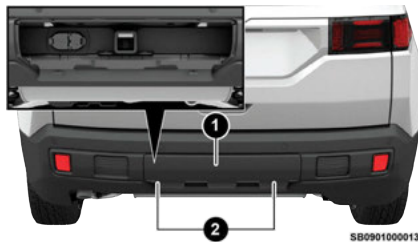

Hitch Receiver Cover

- 1 — Hitch Receiver Cover
- 2 — Locking Retainers

To reinstall the cover after towing repeat the procedure in reverse order.

NOTE:

Be sure to engage all tabs and fully seat the hitch receiver cover in the fascia/bumper prior to installation of the quarter turn fasteners.

A

Adaptive Cruise Control (ACC) (Cruise Control)	27, 28
Air Conditioning System	20
Android Auto	12
Audio Systems (Radio)	10
Automatic Headlights	25
Automatic High Beams	24
Automatic Temperature Control (ATC)	21
Automatic Transmission, Fluid Type	50
Auxiliary Electrical Outlet (Power Outlet)	13
Auxiliary Power Outlet	13
Axle Fluid	50

B

Battery	38
Jump Starting	43
Brake Fluid	50

C

Capacities, Fluid	48
Caps, Filler	
Oil (Engine)	47
Climate Control	20
Contract, Service	6

Cooling System	
Cooling Capacity	48
Selection Of Coolant (Antifreeze)	48, 49
Customer Assistance	5
Customer Programmable Features	11

E

Electric Parking Brake	30
Electrical Outlet, Auxiliary (Power Outlet)	13
Emergency, In Case Of	
Freeing Vehicle When Stuck	46
Jacking	43
Jump Starting	43
Engine	47
Break-In Recommendations	48
Compartment Identification	47
Oil Filler Cap	47
Exterior Lights	24

F

Fluid Capacities	48
Fluids And Lubricants	50
Freeing A Stuck Vehicle	46

G

Garage Door Opener (HomeLink)	26
-------------------------------------	----

H

Head Restraints	22
Headlights	
Automatic	25
On With Wipers	25
High Voltage Battery	38
HomeLink (Garage Door Opener)	26
Hood Release	35

I

Information Center, Vehicle	18
Inside Rearview Mirror	40
Instrument Cluster	17, 18
Inverter	
Power	14

J

Jacking Instructions	43
Jump Starting	43

K

Keyless Enter 'n Go™	
Passive Entry Programming	10

L

Latches	
Hood	35
Liftgate	37
Closing	37
Opening	37
Lights	
Automatic Headlights	25
Dimmer Switch, Headlight	24
Exterior	24
Headlights On With Wipers	25
Turn Signals	24

M

Maintenance Schedule	51
Manual	
Service	6
Media Hub	15
Mirrors	
Rearview	40
MP3 Control	15
Multi-Function Control Lever	24

N

New Vehicle Break-In Period	48
-----------------------------------	----

O

Oil Change Indicator	52
Reset	52
Operator Manual	
Owner's Manual	6

P

Parking Brake	30
ParkSense	
Front And Rear	29
Passive Entry	10
Power	
Inverter	14
Outlet (Auxiliary Electrical Outlet)	13
Steering	50

R

Rain Sensitive Wiper System	26
Release, Hood	35
Restraints, Head	22

S

Schedule, Maintenance	51
Seats	22
Selection Of Coolant (Antifreeze)	49

Service Assistance	5
Service Contract	6
Service Manuals	6
Settings	11
Steering	
Wheel, Voice Recognition	13

T

Temperature Control, Automatic (ATC) ...	21
Tire Service Kit	43
To Open Hood	35
Towing	53
Guide	53
Weight	53
Trailer Towing	53
Trailer Weight	53
Transfer Case	
Fluid	50
Transmission	
Fluid	50

U

Uconnect	10
Uconnect Phone	11
Pair (Link) Uconnect Phone To A	
Mobile Phone	11
Uconnect Settings	11

Customer Programmable Features	10
Passive Entry Programming	10
USB Ports	15

V

Vehicle Settings	11
Voice Command	13
Voice Recognition System (VR)	13

W

Warning Lights And Messages	20
Washers, Windshield	25
Windshield Washers	25
Windshield Wipers	25
Wipers, Rain Sensitive	26

The driver's primary responsibility is the safe operation of the vehicle. Driving while distracted can result in loss of vehicle control, resulting in an accident and personal injury. FCA US LLC strongly recommends that the driver use extreme caution when using any device or feature that may take their attention off the road. Use of any electrical devices, such as cellular telephones, computers, portable radios, vehicle navigation or other devices by the driver while the vehicle is moving is dangerous and could lead to a serious accident. Texting while driving is also dangerous and should never be done while the vehicle is moving. If you find yourself unable to devote your full attention to vehicle operation, pull off the road to a safe location and stop your vehicle. Some states or provinces prohibit the use of cellular telephones or texting while driving. It is always the driver's responsibility to comply with all local laws.

This Owner Handbook has been prepared to help you get acquainted with your new Jeep® brand vehicle and to provide a convenient reference source for common questions. Not all features shown in this manual may apply to your vehicle. For additional information, visit mopar.com/om (USA), owners.mopar.ca (Canada) or your local Jeep® brand dealer.

DRIVING AND ALCOHOL

Drunk driving is one of the most frequent causes of accidents. Your driving ability can be seriously impaired with blood alcohol levels far below the legal minimum. If you are drinking, don't drive. Ride with a designated non-drinking driver, call a cab, a rideshare, a friend, or use public transportation.

WARNING

Driving after drinking can lead to an accident. Your perceptions are less sharp, your reflexes are slower and your judgment is impaired when you have been drinking. Never drink and then drive.

Vehicle images are for illustration purposes only. Actual products sold may vary.



SCAN TO DOWNLOAD COMPLETE
OWNER'S MANUAL, RADIO AND
WARRANTY MANUALS

U.S.



mopar.com/om

CANADA



owners.mopar.ca

Jeep[®]

©2025 FCA US LLC. All Rights Reserved. Tous droits réservés. Jeep is a registered trademark of FCA US LLC. Jeep est une marque déposée de FCA US LLC. App Store is a registered trademark of Apple Inc. Google Play Store is a registered trademark of Google.

Second Edition
26_KM74_OH_EN_USC