


Jeep

QUICK START GUIDE



WRANGLER

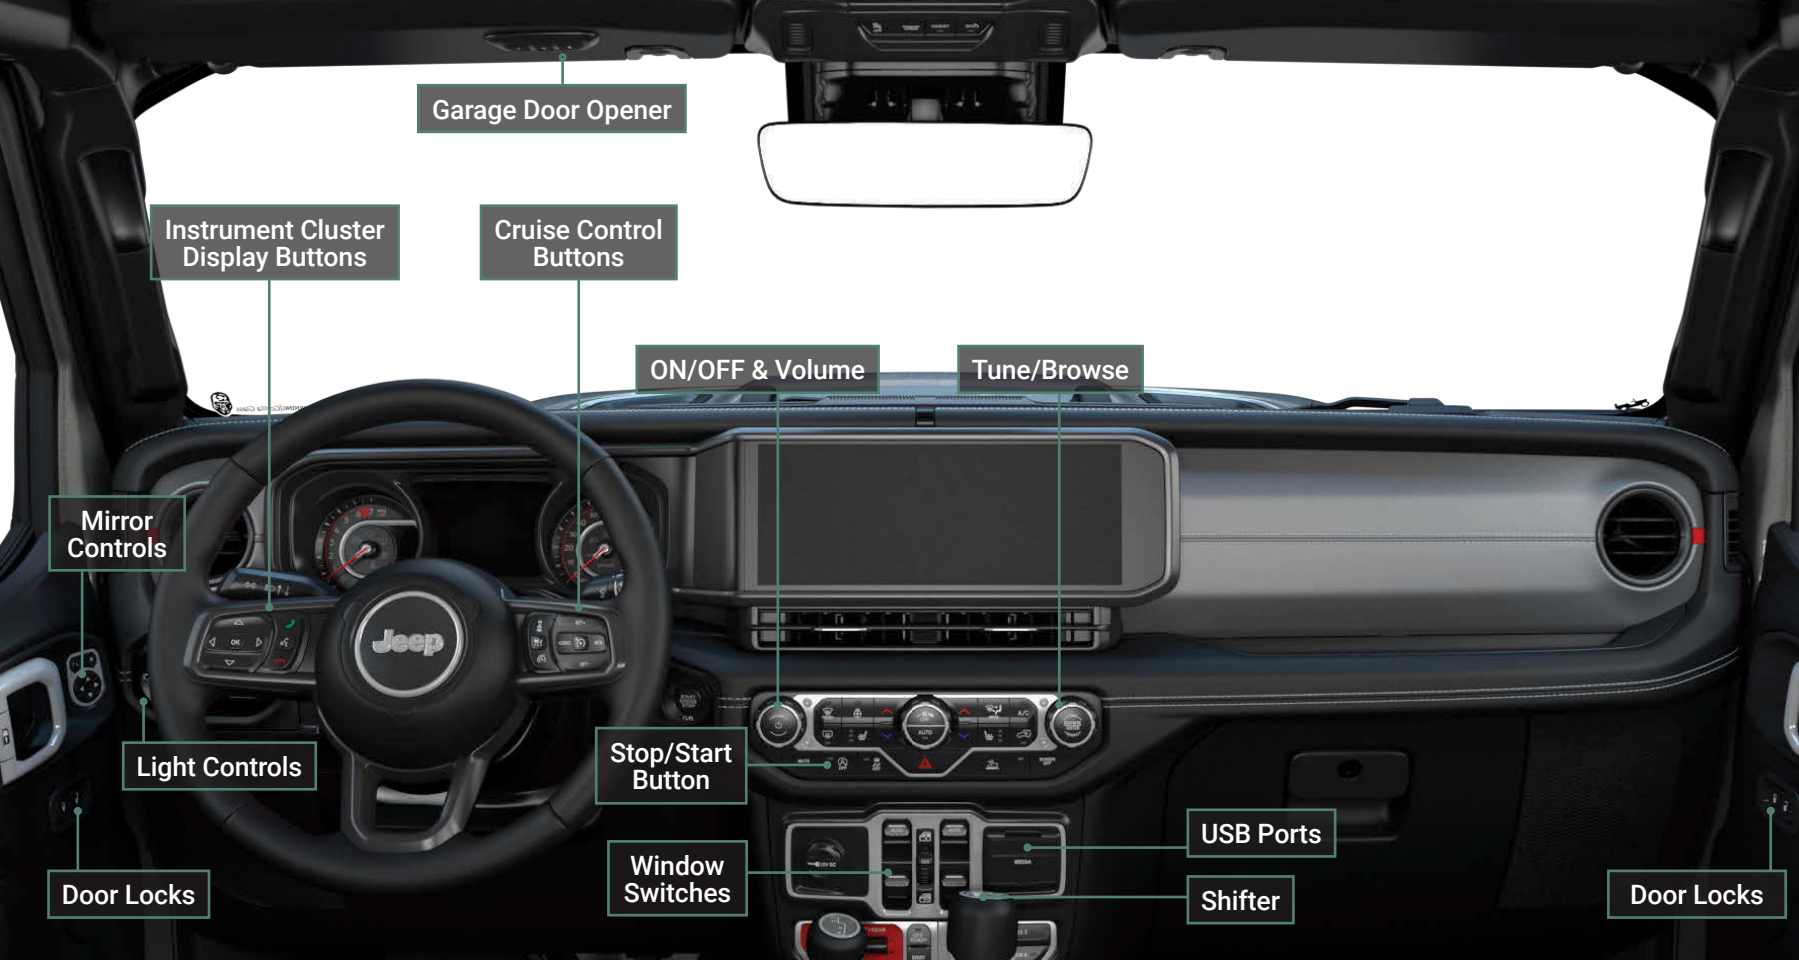


Garage Door Opener

- 1 With the vehicle in the ACC or ON/RUN position, hold the garage door transmitter 1-3 inches from the HomeLink® button you want to program.
- 2 Push and hold the HomeLink® button and the button on the garage door transmitter.
- 3 **Watch the indicator light.** If it turns solid or blinks rapidly and the door operates programming is complete. If it blinks rapidly but the garage door doesn't operate, continue to step 4.
- 4 For **Rolling Code** garage door openers, push the "Learn", "Program", "Smart", or "Train" button on your garage door opener, then push and hold the HomeLink® button in your vehicle up to three times (holding for two seconds each time).
- 5 If programming was successful, your garage door will open and close with the HomeLink® button.

TO ERASE ALL SET CHANNELS:

Push and hold the two outside HomeLink® buttons until the indicator flashes.

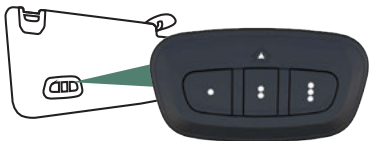

**ROLLING
OR
NON-ROLLING**

Check your garage door opener motor in your garage for a "Learn", "Program", "Smart", or "Train" button by the hanging antenna. If you have one of these, you have a Rolling Code garage door opener.



NEED ASSISTANCE?

1-800-355-3515

Scan For
HomeLink®
Video



Pair a Phone



Scan For
Phone Pairing
Video

- 1 Make sure Bluetooth® is enabled on your mobile device
- 2 With the vehicle in the ON/RUN position, press the Phone button on the vehicle's touchscreen menu bar
- 3 Press "Device Manager"
- 4 Press "Add Device"
- 5 Follow the prompts on your phone and on the touchscreen

Troubleshooting

- 1 Perform a reset by holding the power button on the radio for 15 seconds
- 2 Reboot your phone
- 3 Remove the paired phone
- 4 Follow the Pair a Phone steps above to set up phone



Scan For
Android™ Auto
Video



Scan For
Apple Carplay®
Video



Connected Services

WITH CONNECTED SERVICES YOU CAN...



Lock Your Vehicle



Unlock Your Vehicle



Remote Start Your Vehicle



Cancel Remote Start



Activate Your Horn

ACTIVATE YOUR REMOTE SERVICES



- 1 Press "Apps" on the touchscreen.
- 2 Press "Activate Services".
- 3 Press "Activate Now".
- 4 You can activate via email or an agent. Press "Call An Agent" to speak with an agent. If you were registered for Connected Services at the dealership, simply enter your email and PIN to activate them. Some Connected Services Features require an active subscription.
- 5 Download the Jeep® Mobile App from the Google Play® Store or Apple® App Store® for access to available Remote Commands. Log in with your account information.



Mopar® YOUR Way

Get 24/7 access to everything you need, including custom vehicle dashboards, maintenance records, mobile vehicle commands and more. Scan the QR code to register.




*Canadian residents are not required to create a profile, as one is created when a Jeep® Connect account is activated.

Uconnect 5/5 NAV

Available Modes:

- **Home:** Customize the Home screen with widgets
- **Media:** Listen to the radio and play media
- **Navigation:** Search for and navigate to any destination
- **Phone:** Pair your smartphone and make hands-free calls
- **Comfort:** Adjust the vehicle's multiple climate systems
- **Vehicle:** Change vehicle settings
- **Apps:** Select from available apps

Swipe down to customize Profile options

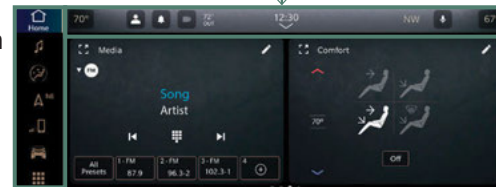

Press and drag an icon to rearrange

Scan For
Radio
Video



Scan For
Voice
Recognition
Video



Scan For
Navigation
Video



Voice Recognition

Use Your Voice To Control Uconnect

To begin, push the Voice Recognition button on the steering wheel. If activated within Vehicle settings, you can also say the vehicle's Wake Up commands, "Hey, Uconnect" or "Hey, Jeep®", without pushing any buttons.



Stop/Start

Activate AutoStop to reduce fuel consumption. To manually turn off Stop/Start, push the Stop/Start OFF switch located on the switch bank below the climate controls.

Stop/Start OFF Switch



Autostop Mode

To activate:

- The system must be in STOP/START READY state
- The vehicle must be completely stopped
- The gear selector must be in a forward gear with the brake pedal pressed (automatic transmission)
- The gear selector must be in NEUTRAL with the clutch pedal fully released (manual transmission)


KEEP IN MIND:

Prior to engine shut down, the system will check many safety and comfort conditions to determine if they are fulfilled. Certain conditions will prevent the engine from autostopping. See your Owner's Manual for a detailed list of these conditions.

Scan For
Stop/Start
Video



Automatic Climate Controls

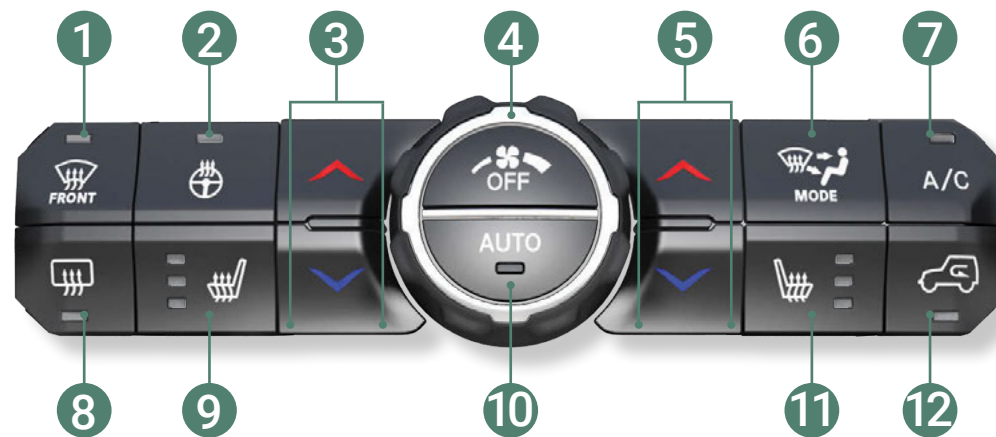

- | | |
|-------------------------|--------------------------|
| 1 Front Defrost | 7 Air Conditioner |
| 2 Heated Steering Wheel | 8 Rear Defrost |
| 3 Driver Temperature | 9 Driver Heated Seat |
| 4 Blower Control | 10 Auto |
| 5 Passenger Temperature | 11 Passenger Heated Seat |
| 6 Mode Control | 12 Recirculation |

TIP:

Push the **RED** arrow button to increase the temperature or push the **BLUE** arrow button to decrease the temperature for the driver and/or passenger.

Scan For
Climate Controls
Video



4x4 Operation

Axle Lock

To unlock the axles, push the axle lock OFF button.



Axle Lock Switch

- ▲ Push the switch up to lock the front axle & rear axle.
- ▼ Push the switch down to lock the rear axle only.

OFF ROAD+

When activated, the vehicle's performance will improve depending on which 4WD mode is activated.

Sway Bar Disconnect

Shift to either 4WD High or 4WD Low and push the SWAY BAR button.

Scan For
Sway Bar
Video



KEEP IN MIND:

Sway Bar Disconnect should be off during normal driving conditions.

If your vehicle is equipped with Tru-Lok, see "Four-Wheel Drive Operation" in "Starting And Operating" in your Owner's Manual.

Five-Position Transfer Case

2H (2WD High)

Used for normal street and highway driving.

4H AUTO (4WD High Auto)

Sends power to the front wheels.

4H PART TIME (4WD High Part Time)

Forces the front and rear wheels to rotate at the same speed.

N (Neutral)

Used for flat towing behind another vehicle.

4L (4WD Low)

Provides low-speed four-wheel drive. Forces the front and rear wheels to rotate at the same speed.

If your vehicle is equipped with a four-position transfer case, see "Four-Wheel Drive Operation" in "Starting And Operating" in your Owner's Manual.



Scan For
5 Position
Video



Scan For
4 Position
Video



Door Off Mirror Kit

MAINTAIN REARWARD VISABILITY WITH DOORS REMOVED

With the Door Off Mirror Kit, exterior mirrors can be installed on the vehicle after the front doors are removed.

Exterior mirrors mount to the upper body door hinges.

Scan For Door
Off Mirror Kit
Video



Power Seats

Use the power seat switch to adjust seat height, angle, or forward/rearward position. Use the power seat recline switch to adjust the angle of the seatback. To adjust the lumbar support, push the power lumbar switch forward to increase the support and push the switch rearward to decrease the support. Pushing upward or downward on the switch will raise and lower the position of the support.

Power Recline
Switch

Power Seat
Switch

Power Lumbar
Switch

Scan For
Seat Overview
Video



Ready to Remove Your Doors?

The Wrangler's doors are now easier than ever to remove! No tools are required for removal or installation. Scan the QR code or refer to your Owner's Manual for the full step-by-step instructions.

DOOR REMOVAL



INSTALL/ REMOVE HARD TOP



Hard Top

RAISING



REAR WINDOW REMOVAL



LOWERING




INSTALL/ REMOVE SOFT TOP



Top & Door Options

SOFT TOP CONFIGURATIONS

- Sunrider® position with rear & quarter windows installed
- Sunrider® position with rear & quarter panels removed
- Sunrider® position with rear window installed & quarter panels removed
- Fully lowered position with rear & quarter windows removed

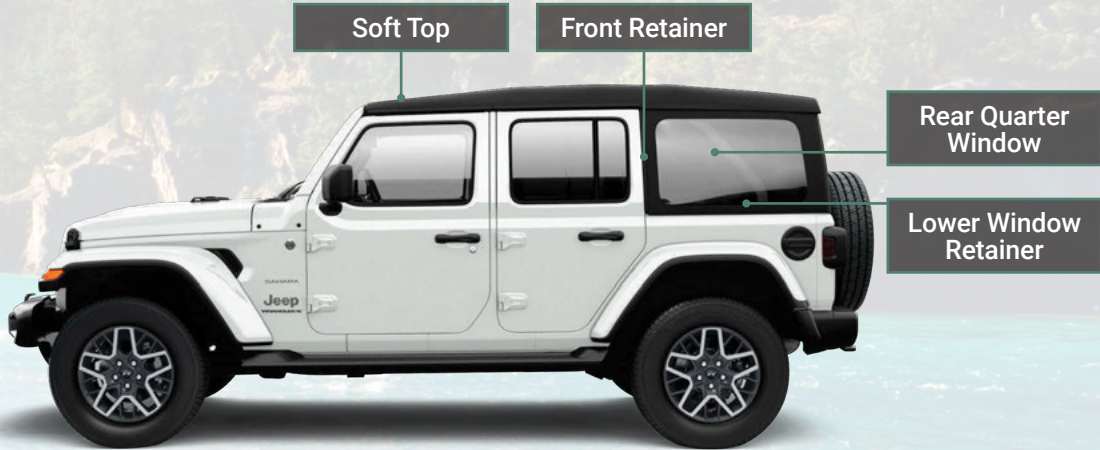

Soft Top

Warning & Indicator Lights

	Air Bag		Battery Charge		Brake		Door Open		Electric Power Steering (EPS) Fault
	Electronic Throttle Control (ETC)		Engine Coolant Temperature		Hood Open		Oil Pressure		Oil Temperature
	Rear Seat Belt Reminder		Seat Belt Reminder		Swing Gate Open		Transmission Temperature		Vehicle Security
	4WD		4WD Low		4WD Part Time		Anti-Lock Brake System (ABS)		Axle Locker Fault
	Cruise Control Fault		Electronic Stability Control (ESC) Active		Electronic Stability Control (ESC) OFF		Engine Check/Malfunction		Forward Collision Warning (FCW) Off
	Front And Rear Axle Lock		Loose Fuel Filler Cap		Low Fuel		Low Washer Fluid		Neutral
	Rear Axle Lock		Service 4WD		Service Adaptive Cruise Control (ACC)		Service Forward Collision Warning (FCW)		Service Stop/Start System
	Sway Bar		Sway Bar Fault		Tire Pressure Monitoring System (TPMS)		4WD Auto		Adaptive Cruise Control (ACC) Set With No Target
	Adaptive Cruise Control (ACC) Set With Target		Cruise Control SET With Premium Cluster		Front Fog		Parking/Headlights On		Rear Seat Belt Fastened
	Stop/Start Active		Turn Signal		2WD High		Adaptive Cruise Control (ACC) Ready		Cruise Control Ready With Premium Cluster
	Cruise Control SET With Base Cluster		Gear Shift Indicator		Hill Descent Control (HDC)		Rear Seat Belt Fastened		Rear Seat Belt Reminder
	Rear Seat Unoccupied		Selec-Speed Control		High Beam				

Jeep® Customer Assistance: (877) 426-5337 (US), (800) 465-2001 (CANADA)

Your vehicle may be equipped with different features than shown in this guide.

For additional information on any of the topics in this publication, please refer to your digital Owner's Manual.

©2026 FCA US LLC. All Rights Reserved. Tous droits réservés. Jeep is a registered trademark of FCA US LLC. Jeep est une marque déposée de FCA US LLC. App Store is a registered trademark of Apple Inc. Google Play Store is a registered trademark of Google.

Third Edition
26_JL_QSG_EN_USC