

QUICK START GUIDE



Jeep® Compass



Garage Door Opener

Multifunction Lever

Wiper Controls

Light Controls

Mirror Controls

Instrument Cluster Display & Voice Recognition Buttons

Cruise Control Buttons

VEHICLE OVERVIEW

Radio/Touchscreen


Door Locks

Climate Controls

USB Ports

Electric Parking Brake

Selec-Terrain Switch

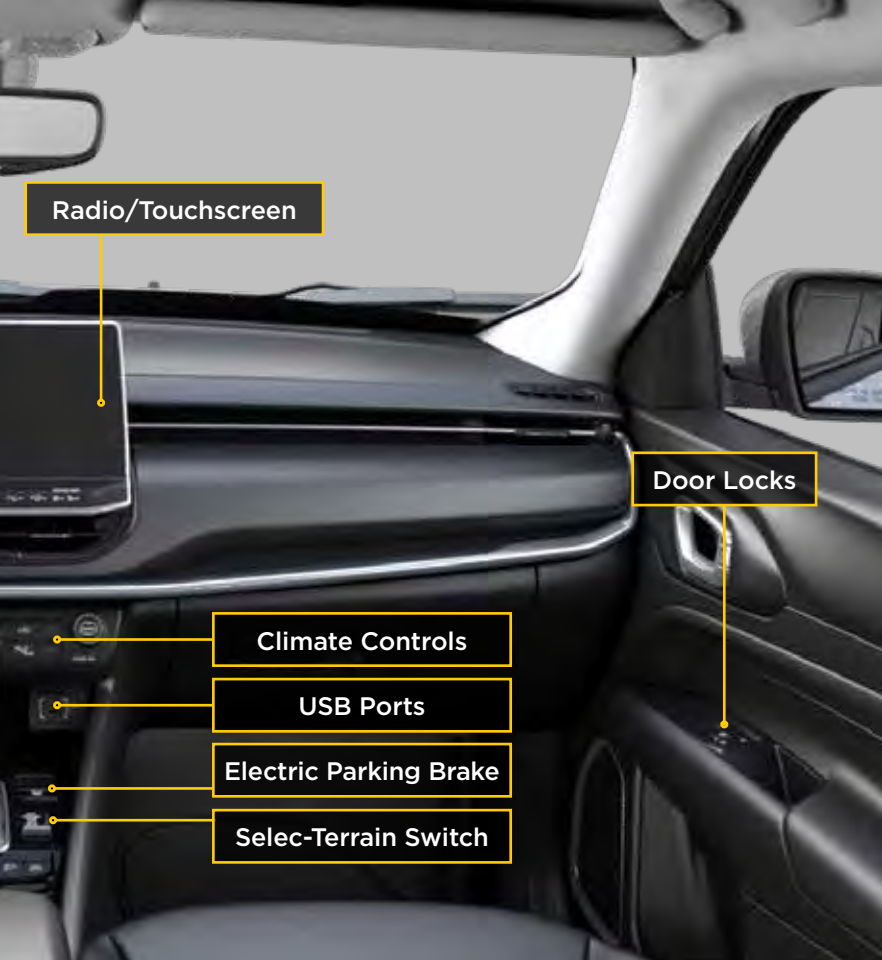

Stop/Start

REDUCE FUEL CONSUMPTION

Autostop Mode

To activate:

- The system must be in STOP/START READY state.
- The vehicle must be completely stopped.
- The gear selector must be in a forward gear with the brake pedal pressed.

Once the system is activated, the engine will shut down, the tachometer will move to zero, and the Stop/Start telltale will illuminate.

System Malfunction

If there is a malfunction in the Stop/Start system, the system will not shut down the engine, and a message will appear in the instrument cluster display.

Have the system checked by an authorized dealer.

KEEP IN MIND:

Prior to engine shut down, the system will check many safety and comfort conditions to determine if they are fulfilled. Certain conditions will prevent the engine from autostopping. See your Owner's Manual for a detailed list of these conditions.



Stop/Start
OFF Switch



Scan For
Stop/Start
Video



Parallel/Perpendicular Parking Space Assistance



When the ParkSense Active Park Assist system is enabled using the ParkSense Active Park Assist switch, your vehicle will assist you in entering or exiting a parking space with steering control and audible and visual guidance.

To use:

- Use the arrow buttons on your steering wheel to select a parking maneuver (parallel, perpendicular, or parallel park exit).
- Use the turn signal to indicate on which side of the vehicle you would like to park.
- The vehicle will instruct you to shift gears and move forward or backward as needed until the parking maneuver is completed.

Pair a Phone



1

Make sure Bluetooth® is enabled on your mobile device

2

With the vehicle in the ON/RUN position, press the Phone button on the vehicle's touchscreen menu bar

3

Press "Device Manager"

4

Press "Add Device"

5

Follow the prompts on your phone and on the touchscreen

Troubleshooting

1

Perform a reset by holding the power button on the radio for 15 seconds

2

Reboot your phone

3

Remove the paired phone

4

Follow the Pair a Phone steps above to set up phone

CONNECT YOUR APPS

Connect your smartphone to the media USB port or pair your smartphone within Device Manager.

The Android Auto™ or Apple CarPlay® icon will replace the phone icon on the touchscreen.

KEEP IN MIND:



For Android™ Users, if the Android Auto™ app was not previously downloaded, it will download the first time you plug in your device.



For Apple® Users, Apple CarPlay® is only compatible with iPhone® 5 or later and requires Siri being enabled in Settings.

Ready to remove a phone or audio device?

- 1 Press “Device Manager” on the touchscreen.
- 2 Press the Settings gear icon next to the phone or device you would like to remove.
- 3 Press “Delete Device”. The device should be removed.
- 4 On your phone’s Bluetooth® or Setup menu, remove the saved Uconnect radio.



Connected Services

WITH CONNECTED SERVICES YOU CAN...



Lock Your Vehicle



Unlock Your Vehicle



Remote Start Your Vehicle



Cancel Remote Start



Activate Your Horn

ACTIVATE YOUR REMOTE SERVICES



- 1** Press “Apps” on the touchscreen.
- 2** Press “Activate Services”.
- 3** Press “Activate Now”.
- 4** There are two ways to activate: via email or via an agent. On the next screen, you can either enter your name and email, or press “Call An Agent” to directly speak with a certified agent.

If you previously were registered for Connected Services at the dealer, you will only need to enter your email and PIN to activate them on your vehicle.
- 5** Download the Jeep® Mobile App from the Google Play Store or Apple® App Store® for access to Remote Commands. Log in with your account information.

Mopar® YOUR Way

CREATE YOUR OWNER'S
PROFILE TODAY!

Get 24/7 Access To Everything You Need



Custom vehicle dashboard



Access to your vehicle's Owner's Information



Schedule dealer service with ease



Obtain special offers on Mopar® service



View maintenance records**



Mobile vehicle commands**

**Requires an active Jeep® Connect subscription



Registration
is simple. Scan the
QR code below
and provide your
email address
to get started.



*Canadian residents
are not required to
create a profile, as
one is created when
a Jeep® Connect
account is activated.

GET PERSONALIZED BY REGISTERING

Voice Recognition

USE YOUR VOICE TO CONTROL UCONNECT

To begin, push the Voice Recognition button on the steering wheel. If activated within Vehicle Settings, you can also say the vehicle's "Wake Up" word, "Hey, Uconnect" or "Hey, Jeep®", without pushing any buttons.



Push the Voice Recognition button to begin a Voice session.

Push the End Call button to end an in-progress phone call.

KEEP IN MIND:

There may be an inconsistent volume between different audio sources.

Popular Voice Commands

Once a Voice session is activated with either the Voice Recognition button or the “Wake Up” word, you can speak a command to the Uconnect system.

Try some of these popular Voice Commands:

1

“Tune to <your favorite radio station>.”

2

“Navigate to 1000 Chrysler Drive, Auburn Hills.”

3

“Call <name in your phone’s contact list>.” Make sure your smartphone is paired to the Uconnect System.

4

“Set temperature to 68°F” or “Set temperature to 20°C.”

TIP:

You can use the vehicle “Wake Up” word without pushing any buttons. Simply say “Hey, Uconnect” or “Hey, Jeep®”, and say your command.

Scan For Voice
Recognition
Video



Customize Radio Settings

CUSTOMIZE VEHICLE SETTINGS FROM THE UCONNECT SYSTEM

How to find and change Vehicle Settings:

Let's say you want to change the display brightness:

1

Press the Vehicle Mode button in the bottom menu bar of the touchscreen.

3

Select the My Profile menu from the Settings menu.

2

Select the Settings tab.

4

When "Auto" is selected, the screen will automatically adjust the brightness. When "Manual" is selected, you can manually adjust the screen brightness.

KEEP IN MIND:

Some settings will show a single checkbox. Press the checkbox to turn the setting On (check mark) or Off (no check mark).

Memory Profiles

You may create two memory profiles which save settings for driver seat position and radio presets. To program, simply push the S button, then push memory button 1 or 2 within five seconds. Now push 1 or 2 any time to automatically recall your desired settings.

Vehicle Settings in the Uconnect System

CUSTOMIZE SETTINGS



Settings Menu

Settings

Settings Tab

Setting


Vehicle Mode

Scan For
Radio Settings
Video



Forward Collision Warning (FCW) With Mitigation

FCW with Mitigation can provide both audible and visual warnings, and may also apply a brake jerk to warn you of a potential frontal collision. The warnings and limited braking are intended to provide you with enough time to react, and avoid or mitigate the potential collision.

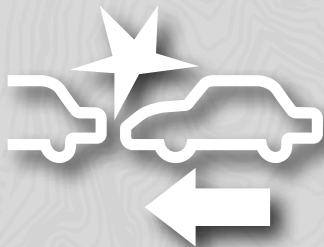

The system can be turned on or off through your touchscreen. You can also use your touchscreen to adjust the system's sensitivity and active braking status.

Select between the following **sensitivity** settings:

- Near
- Medium
- Far

Select between the following **brake** settings:

- Warning + Active Braking
- Only Warning
- Off

KEEP IN MIND:

The default settings are “Medium” and “Warning + Active Braking”. This allows the FCW system to warn the driver of a possible collision with the vehicle in front using audible/visual warnings while applying autonomous braking. The system will retain the last setting you have selected when you turn on your vehicle.


Scan For
FCW Video



Active Lane Management (ALM)

The Active Lane Management system detects lane markings or road edges and measures your vehicle's position within the lane boundaries. It uses Blind Spot Monitoring (BSM) to detect vehicles in adjacent lanes while you are preparing to change lanes.

To turn the system on, push the ALM button on the switch panel below the Uconnect screen. To turn the system off, push the button again (the LED on the button will turn on when the system is off).

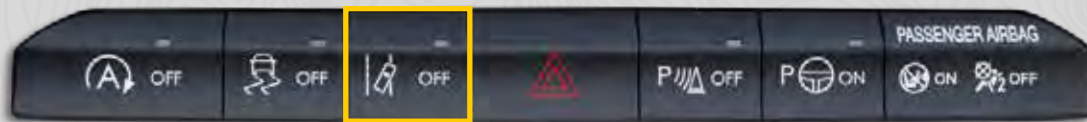

When your vehicle approaches or crosses your lane, the ALM system may provide a visual warning in the instrument cluster, steering assist torque, haptic steering wheel vibration, and/or automatic steering assistance. This is dependent on how many lane markings are detected (one or both), whether or not you apply your turn signal, and your Uconnect Settings selections.

You can select from the following warning types in your Uconnect Settings:

- Vibration Only
- Steering Assist Only
- Vibration And Steering Assist

KEEP IN MIND:

You can also adjust intensity of the steering wheel vibration, steering assist warning, and the warning zone sensitivity in Uconnect Settings.

**Scan For
ALM Video**



Warning & Indicator Lights

	Air Bag		Battery Charge		Brake		Door Open		Electric Power Steering (EPS) Fault
	Electronic Throttle Control (ETC)		Engine Temperature		Hood Open		Liftgate Open		Oil Pressure
	Oil Temperature		Seat Belt Reminder		Transmission Fault		Transmission Temperature		Vehicle Security
	4WD Lock		4WD Low		Active Lane Management Warning		Anti-Lock Brake System (ABS)		Electronic Park Brake
	Electronic Stability Control (ESC) Active		Electronic Stability Control (ESC) OFF		Engine Check/Malfunction Indicator		Forward Collision Warning (FCW)		Forward Collision Warning (FCW) OFF
	Fuel Cutoff		Immobilizer Fail/VPS Electrical Alarm		Low Coolant Level		Low Fuel		Low Washer Fluid
	Service 4WD		Service Adaptive Cruise Control (ACC)		Service Forward Collision Warning (FCW)		Service Active Lane Management		Service Stop/Start System
	Tire Pressure Monitoring System (TPMS)		Towing Hook Breakdown		Active Lane Management ON/Armed		Adaptive Cruise Control (ACC) Set With No Target		Adaptive Cruise Control (ACC) Set With Target
	Automatic High Beam		Cruise Control SET		Front Fog		Parking/Headlights On		Stop/Start Active
	Turn Signal		Active Lane Management ON/Not Armed		Cruise Control Ready		Cruise Control SET		Hill Descent Control (HDC)
	High Beam		Cruise Control Ready With Base Cluster						

For additional information on any of the topics in this publication, please refer to your Owner's Manual.