


QUICK START GUIDE



2500/3500

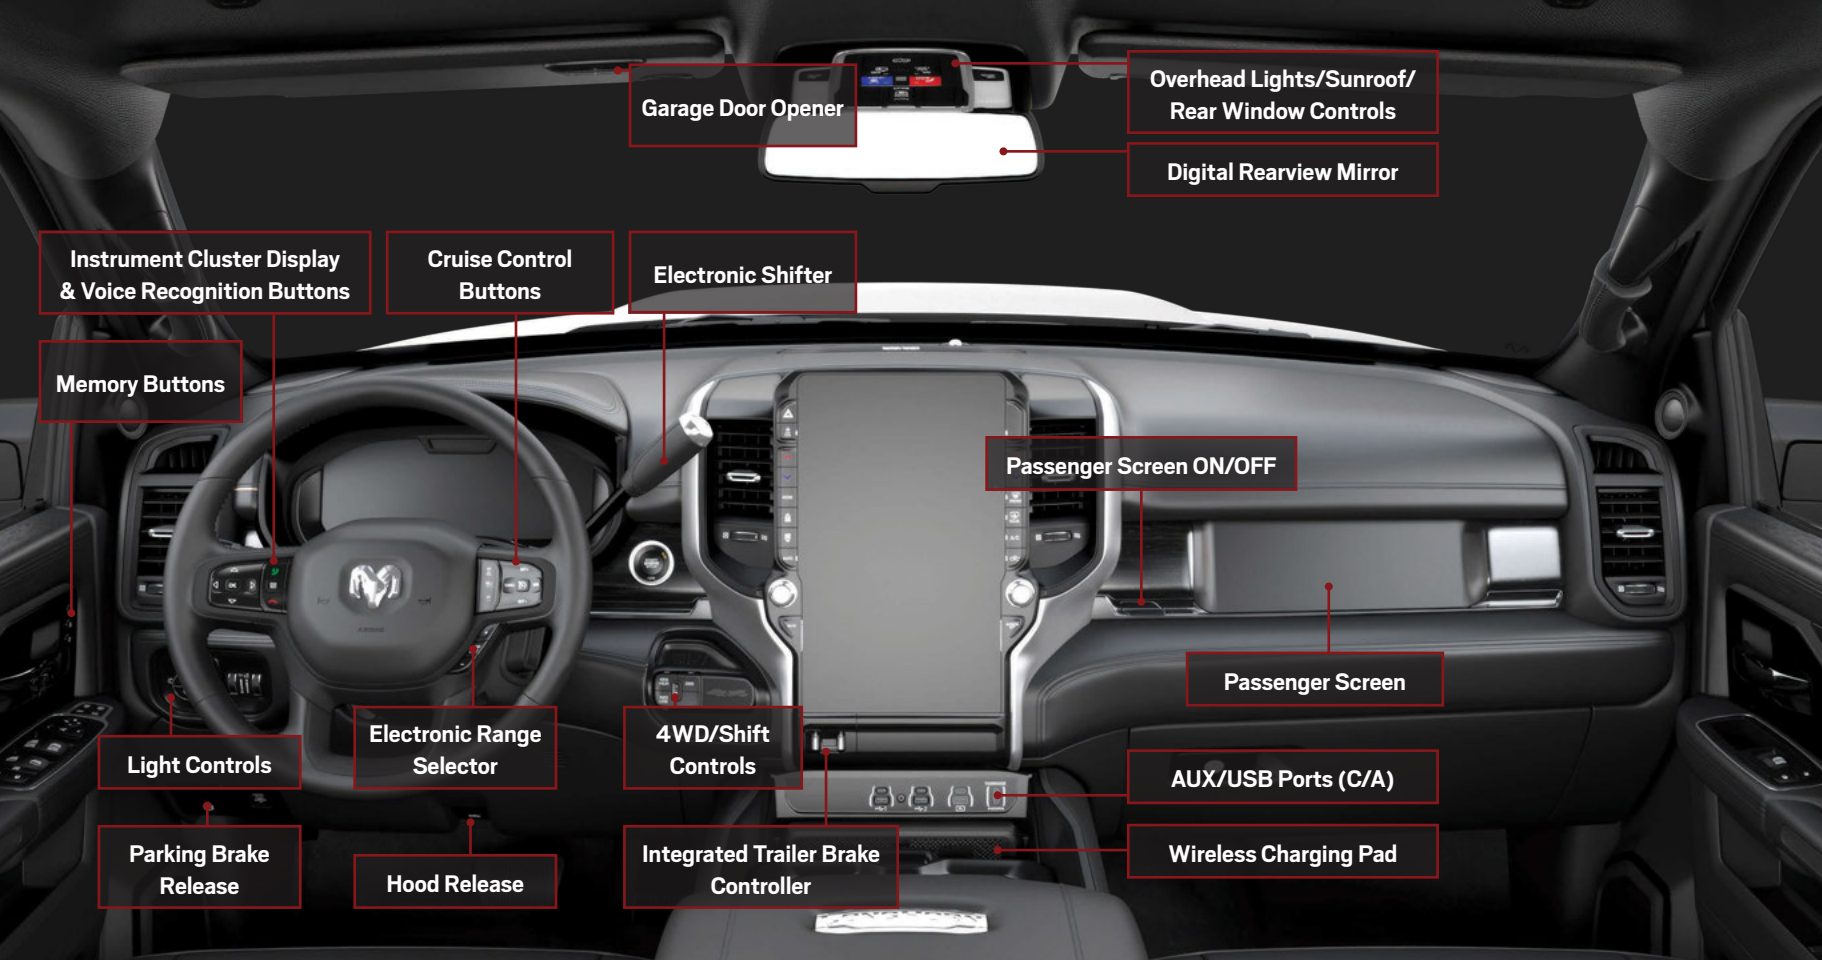

Garage Door Opener

Overhead Lights/Sunroof/
Rear Window Controls

Digital Rearview Mirror

Instrument Cluster Display
& Voice Recognition Buttons

Cruise Control
Buttons

Electronic Shifter

Memory Buttons

Passenger Screen ON/OFF

Passenger Screen

Light Controls

Electronic Range
Selector

4WD/Shift
Controls

AUX/USB Ports (C/A)

Parking Brake
Release

Hood Release

Integrated Trailer Brake
Controller

Wireless Charging Pad

Garage Door Opener

- 1 With the ignition in the ON/RUN position and the garage door open, hold the garage door transmitter 1-3 inches from the HomeLink® button you want to program.
- 2 Push and hold the HomeLink® button and the button on the garage door transmitter.
- 3 For **Non-Rolling Code** garage door openers, watch for the indicator light to go constant.

For **Rolling Code** garage door openers, watch for the indicator light to blink rapidly.
- 4 For **Rolling Code** garage door openers, push the "LEARN" or "TRAIN" button on your garage door opener, then push the HomeLink® button in your vehicle three times (holding for two seconds each time).
- 5 If programming was successful, your garage door will open and close with the HomeLink® button.

TO ERASE ALL SET CHANNELS:

Push and hold the two outside HomeLink® buttons until the indicator flashes.



ROLLING OR NON-ROLLING

Check your garage door opener motor in your garage for a "LEARN" or "TRAIN" button by the hanging antenna. If you have one of these, you have a Rolling Code garage door opener.



NEED ASSISTANCE?

1-800-355-3515

Scan For
HomeLink®
Video



Pair a Phone



Scan For
Phone Pairing
Video

- 1 Make sure Bluetooth® is enabled on your mobile device
- 2 With the vehicle in the ON/RUN position, press the Phone button on the vehicle's touchscreen menu bar
- 3 Press "Device Manager"
- 4 Press "Add Device"
- 5 Follow the prompts on your phone and on the touchscreen

Troubleshooting

- 1 Perform a reset by holding the power button on the radio for 15 seconds
- 2 Reboot your phone
- 3 Remove the paired phone
- 4 Follow the Pair a Phone steps above to set up phone



Scan For
Android™ Auto
Video



Scan For
Apple Carplay®
Video



Connected Services



ACTIVATE YOUR REMOTE SERVICES

WITH CONNECTED SERVICES YOU CAN...



Lock Your Vehicle



Unlock Your Vehicle



Remote Start Your Vehicle



Cancel Remote Start



Activate Your Horn



Mopar® YOUR Way

Get 24/7 access to everything you need, including custom vehicle dashboards, maintenance records, mobile vehicle commands and more. Scan the QR code to register.



Scan me
(U.S. Residents Only)*

*Canadian residents are not required to create a profile, as one is created when a Ram Connect account is activated.

Uconnect 5/5 NAV

Available Modes:


- **Home:** Customize the Home screen with widgets
- **Media:** Listen to the radio and play media
- **Navigation:** Search for and navigate to any destination
- **Comfort:** Adjust the vehicle's multiple climate systems
- **Phone:** Pair your smartphone and make hands-free calls
- **Vehicle:** Change vehicle settings
- **Apps:** Select from available apps

Voice Recognition

Use Your Voice To Control Uconnect To begin, push the Voice Recognition button on the steering wheel. If activated within Vehicle settings, you can also say the vehicle's "Wake Up" word, "Hey, Uconnect" or "Hey, Ram", without pushing any buttons.



Swipe down to customize Profile options

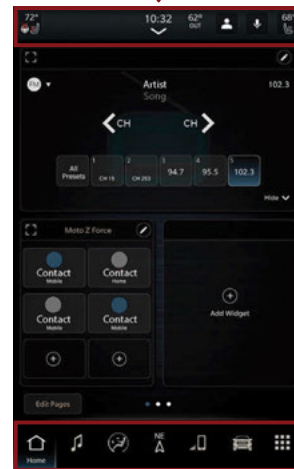

Press and drag an icon to rearrange

Scan For
Radio Video



Scan For
Navigation
Video



Scan For Voice
Recognition
Video



Advanced Driver Assistance Systems

Scan the QR codes for instructional videos on these Advanced Driver Assistance systems.



Turn the **Forward Collision Warning system** on or off, and adjust the sensitivity and active braking status through your radio.



Adjust your **Active Lane Management** strength and sensitivity settings through your radio.



Adaptive Cruise Control Video




Use your radio to choose between three **Blind Spot Monitoring system** modes:

- Blind Spot Alert Lights Only
- Blind Spot Alert Lights/Chime
- Blind Spot Alert Off

Trailer Merge Assist extends the blind spot alert zone when it senses your vehicle is pulling a trailer. You can select between Automatic and Maximum modes in your radio. This feature is NOT available with fifth-wheel or gooseneck trailers.



ParkSense Visual Warnings

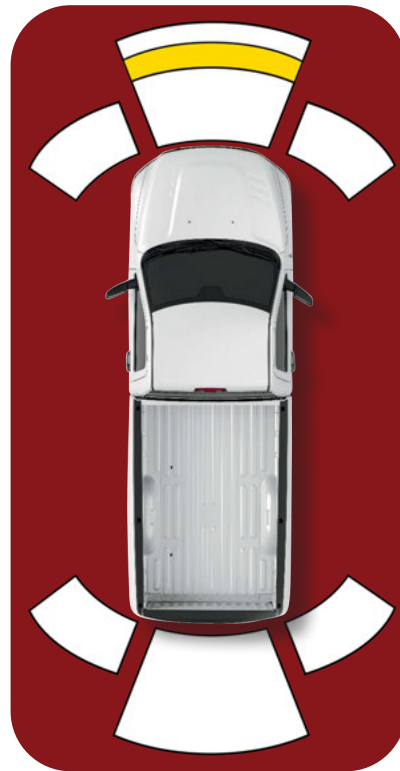

When the sensors detect an obstacle, a chime will sound and the ParkSense Park Assist warning will appear in the instrument cluster display. The system will show arcs in the area of the obstacle based on relative distance and location. As you approach the obstacle, the arcs will move and the chime will change from slow to fast to continuous.

KEEP IN MIND:

The front sensors can detect obstacles from 12 to 47 inches and the rear sensors from 12 to 79 inches from the bumpers.

Scan For
ParkSense Video



Trailer Light Check

Available in Uconnect System under the Trailer Tow pages. Once activated, the light check enables all of the exterior lights sequentially for up to five minutes.

The following conditions must be met for activation:

- Vehicle is equipped with the Trailer Brake Control
- Vehicle is in PARK
- Ignition is in ACC or ON/RUN
- Remote Start is not active
- Brakes are not applied
- Turn signals are not applied
- Hazard lights are not on

Camera Systems

Available Camera Features:

- Rear Back Up Camera
- Surround View Camera
- Trailer Surround View
- Auxiliary Cameras



Pressing the **Trailer Reverse Guidance** button provides a full screen view of the cargo area and trailer.



Pressing the **Left & Right Tow Mirror Split Screen View** button within the Trailer Reverse Guidance screen displays a split screen view of both sides of the trailer.


Scan For Camera Systems Video



Instrument Cluster

Your vehicle may be equipped with a 12-inch Digital Cluster. The tiles on the full-color 3D display can be cycled and customized using the steering wheel controls.

Diesel Cluster Shown

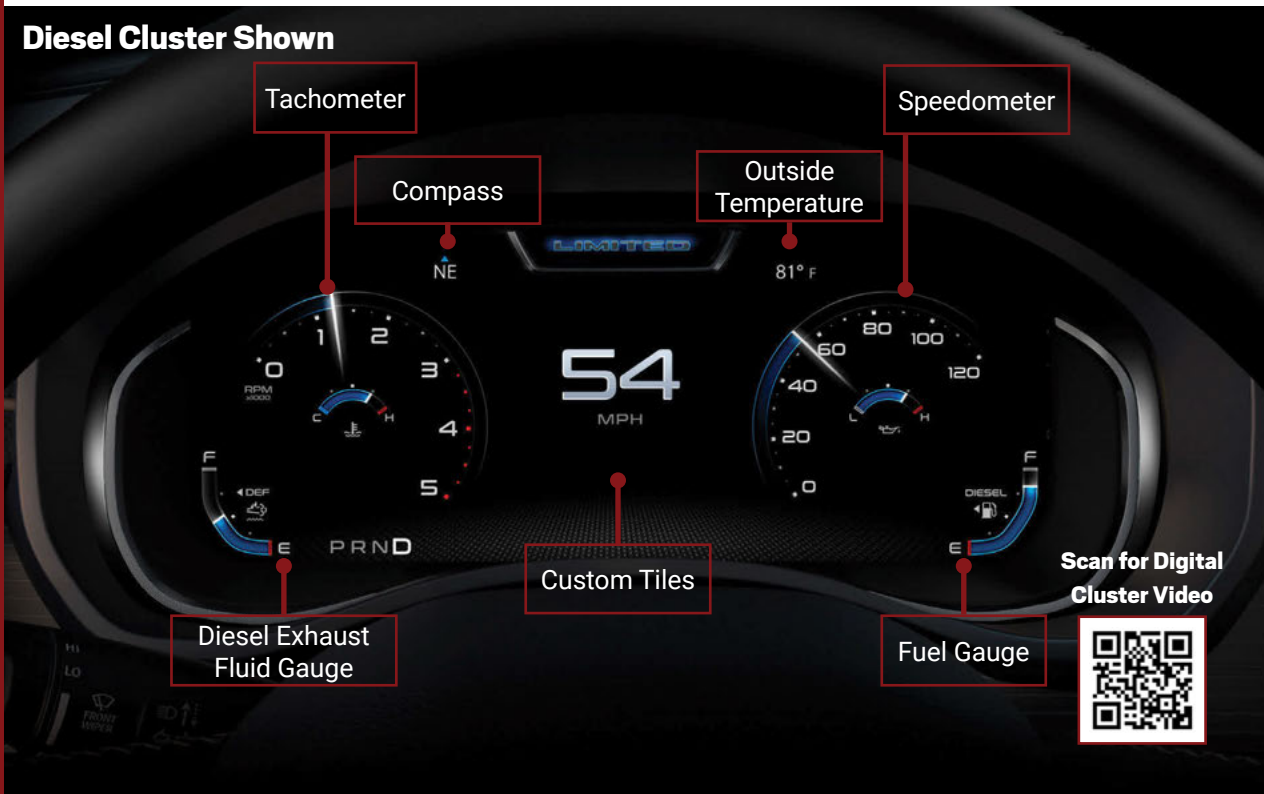

Diesel Exhaust Fluid (DEF)

Your vehicle is equipped with a Diesel Exhaust Fluid (DEF) injection system and a Selective Catalytic Reduction (SCR) catalyst to meet emission requirements.

The DEF gauge on the instrument cluster will display the level of DEF remaining in the tank.

DEF FILL LOCATION

REMOVE CAP TO
ADD FLUID

During the filling process,
there can be a delay in the
cluster gauge indicator
showing full.

**Do not continue to
top off the tank after
it has been filled.**



CAUTION:




Always use care when adding fluids. Do not start the engine if any quantity of DEF is added to the fuel tank as it will result in severe engine damage.

Scan for Diesel
Exhaust Fluid
Video



Digital Rearview Mirror

PROVIDES A HIGH DEFINITION AND UNOBSTRUCTED VIEW OF THE ROAD BEHIND

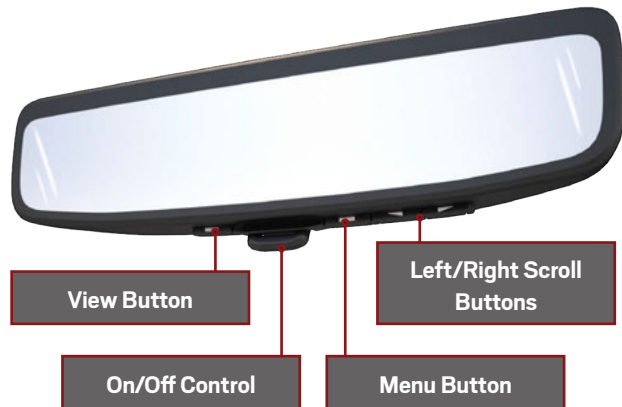

TO ACTIVATE:

Pull the control on the bottom of the mirror toward the driver.

Menu Options

- Brightness
- Tilt (up/down)
- Pan (left/right)
- Zoom

View Options

- Rearview Camera
- Split Screen
- Tri-View Tow Mode
- Tow Mode

TO DEACTIVATE:

Push the control on the bottom of the mirror forward toward the windshield. The mirror will return to the regular Automatic Dimming Mirror.

TOW MODE:

An auxiliary trailer camera can be mounted on the rear of a trailer. When connected, the display in the Digital Rearview Mirror automatically switches to the trailer camera. Your vehicle may also include additional cameras in the outside mirrors, which will allow you to use Split Screen and Tri-View Tow Mode views.

To return to the rearview camera display, toggle through the menu options using the control buttons on the mirror.

Digital Rearview Mirror



KEEP IN MIND:

The Digital Rearview Mirror is not as effective during night time driving in low light applications due to low ambient light levels. In the event that it provides the user with less than expected vision, the mirror can be reverted to a normal reflective Automatic Dimming Mirror by pushing the on/off control lever toward the windshield and putting the mirror into Automatic Dimming Mirror mode.

Wireless Charging Pad

The wireless charging pad is equipped with an anti-slip mat to hold your mobile phone in place, and an LED indicator light.



No Light: Charging pad is idle or searching for a device.



Blue Light: Device is detected and is charging.



Red Light/Flashing: Internal error, or foreign object is detected.



Green Light: Device has completed battery charging.
(If device is equipped to transmit this information).

KEEP IN MIND:

- The charging pad will not work if any door is open, regardless if the engine is running.
- Having multiple applications open on the phone will reduce charging efficiency.
- In the event the phone starts to overheat, the phone may shut down during the charging process.
- For the wireless charging pad to work properly, remove the phone's protective case and place within the outline shown on the pad.

Scan For
Wireless Charging
Pad Video



For the wireless pad to work properly

Remove the phone's protective case and place the phone within the outline shown on the pad.

Driver Memory Settings

PROGRAMMING A MEMORY PROFILE:

Save up to two memory profiles for the driver and front passenger seats.

- Seat position
- Easy Entry/Exit seat*
- Side mirrors*
- Power tilt/telescoping steering column*
- Radio station presets*

*Driver memory settings only

1

1 Place the vehicle in the ON position

S

2 Adjust all memory profile settings to desired preferences

2

3 Push and release the Set (S) button on the memory switch

4 Within five seconds, push and release either of the memory buttons (1) or (2)

Scan For
Memory
Settings Video



Power Mirrors & Utility Lights

Power Mirrors

Customize your mirror settings with ease using the advanced features: power telescoping, power convex, and power-folding.

Forward Utility Lights and Rear Guidance Lights

These switches activate the forward or reverse lights located on the driver and passenger side mirrors.

Forward
Utility Light



Rear
Guidance Light

Telescoping
Mirror



Convex
Mirror

Scan For
Exterior
Mirrors Video



Warning & Indicator Lights

	Air Bag		Battery Charge		Brake		Door Open		Electronic Throttle Control (ETC)
	Engine Coolant Temperature		Hood Open		Oil Pressure		Oil Temperature		Seat Belt Reminder
	Trailer Brake Disconnected		Transmission Temperature		Vehicle Security		4WD HIGH		4WD LOCK
	4WD LOW		Adaptive Cruise Control (ACC) Fault		Air Suspension Alternate Trailer Height		Air Suspension Bed Lowering Mode		Air Suspension Fault
	Air Suspension Payload Protection		Air Suspension Ride Height Lowering		Air Suspension Ride Height Raising		Anti-Lock Brake System (ABS)		Cargo Light
	Cold Ambient Derate Mode		Cruise Control Fault		Diesel Exhaust Brake		Electronic Stability Control (ESC) Active		Electronic Stability Control (ESC) OFF
	Engine Check/Malfunction		Forward Collision Warning (FCW) OFF		Front And Rear Axle Lock		Active Lane Management		Loose Fuel Filler Cap
	Low Coolant Level		Low Diesel Exhaust Fluid (DEF)		Low Fuel		Low Washer Fluid		NEUTRAL
	Rear Axle Lock		Rear Axle Locker Fault		SERVICE 4WD		Service Forward Collision Warning (FCW)		Service Active Lane Management
	Snowplow Mode		SWAY BAR		SWAY BAR Fault		Tire Pressure Monitoring System (TPMS)		TOW/HAUL
	Trailer Merge Assist		Wait To Start		Water In Fuel		Adaptive Cruise Control (ACC) Set With No Target		Adaptive Cruise Control (ACC) Set With Target
	Automatic Diesel Exhaust Brake		Cruise Control Set		ECO Mode		Front Fog Lights		Parking/Headlights
	Turn Signal		Adaptive Cruise Control (ACC) Ready		Cruise Control Ready		Hill Descent Control (HDC)		High Beam

RAM Customer Assistance: (866) 726-4636 (US), (800) 465-2001 (CANADA)

Your vehicle may be equipped with different features than shown in this guide.

For additional information on any of the topics in this publication, please refer to your digital Owner's Manual.

©2026 FCA US LLC. All Rights Reserved. Tous droits réservés. Ram is a registered trademark of FCA US LLC. Ram est une marque déposée de FCA US LLC. App Store is a registered trademark of Apple Inc. Google Play Store is a registered trademark of Google.

Fourth Edition
25_DJD2_QSG_EN_USC