



2022 Pacifica Hybrid

SUPPLEMENT





CHRYSLER



TABLE OF CONTENTS

| | | |
|---|---|----|
| 1 | INTRODUCTION..... | 4 |
| 2 | GETTING TO KNOW YOUR VEHICLE | 7 |
| 3 | GETTING TO KNOW YOUR INSTRUMENT PANEL | 27 |
| 4 | STARTING AND OPERATING | 38 |
| 5 | SAFETY | 49 |
| 6 | IN CASE OF EMERGENCY | 57 |
| 7 | SERVICING AND MAINTENANCE | 60 |
| 8 | TECHNICAL SPECIFICATIONS | 79 |
| 9 | INDEX..... | 82 |

1

2

3

4

5

6

7

8

9

INTRODUCTION

| | |
|------------------------------|----------|
| SYMBOLS KEY | 5 |
| SYMBOL GLOSSARY | 5 |

GETTING TO KNOW YOUR VEHICLE

| | |
|--|-----------|
| HIGH VOLTAGE BATTERY | 7 |
| Battery Conditioning..... | 8 |
| HIGH VOLTAGE CHARGING OPERATION | 8 |
| SAE J1772 Charging Inlet..... | 8 |
| AC Level 1 Charging | |
| (120 Volt, 12 Amp)..... | 8 |
| AC Level 2 Charging | |
| (240 Volt, 32 Amp)..... | 16 |
| Charging Times..... | 16 |
| Vehicle Charge Indicators..... | 17 |
| Hybrid Electric App..... | 18 |
| IGNITION SWITCH | 20 |
| REMOTE START SYSTEM — IF EQUIPPED | 22 |
| How To Use Remote Start..... | 23 |
| To Exit Remote Start Mode | 23 |
| Scheduled Cabin Conditioning (SCC)..... | 24 |
| HOOD | 25 |
| Opening..... | 25 |
| Closing..... | 26 |

GETTING TO KNOW YOUR INSTRUMENT PANEL

| | |
|---|-----------|
| INSTRUMENT CLUSTER | 27 |
| Instrument Cluster Descriptions | 28 |
| INSTRUMENT CLUSTER DISPLAY | 28 |
| Instrument Cluster Display Location And | |
| Controls..... | 29 |
| Oil Life Reset | 30 |
| Fuel And Oil Refresh Mode..... | 30 |
| Instrument Cluster Messages — | |
| If Equipped..... | 31 |
| Instrument Cluster Display Menu Items | 32 |
| Battery Saver On/Battery Saver Mode | |
| Message — Electrical Load Reduction | |
| Actions — If Equipped..... | 35 |
| WARNING LIGHTS AND MESSAGES | 36 |
| Red Warning Lights..... | 37 |
| Green Indicator Lights | 37 |

STARTING AND OPERATING

| | |
|--------------------------------------|-----------|
| STARTING THE VEHICLE | 38 |
| Normal Starting..... | 38 |
| AutoPark | 39 |
| After Starting | 41 |
| To Turn Off The Vehicle Using ENGINE | |
| START/STOP Button..... | 41 |

| | |
|---|-----------|
| AUTOMATIC TRANSMISSION | 42 |
| Ignition Park Interlock..... | 43 |
| Brake/Transmission Shift Interlock (BTSI) | |
| System | 43 |
| Hybrid Transmission | 43 |
| Gear Ranges..... | 44 |
| REFUELING THE VEHICLE | 46 |
| TRAILER TOWING | 48 |

SAFETY

| | |
|---|-----------|
| SAFETY FEATURES | 49 |
| Regenerative Braking System (RBS) | 49 |
| Audible Pedestrian Warning System | 49 |
| OCCUPANT RESTRAINT SYSTEMS | 49 |
| Seat Belt Systems | 49 |
| Supplemental Restraint Systems (SRS)..... | 51 |
| Child Restraints..... | 51 |

IN CASE OF EMERGENCY

| | |
|-----------------------------------|-----------|
| JUMP STARTING | 57 |
| Preparations For Jump Start | 58 |
| Jump Starting Procedure..... | 58 |

SERVICING AND MAINTENANCE

| | |
|--|-----------|
| SCHEDULED SERVICING | 60 |
| Maintenance Plan | 61 |
| ENGINE COMPARTMENT — HYBRID | 64 |
| VEHICLE MAINTENANCE | 65 |
| Cooling System | 65 |
| Fuses..... | 68 |
| TIRES | 77 |
| Snow Traction Devices | 77 |
| STORING THE VEHICLE | 78 |

TECHNICAL SPECIFICATIONS

| | |
|--|-----------|
| FLUID CAPACITIES | 79 |
| ENGINE FLUIDS AND LUBRICANTS | 80 |
| CHASSIS FLUIDS AND LUBRICANTS | 81 |
| GENERAL INFORMATION | 81 |

INTRODUCTION

Dear Customer,

This Hybrid Supplement has been prepared with the assistance of service and engineering specialists to acquaint you with the operation and maintenance of your vehicle. Within this information, you will find a description of the hybrid services that FCA US LLC offers to its customers. Please take the time to read all of this publication carefully before driving your vehicle for the first time. Following the instructions, recommendations, tips, and important warnings in this manual will help ensure safe and enjoyable operation of your vehicle. For additional information, refer to your vehicle's Owner's Manual.

Following the instructions and recommendations provided herein will help ensure safe and reliable operation of your vehicle. After you have read the booklet, it should be stored in the vehicle for convenient reference and remain with the vehicle when sold.

When it comes to service, remember that authorized dealers know your Chrysler best, have factory-trained technicians, genuine Mopar® parts, and care about your satisfaction.

SYMBOLS KEY

| | |
|---|--|
| WARNING! | These statements are against operating procedures that could result in a collision, bodily injury and/or death. |
| CAUTION! | These statements are against procedures that could result in damage to your vehicle. |
| NOTE: | A suggestion which will improve installation, operation, and reliability. If not followed, may result in damage. |
| TIP: | General ideas/solutions/suggestions on easier use of the product or functionality. |
| PAGE REFERENCE ARROW  page | Follow this reference for additional information on a particular feature. |
| FOOTNOTE  | Supplementary and relevant information pertaining to the topic. |

If you do not read the entire Owner's Manual, you may miss important information. Observe all Cautions and Warnings.

SYMBOL GLOSSARY

Some car components have colored labels with symbols indicating precautions to be observed when using this component. It is important to follow all warnings when operating your vehicle. See below for the definition of each symbol → page 36.

NOTE:

Warning and Indicator lights are different based upon equipment options and current vehicle status. Some telltales are optional and may not appear.

| Red Warning Lights | |
|---|---|
|  | Hybrid Electric Vehicle System Service Light → page 37 |
|  | Plug Status Fault Warning Light → page 37 |
|  | Torque Limited Warning Light → page 37 |
| Green Indicator Lights | |
|  | Max Regeneration Indicator Light → page 37 |

Green Indicator LightsThe icon is a black square with the word "READY" in white, bold, uppercase letters.

Ready To Drive Indicator Light
→ page 37

Green Indicator Lights

Plug Status Indicator Light
→ page 37

GETTING TO KNOW YOUR VEHICLE

HIGH VOLTAGE BATTERY

Your vehicle is equipped with a Lithium-ion high voltage battery that is used to power the electric powertrain systems and the 12 Volt vehicle electrical system.

The high voltage battery is located under the middle section of the vehicle, below and in front of the second row seating. The high voltage battery is maintenance free and designed to last for the life of the vehicle.

Lithium-ion batteries provide the following benefits:

- Lithium-ion batteries are much lighter than other types of rechargeable batteries of the same size.
- Lithium-ion batteries hold their charge; they only lose approximately three percent of their charge per month.
- Lithium-ion batteries have no memory, which means that you do not have to completely discharge them before recharging, as with some other batteries.
- Lithium-ion batteries can be recharged and discharged thousands of times.

High Voltage Battery Service Disconnect

The high voltage battery service disconnect is located under the access panel, in front of the second row passenger seating.

If your vehicle requires high voltage battery service, see an authorized dealer.

WARNING!

Never try to remove the high voltage battery service disconnect. The high voltage battery service disconnect is used when your vehicle requires service by a trained technician at an authorized dealer. Failure to follow this warning can cause severe burns or electrical shock that may result in serious injury or death.

Disposal of the High Voltage Battery

Your vehicle's high voltage battery is designed to last the life of your vehicle. See an authorized dealer for information on the disposal of the battery if it should require replacement.

General Information

The vehicle is also equipped with a Battery Management system that is designed to:

- Ensure safe operation
- Maximize driving range
- Maximize the life expectancy of the high voltage battery

NOTE:

- During vehicle start up and shut down, a clicking noise may be heard from within the vehicle. When the ignition is in the ON/RUN position, the high voltage battery contactors inside the battery are closed to make the stored electricity inside available for vehicle use. The clicking noise is the sound of these contactors as they open and close during normal operation.
- The Audible Pedestrian Warning system will emit a noise from the front of the vehicle when driving forward at speeds below 22 mph (35 km/h). It will also emit a noise from the rear of the vehicle when in REVERSE, and from both the front and rear of the vehicle when in NEUTRAL. For more information on this system, see [page 49](#).

BATTERY CONDITIONING

In extreme temperatures, high or low, the high voltage battery may need to be conditioned, and therefore may require the vehicle to be plugged in.

If the ambient temperature is 5 °F (-15 °C) or below at vehicle shut down, the instrument cluster will display the message “Plug In Vehicle To Condition Battery”.

If the battery temperature is below -22 °F (-30 °C), or 131 °F (55 °C) or above, the vehicle will NOT start:

- If the vehicle is plugged in at these battery temperatures, the instrument cluster will display the message “Please Leave Key In RUN — Battery Conditioning Needed”.
- If the vehicle is not plugged in at these battery temperatures, the “Plug In Vehicle To Condition Battery” will be shown in the instrument cluster display.
- If the battery temperature is below -27 °F (-33 °C), the message “Please Leave Key In RUN — Battery Conditioning Needed” will be displayed whether the vehicle is plugged in or not.

NOTE:


- When the “Please Leave Key In RUN — Battery Conditioning Needed” message is displayed, keep the ignition in the RUN position for the battery to recover. Place the ignition back in the OFF position when the message disappears, and then start the vehicle. When this message is displayed, do not operate any air conditioning controls.
- Under these high or low temperatures, if the vehicle is plugged in, and the ignition is in the OFF position, the vehicle may “wake up” to precondition the high voltage battery for use.
- It is recommended that the vehicle be plugged in overnight when possible to maximize the electric range of the vehicle.

The messages will only be displayed when the ignition is in the ON/RUN position and the high voltage battery is not ready to provide propulsion power. The message also displays if there is a failed attempt to achieve READY state when the high voltage battery cell temperatures are either too cold, or too hot.

HIGH VOLTAGE CHARGING OPERATION

SAE J1772 CHARGING INLET

Your vehicle uses an industry standard SAE J1772 charge inlet (vehicle charge inlet) for both AC Level 1 (120 V) and AC Level 2 (240 V) charging.

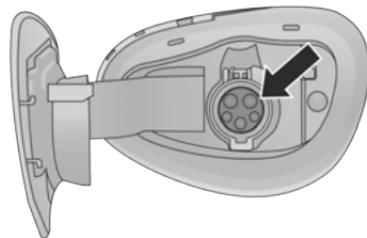

A0202000038US

Vehicle Charge Inlet

AC LEVEL 1 CHARGING (120 VOLT, 12 AMP)

Your vehicle is equipped with a 120 Volt AC, SAE J1772 Level 1 Electric Vehicle Supply Equipment (EVSE), also referred to as a charging cordset. AC Level 1 charging requires a conventional NEMA 5-15R 120 Volt AC grounded wall receptacle along with the portable charging cordset provided with the vehicle.



A0202000008US

Portable Charging Cordset (EVSE)


WARNING!

INSTRUCTIONS PERTAINING TO A RISK OF FIRE OR ELECTRIC SHOCK: Shock, fire, property damage, or personal injury may occur if the Portable EVSE Cordset is not used properly. There are no serviceable parts contained in the Portable EVSE Cordset. Any attempt to service it may result in shock, fire, property damage, or personal injury.

To access the portable charging cordset, open the door of the cargo area storage bin, on the driver's side, and remove the charging cordset from the storage bag.

NOTE:

After use, the EVSE should be placed in the storage bag and put back in the cargo area storage bin. If the charging cordset will be left outside the vehicle, be sure to protect the charging cordset's vehicle connection end from moisture, dirt, and debris accumulation and contamination.

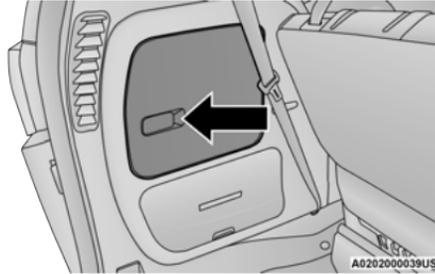

A0202000008US

Cargo Area Storage Bin

NOTE:

The portable charging cordset is used for AC Level 1 charging only.

WARNING!**IMPORTANT SAFETY INSTRUCTIONS PERTAINING TO A RISK OF FIRE OR ELECTRIC SHOCK:**

This manual contains important instructions that should be followed during installation, operation, and maintenance of the unit. When using electric products, basic precautions should always be followed, including the following:

- Read all instructions before using this product.
- Do not put fingers or objects into the Charge Connector.
- Do not use this product if the flexible power cord or EVSE cable is frayed, broken, has cracked insulation or any other signs of damage.
- Do not use this product if the enclosure or the Charge Connector is broken, cracked, open, or shows any other indication of damage.
- Do not use Portable EVSE Cordset with an extension cord. Use of an extension cord may cause burns, fire, or other damage or injury.
- This device may attempt to reset and run after a power interruption.

(Continued)

WARNING!

- There are no user serviceable parts inside the AC Level 1 charging cordset. Do not attempt to repair or service the charging cordset yourself – personal injury may result.
- When using a charging station with the charging cable attached, ensure the cable is not visibly damaged before plugging into the vehicle.
- Do not allow children to operate this device. Adult supervision is mandatory when children are in proximity to a charge station that is in use.
- Do not use a charge station or vehicle receptacle that is worn or damaged with the AC Level 2 charging cable. Plugging into worn or damaged receptacles may cause damage to the EVSE and vehicle.
- Ensure that the EVSEs are always stored in a safe place. Do not expose the EVSE J1772 Vehicle Connector to rain or wet conditions. Avoid allowing water or other liquids to pour or drip on to the vehicle connection end of the J1772 EVSE connector. If water penetrates the electrical device, the risk of electrical shock increases. Ensure that all plugs and cables are free of moisture before using the EVSEs.


*(Continued)***WARNING!**

- The EVSE has been tested for use in temperatures ranging from -40° F to 122° F (-40° C to 50° C).
- The EVSE should be stored at temperatures between -40° F and 176° F (-40° C and 80° C).
- **SAVE THESE INSTRUCTIONS.**

EVSE Charging Cordset

The EVSE charging cordset is compliant with SAE J1772, and applicable for use with vehicles fitted with standard SAE J1772 charge inlets. The EVSE includes:

- A Charge Connector
- A NEMA 6 rated enclosure with a Charge Current Interrupt Device (CCID) and a status indicator display
- An AC Power Cord with NEMA 5-15P right angle plug
- An indoor/outdoor charge cable, EV-rated
- A Status Indicator Display

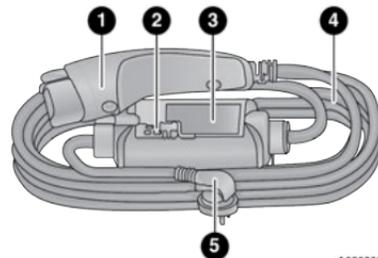

A020200009US

Charging Cordset


- 1 – Charge Connector
- 2 – Status Indicator Display
- 3 – Charging Cordset Enclosure
- 4 – Charge Cable
- 5 – AC Plug

GROUNDING INSTRUCTIONS**For A Grounded, Cord-Connected Product:**

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for an electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

WARNING!

INSTRUCTIONS PERTAINING TO A RISK OF FIRE OR ELECTRIC SHOCK: Improper connection of the equipment-grounding conductor could result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the wall receptacle is properly grounded. Do not modify the plug provided with the product – if it does not fit the outlet, you must have a proper outlet installed by a qualified electrician.

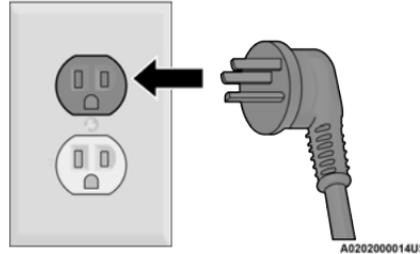

AC Plug And Wall Receptacle

WARNING!

INSTRUCTIONS PERTAINING TO A RISK OF FIRE OR ELECTRIC SHOCK: Improper connection of the equipment-grounding conductor could result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the wall receptacle is properly grounded. Do not modify the plug provided with the product – if it does not fit the outlet, you must have a proper outlet installed by a qualified electrician.


Charging Cordset Operation

1. Insert the AC plug of the charging cordset into a 15 A, or 20 A, 120 VAC, 60 Hz, grounded wall receptacle. Do not use an extension cord, outlet/plug adapter, or a worn outlet. The charging cordset will not operate safely unless it is plugged directly into the wall receptacle.

NOTE:

The EVSE should be plugged into a dedicated circuit, not a circuit shared with other devices drawing electricity on the circuit.


2. Check to see if the charging cordset is ready to charge by reviewing the indicator lights. After a brief self-check, where the indicator lights will flash, a green AC Power indicator light and two green Charge Active indicator lights indicate that the cordset is ready for use.

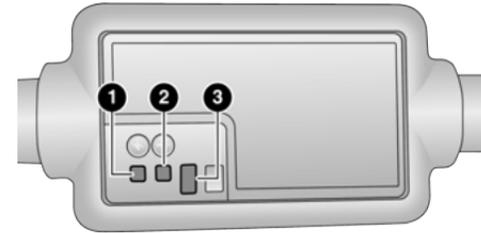

Cordset Indicator Lights

- 1 – AC Power Indicator Light
- 2 – Fault Indicator Light
- 3 – Charge Active Indicator Lights

- If the charging cordset is ready to charge, ensure the vehicle is in PARK, and then connect the charge connector to the vehicle's charge inlet. You will hear a "click" when the charge connector is inserted correctly and coupled with the vehicle's charge inlet.

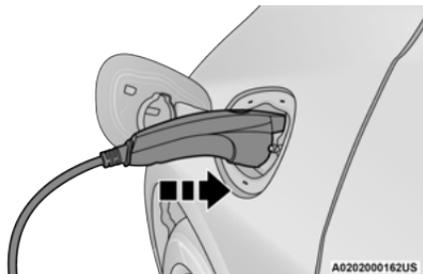

Inserting The Charge Connector Into The Vehicle Charge Inlet


- When the vehicle commences charging, the Charge Active indicator lights on the EVSE will cycle from left to right, and then both turn off. This pattern will repeat while the vehicle is charging. The lights are illuminated at the rate of approximately one cycle per second.

NOTE:

The vehicle should start charging automatically. If not, please check the following:

- **Charging Cordset** — The charging cordset status indicators illuminate green or red to identify the charging cordset status → page 13.
- **Wall Receptacle** — Check whether the wall receptacle is functional (no power outage) and/or plug the charging cordset into a different wall receptacle.
- **Charging Schedule** — Check whether or not the charging schedules have been enabled. If enabled, check that you are within the scheduled time and day of the week. If a charging schedule has been enabled in the vehicle, and it is outside the time and day of the week, you may override the schedule for this charging event by plugging in the charge connector, unplugging it, and then plugging it back into the vehicle charge inlet. Complete the double plug sequence within 10 seconds for it to override the set schedule.
- **Hood Ajar** — Check whether the hood is open. Charging is disabled while the hood is open, and will resume when the hood closes.

- To stop the charging process, disconnect the vehicle side connector first and then the charging cordset from the wall receptacle. To disengage the vehicle coupler, push the button on the charge connector first and then remove the connector from the vehicle charge inlet.

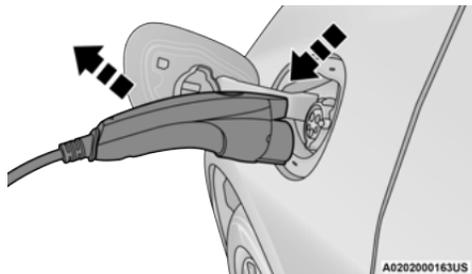

Removing The Charge Connector From The Vehicle Charge Inlet

- Close the inlet door when an EVSE is not connected to the vehicle.

NOTE:

It is good practice to keep the ignition in the OFF position while conducting Level 1 charging. This minimizes any additional vehicle loads the EVSE has to support. The additional electrical loads will extend the high voltage battery charging time.

Troubleshooting Using The Status Indicator Display

If the vehicle is not charging properly, consult the status indicator lights.

The **AC Power Indicator** displays the status and safety of the input power. If this indicator is green, the power is within acceptable limits to charge the vehicle. If only the AC Power Indicator is flashing red, then there is a problem with the AC power at the electrical outlet. If the AC Power Indicator does not return to green, then the outlet should be inspected by a licensed electrician to ensure the voltage, frequency, and grounding are compliant to national and local electrical codes and ordinances. It may be possible to attempt charging from a different outlet.

The **Fault Indicator** displays the status of the Portable EVSE Cordset and the vehicle connection. The Portable EVSE Cordset will not allow charging

while the fault indicator is red. If it is off, the Portable EVSE Cordset has not detected any internal faults, or faults with the vehicle connection. If the Fault Indicator is flashing red, there is a fault detected either with the Portable EVSE Cordset, electronics, or with the vehicle connection. The Portable EVSE Cordset may attempt to retry to provide current to the vehicle if the fault is cleared. If the Portable EVSE Cordset does not attempt to provide charge to the vehicle, the charge connector will need to be removed from the vehicle to clear the fault.

The fault code list in the following table provides a reference for the important faults that are detected by the Portable EVSE Cordset. When a fault is detected, the AC Power Indicator, the Fault Indicator, or both the AC Power and Fault Indicators will flash red. If only the AC Power Indicator is red, there is a problem on the AC Power side of the unit. If only the Fault Indicator is

flashing red, there is a problem internal to the unit or with the vehicle. If both the AC Power and Fault Indicators are flashing red, an over temperature condition is detected at either the AC plug or within the EVSE enclosure. Additional information about the faults is provided by a fault code that is displayed on the two green Charge Active Indicators. The fault code consists of four digits, each with a value of 1 or 2. The value of a digit is the number of indicators illuminated for that part of the sequence. For example, fault code (1, 2, 1, 1) will display the following sequence: One indicator will illuminate for 0.3 seconds, then two indicators will illuminate, then one indicator, and finally one indicator will illuminate. After all four fault code digits have been displayed, the indicators will remain off for one second before repeating the sequence.

2

Portable EVSE Cordset Fault Code List

| Flashing Fault Code | Flashing Indicator | Fault Indication | Recommended Actions |
|---------------------|--------------------|----------------------------------|---|
| 1, 2, 2, 2 | AC Power | Vehicle Current Draw is Too High | Check Portable EVSE Cordset and vehicle at a service location. |
| 1, 1, 2, 1 | AC Power | Incorrect Electrical Supply | Attempt to charge the vehicle at a different outlet. Contact a certified electrician to check the electrical outlet and AC Supply (house wiring). |
| 1, 1, 2, 2 | AC Power | Incorrect Electrical Supply | Attempt to charge the vehicle at a different outlet. Contact a certified electrician to check the electrical outlet and AC Supply (house wiring). |

| Portable EVSE Cordset Fault Code List | | | |
|--|---------------------------|---|--|
| Flashing Fault Code | Flashing Indicator | Fault Indication | Recommended Actions |
| 1, 2, 1, 1 | AC Power | Incorrect Electrical Supply | Attempt to charge the vehicle at a different outlet. Contact a certified electrician to check the electrical outlet and AC Supply (house wiring). |
| 1, 2, 1, 2 | AC Power | Incorrect Electrical Supply | Attempt to charge the vehicle at a different outlet. Contact a certified electrician to check the electrical outlet and AC Supply (house wiring). |
| 1, 1, 1, 1 | Fault | Portable EVSE Cordset Internal Fault | Unplug the Portable EVSE Cordset from the vehicle charge inlet and retry to charge. If the issue is not corrected, check the Portable EVSE Cordset and vehicle at a service location. |
| 1, 1, 1, 2 | Fault | Portable EVSE Cordset Internal Fault | Unplug the Portable EVSE Cordset from the vehicle charge inlet and retry to charge. If the issue is not corrected, check the Portable EVSE Cordset and vehicle at a service location. |
| 1, 2, 2, 1 | AC Power | Outlet Wiring Bad Ground | Attempt to charge the vehicle at a different outlet. Contact a certified electrician to check the electrical outlet and AC Supply (house wiring). |
| 1, 2, 1, 1 | Fault | Portable EVSE Cordset Internal Fault | Check Portable EVSE Cordset and vehicle at a service location. |
| 1, 2, 1, 2 | Fault | CCID Leakage Current Detected | Disconnect charge connector and retry charging. If problem persists, check the Portable EVSE Cordset and vehicle at a service location. |
| 2, 2, 2, 1 | Fault | Vehicle Interface Connector | Error with the Vehicle Charge Connector Interface – Check for water or other contamination in the vehicle charge inlet or charge connector. |
| 2, 2, 2, 2 | Fault | Vehicle Interface Connector | Error with the Vehicle Charge Connector Interface – Check for water or other contamination in the vehicle charge inlet or charge connector. |
| 1, 1, 2, 1 | Fault & AC Power | EVSE Enclosure Internal Temperature is Too High | Use caution as the Portable EVSE Cordset housing may be hot. It is recommended to move the Portable EVSE Cordset out of direct sun exposure. Allow the unit to cool. If error persists, check the Portable EVSE Cordset at a service location. |

| Portable EVSE Cordset Fault Code List | | | |
|---------------------------------------|--------------------|--------------------------------|--|
| Flashing Fault Code | Flashing Indicator | Fault Indication | Recommended Actions |
| 1, 1, 1, 2 | Fault & AC Power | Hot AC Power Plug Warning | Use caution as the Portable EVSE Cordset AC Power Plug may be hot. It is recommended to carefully unplug the unit from the wall outlet and allow it to cool down. Attempt to charge the vehicle at a different wall outlet. Contact a certified electrician to inspect/replace the wall outlet that was associated with the Hot AC Plug event. Charging will still occur, but at a reduced rate. |
| 1, 1, 1, 1 | Fault & AC Power | AC Power Plug Over Temperature | Use caution as the Portable EVSE Cordset AC Power Plug may be hot. It is recommended to carefully unplug the unit from the wall outlet and allow it to cool down. Attempt to charge the vehicle at a different outlet. Contact a certified electrician to inspect/replace the outlet that was associated with the Hot AC Plug event. |

Guidelines for preventing fire and electric shock:

- Ensure the charging cable is positioned so it will not be stepped on, tripped over, or otherwise subjected to damage or stress.
- There are no user serviceable parts inside.
- Do not use the charging cordset if it is visibly damaged. Contact an authorized dealer for service.
- Do not place fingers, or any other objects inside the charge connector.

- Do not allow children to operate this device. Adult supervision is mandatory when children are in proximity when the charging cordset is in use.
- Do not use the charging cable with an extension cord.

NOTE:

During normal operation, the charge connector or AC plug may feel warm. If either one feels hot during charging, unplug the charging cordset and have a qualified electrician inspect the wall receptacle before you continue charging → page 81.

WARNING!

INSTRUCTIONS PERTAINING TO A RISK OF FIRE OR ELECTRIC SHOCK: Do not use the charging cordset with a receptacle that is worn or damaged. Using the charging cordset with a worn or damaged receptacle may cause burns or start a fire.

AC LEVEL 2 CHARGING (240 VOLT, 32 AMP)

AC Level 2 (240 V) charging requires a 240 V, Level 2 EVSE (Charging station). A 32 Amp Level 2 EVSE for home installation is recommended.

When using public charging stations, ensure the charging station is ready to provide charge and the vehicle is in PARK before the charge connector is plugged into the vehicle's charge inlet. You will hear a "click" when the charge connector is inserted correctly and is coupled with the vehicle's charge inlet. The vehicle should start charging automatically. If not, please check the instructions at the charging station.

NOTE:

The vehicle should start charging automatically. If not, please check the following:

- Charging Station — Check the indications and instructions at the charging station.
- Charging Schedule — Check whether the charging schedule is enabled and if so, whether the vehicle is currently within the scheduled charge time/day (weekday/weekend). If the charging schedule is enabled within the vehicle, you may override it for this charging event by plugging in the charge connector, unplugging it, and then plugging it back into the vehicle charge

inlet. Complete the double plug sequence within 10 seconds for it to override the set schedule.

- Hood Ajar — Check whether the hood is open. Charging is disabled while the hood is open, and will resume when the hood closes.

To stop the charging process:

- Press the "STOP" button located on the front of the EVSE station.
- Press the button on the charge connector first and then remove the connector from the vehicle charge inlet.
- Plug the charge handle into the EVSE station and coil the charging cord onto its holder. Do not leave the charging cord lying on the ground.

CHARGING TIMES

The following factors determine the time it takes to charge the high voltage battery:

- The high voltage battery's current state of charge
- The type of EVSE used (Level 1 - 120 V or Level 2 - 240 V)
- Ambient temperature
- Whether the vehicle is ON during charging

NOTE:


- The following charging times are estimates based on charging a high voltage battery that has a <1% State Of Charge (SOC) value displayed in the instrument cluster.
- Charging times will vary based on the age, condition, state of charge, available current being provided to the charger from its energy source, and temperature of the high voltage battery.
- Charging times may be longer if a thermal self-protection reduces the charging current from the EVSE.
- If the vehicle's ignition is in either the ACC or ON/RUN position, the vehicle charge indicator may not indicate greater than a 99% state of charge, and will continue to charge the vehicle, due to the vehicle loads.

| Type of EVSE | Estimated Charge Time |
|---------------------------------|---------------------------|
| Level 1 (120 V/15 A) | Approximately 14 hours |
| Level 2 (240 V/30 A or 32 A) | Approximately 2 hours |

VEHICLE CHARGE INDICATORS

Instrument Cluster High Voltage Battery Display


There is a battery display indicator located on the instrument cluster. The battery display will indicate the current state of charge for the high voltage battery with the percentage value located to the left of the symbol. When plugged in, the battery symbol also shows the battery level along with messages about the charge or whether the system is waiting to charge due to the charge schedule. These will appear unless there is a charging fault. A green plug telltale will be shown in the cluster, as well as applicable messaging when charging.

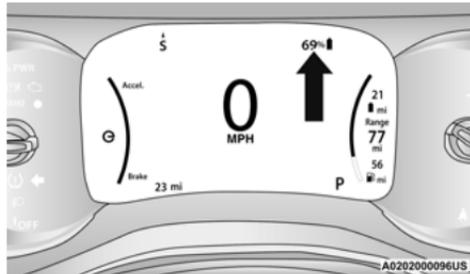

High Voltage Battery Display

Instrument Panel State Of Charge Indicator

In addition to the battery display in the instrument cluster, your vehicle is equipped with a visual state of charge indicator. The state of charge indicator is made up of five lights that are mounted to the top center of the instrument panel, which will illuminate when the vehicle is plugged into the EVSE.

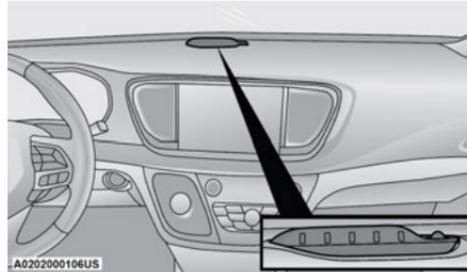

State Of Charge Indicator

The state of charge indicator provides a visual indication of the high voltage battery's charge status during charging. It's also used to indicate a charging problem, as well as, waiting for a scheduled charge to begin.

NOTE:

The lights scroll one at a time when the vehicle is plugged in outside of its charging schedule time/day of the week, and it is waiting on the schedule to begin charging.

In extreme hot or cold environments, the lights on the state of charge indicator may not illuminate. Charge status is available in the cluster or the Hybrid Electric App within the Uconnect system. In the event of an error in the charging process, the outer two lights will blink.

When the hood is open, the lights on the state of charge indicator will not be illuminated, a message will display in the instrument cluster.

| Number Of Indicator Lights Illuminated | Percent Of Battery Charge |
|--|--|
| 1st light blinks | 0 - 20% |
| 1st light on, 2nd light blinks | 21 - 40% |
| 1st and 2nd lights on, 3rd light blinks | 41 - 60% |
| 1st, 2nd, and 3rd lights on, 4th light blinks | 61 - 80% |
| 1st, 2nd, 3rd, and 4th lights on, 5th light blinks | 81 - 99% |
| All 5 lights on | 100% |
| Two outer lights are blinking | Indicates an error in the charging process |

| Number Of Indicator Lights Illuminated | Percent Of Battery Charge |
|--|---|
| Lights turn on one at a time from left to right (when looking at the front of the vehicle) | Indicates system is waiting for scheduled time in charge schedule to begin charging |
| All lights turn on, then immediately turn off | Indicates a successful plug-in |

NOTE:

For each light segment illuminated to indicate charging, two different blink rates are used. A blink rate of 1 second on and 1 second off indicates that the first half of the segment is charging. The blink rate will increase to 1/2 second on and 1/2 second off to indicate that the second half of the segment is charging. When the segment is fully charged, the blinking stops and that segment remains illuminated as charging continues on to the next segment.

HYBRID ELECTRIC APP

Within the Uconnect system is the Hybrid Electric App that allows you to see your vehicle's power flow, understand your driving history, and set an EVSE charging schedule for your vehicle's high voltage battery. To access this app, press the Apps or Vehicle button on the main menu bar of the

radio's touchscreen, and locate the Hybrid Electric App. Accessing the app brings you to a set of three pages: Power Flow, Driving History, and Schedules.

**Hybrid Electric App Location****Power Flow**

The Power Flow screen shows the current power readings for all of the following:

- **Engine** - Shows the amount of power (in kW) the engine is generating. Based on vehicle operating conditions, this power is used to: propel the vehicle, provide passenger compartment heating, power vehicle electrical loads, and charge the high voltage battery. Engine operation is controlled to maximize fuel economy.
- **Battery** - Shows the amount of power (in kW) the high voltage battery is currently providing/absorbing. A negative kW indicates the vehicle's high voltage battery is charging.

- **Climate** - Shows the amount of power (in kW) the Climate Control system is using to maintain the current interior temperature.

Power Flow paths are indicated by the direction of the arrows on the touchscreen.

**Power Flow Screen****Driving History**

The Driving History screen shows the miles (km) driven in both Full Electric and Hybrid (battery and engine powered) modes for both the previous week and the current week. The data is displayed in a bar graph: Electric mode in teal and Hybrid mode in blue.

On the bar graph, miles (km) driven on the same day in Electric mode (battery only) are always shown below miles (km) driven in Hybrid mode. When one day of the week exceeds 100 miles (160 km) driven, the values for miles (km) driven in

Electric and Hybrid modes will be listed above the bar graph in respective colors (teal for Electric and blue for Hybrid).



Driving History Screen

Charging Schedule

To set a charging schedule, select the Hybrid Electric App in the touchscreen and follow these steps:

1. Select "Schedules".



Schedules Screen

2. Select the schedule to be set (1, 2, or 3) by pressing the appropriate arrow on the right side of the screen.
3. Select "Charge Schedule".



Select Charge Schedule

4. Select if Scheduled Charging should "Charge Until Full".
5. Set the Charge Start Time: Hours, Minutes, and AM/PM.

NOTE:

This is to occur every week (as long as the vehicle is connected to the EVSE).



Set Charge Schedule

6. When done, press the X in the upper right hand corner, then select "yes" to save the charge schedule. The active schedule will be indicated by the check mark to the right of the schedule event line. The event action and time will be displayed.
7. To add another Scheduled Charging event, repeat these steps.

NOTE:

A maximum of three independent Scheduled Charging events can be scheduled at a given time.

NOTE:

- If the charging schedule is not enabled, the vehicle will charge whenever plugged in. It is not necessary to set up the charging schedule to charge the vehicle.
- If the vehicle is plugged in outside of the charging schedule set in the Uconnect system (and Charge Until Full is not selected), the vehicle's battery will not charge. Charging will only begin immediately if the vehicle is plugged in within the time and day of the week set in the schedule. Otherwise, charging will automatically begin when the selected charge time/day of the week occurs or whenever the vehicle is plugged in with no charge schedule set.
- If the vehicle is turned off outside of the charging window, a radio pop-up message will be displayed, which provides an option to begin charging the vehicle immediately. The pop-up message asks the driver if they would like to "Charge Now?" and provides other information, including the next charging schedule start time and estimated time to charge the battery to 100%. If within one hour of selecting "Yes," the vehicle is connected to a powered EVSE, the vehicle will immediately begin to charge (tempo-

rally ignoring any set charge schedule). To fully deactivate the charge schedule, refer to the "Schedules" feature within the Hybrid Electric App.

- The charging schedule can also be overridden if the EVSE is plugged in, unplugged, and then plugged in a second time to the vehicle. This "double plug sequence" will override the schedule that is set in the radio, and begin charging the vehicle immediately. The double plug sequence must be completed within 10 seconds for it to override the programmed schedule.
- If "Charge Until Full" is selected, and the vehicle is plugged in after the start time of the schedule, the vehicle will start charging when it reaches the start time the next day. If you would like to begin charging immediately, and continue charging until the vehicle is fully charged, you can select the "Charge Now" option or use the double plug override option.

NOTE:

For information on jump starting your vehicle, refer to the "In Case Of Emergency" chapter in the Owner's Manual.

IGNITION SWITCH

This feature allows the driver to operate the ignition switch with the push of a button as long as the key fob is in the passenger compartment.

NOTE:


This vehicle is equipped with an automatic shutdown feature. If the vehicle is left with the ignition in the RUN position (engine not running) with gear selector in PARK for 30 minutes, it will automatically turn off the vehicle. If the driver door is opened, then closed while propulsion is active and the vehicle is in PARK, the vehicle will shut down. Notifications have been designed into this feature to raise awareness of the timed event. The instrument cluster display will show the message "Ready to Drive" accompanied with three audible chimes while exiting. The interior warnings will occur regardless of whether the key fob remains in the vehicle or is removed. The horn will sound three times, and the turn signals will flash if the key fob is removed from the vehicle and the ignition state is in READY mode.

To restart the vehicle, follow the normal process for starting your vehicle.

The START/STOP ignition button has four operating positions; three of which are labeled and will illuminate when in position. The three positions are OFF, ACC, and ON/RUN. The fourth position is START. During START, RUN will illuminate.

NOTE:

- Pushing the START/STOP ignition button may only activate the Electric Propulsion System and not start the vehicle's engine (if running the engine is not currently required by the Hybrid system). READY will show in the instrument cluster display whenever the vehicle is operating in Electric mode and the vehicle is stationary.
- If the vehicle's ignition is in either ACC or ON/RUN, the vehicle charge indicator may not display a value greater than 99% State Of Charge due to vehicle loads.

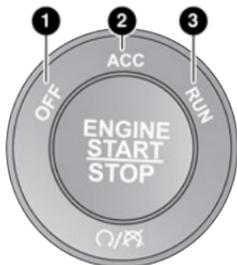**Keyless Push Button Ignition**

- 1 – OFF
- 2 – ACC
- 3 – ON/RUN

The ignition can be placed in the following positions:

OFF

- The vehicle is stopped
- Some electrical devices (e.g. central locking, alarm, etc.) are still available

ACC

- Some electrical devices are available (e.g. power windows)
- Mechanical power (Vehicle Propulsion) is not available

ON/RUN

- Driving position
- All electrical devices are available (e.g. climate controls, etc.)
- As long as the READY appears in the instrument cluster display, it does not matter if the engine is running or not, vehicle propulsion is available


NOTE:

Vehicle propulsion is only available after the vehicle has passed through the START position.

Conditions Which May Cause The Engine To Run

- While maintaining the Hybrid Battery State of Charge (SOC)
- When applying maximum vehicle acceleration
- When maximum passenger compartment heating has been turned on
- While maintaining the Exhaust System Catalyst Temperature (after engine start in current ignition cycle - emissions requirement)
- When the engine is temporarily operating in Fuel and Oil Refresh Mode
- When the hood is open with the ignition in ON/RUN, post-START mode (eliminates unexpected engine start-ups)

In case the ignition switch does not change with the push of the button, the key fob may have a low or depleted battery. In this situation, a backup method can be used to operate the ignition switch. Put the nose side (side opposite of the emergency key) of the key fob against the START/STOP ignition button and push to operate the ignition switch.

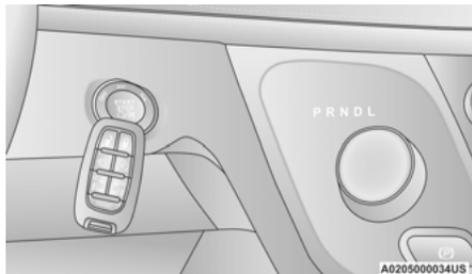

Keyless Push Button Ignition

WARNING!

- When leaving the vehicle, always remove the key fob from the vehicle and lock your vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle.
- Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the gear selector.

*(Continued)***WARNING!**

- Do not leave the key fob in or near the vehicle, or in a location accessible to children, and do not leave the Keyless Enter 'n Go™ Ignition in the ON/RUN position. A child could operate power windows, other controls, or move the vehicle.
- Do not leave children or animals inside parked vehicles in hot weather. Interior heat buildup may cause serious injury or death.

CAUTION!

An unlocked vehicle is an invitation. Always turn the vehicle off, remove the key fobs from the vehicle, and lock all the doors when leaving the vehicle unattended.

NOTE:

If the brake is pressed and the ignition is placed in the RUN position with an EVSE connected to the vehicle, the instrument cluster display will not display the READY state. When the Electric Vehicle Supply Equipment (EVSE) is unplugged from the vehicle, the vehicle will go into the READY state. If

the vehicle is not shifted out of PARK 30 minutes after being unplugged, the vehicle will disable the READY state and transition the ignition to OFF. For more information on normal starting, see [page 38](#).

REMOTE START SYSTEM — IF EQUIPPED**NOTE:**

Remote Start on Hybrid while plugged in may not always start the engine.



This system uses the key fob to start the vehicle conveniently from outside the vehicle while still maintaining security. The system has a range of 328 ft (100 m).

The Remote Start system also activates the Climate Control system and vented seats (if equipped) in temperatures above 80 °F (26.7 °C). It activates the optional heated seats, optional heated steering wheel, optional heated mirrors and rear defroster in temperatures below 40 °F (4.4 °C).

NOTE:

Obstructions between the vehicle and key fob may reduce this range.

HOW TO USE REMOTE START

Push and release the Remote Start button on the key fob twice within five seconds. The vehicle doors will lock, the parking lights will flash, and the horn will chirp twice (if programmed). Then, the vehicle will start, and remain in the Remote Start mode for a 15 minute cycle.

Pushing the Remote Start button a third time shuts the vehicle off.

NOTE:

- With Remote Start, the vehicle will only run for 15 minutes.
- Remote Start can only be used twice.
- If an engine fault is present or fuel level is low, the vehicle will start and then shut down in 10 seconds.
- The parking lights will turn on and remain on during Remote Start mode.
- For security, power window and power sunroof (if equipped) operations are disabled when the vehicle is in Remote Start mode.
- The ignition must be placed in the ON/RUN position before the Remote Start sequence can be repeated for a third cycle.

All of the following conditions must be met before the vehicle will remote start:

- Gear selector in PARK
- Doors closed
- Hood closed
- Liftgate closed
- Hazard switch off
- Brake switch inactive (brake pedal not pressed)
- 12 Volt battery at an acceptable charge level
- Key fob Panic button not pushed
- System not disabled from previous Remote Start event
- Vehicle Security system indicator flashing
- Ignition in the OFF position
- Fuel level meets minimum requirement
- Malfunction Indicator Light (MIL) is off while vehicle is in propulsion system active
- Electronic Throttle Control (ETC) Warning Light is not illuminated
- Electric Vehicle Service Light is not illuminated

WARNING!

- Do not start or run an engine in a closed garage or confined area. Exhaust gas contains Carbon Monoxide (CO) which is odorless and colorless. Carbon Monoxide is poisonous and can cause serious injury or death when inhaled.
- Keep key fobs away from children. Operation of the Remote Start system, windows, door locks or other controls could cause serious injury or death.

2

TO EXIT REMOTE START MODE

Push and release the Remote Start button one time or allow the Remote Start cycle to complete the entire 15 minute cycle.

In addition, the ignition can be cycled to the RUN (Pre-Propulsion System Active) position by pressing the ignition button with the key fob in the vehicle, and then pushing the ignition button one more time to place the ignition in the OFF position.

NOTE:

To avoid unintentional shutdowns, the system will temporarily disable for two seconds after receiving a valid Remote Start request.

Refer to the Owner's Manual for further information.

SCHEDULED CABIN CONDITIONING (SCC)

This feature allows the driver to pre-condition (warm up or cool down) the passenger cabin based on a planned departure time. The target temperature is preset to the same values used by the Remote Start feature. Unlike Remote Start, the driver does not need to initiate the cabin conditioning by pushing the Remote Start button, instead, a programmed departure time will be used. Also, all scheduled cabin conditioning will be powered by the vehicle's high voltage battery working in conjunction with any EVSE connected to the vehicle. Unlike Remote Start, in SCC the vehicle's gas engine will not start to provide power or heat for cabin conditioning.

In order to conserve the vehicle's high voltage battery power, the driver can choose between allowing the battery to be drained of power down to <1%, or to stop the SCC when the high voltage battery has been depleted to 25% State Of Charge (SOC). The battery percentages are displayed in the instrument cluster display.

A maximum of three independent schedule event timers are available for use by the SCC feature and Scheduled Charging feature for charging the high voltage battery. The timers may be used in any combination for SCC and Scheduled Charging, but only three total timers are available.

The SCC event times are used to wake up the vehicle so that the Climate Control system can condition the passenger cabin prior to the scheduled departure time. Based on vehicle operating conditions, ambient temperature, and the next programmed departure time, the vehicle will determine when to begin cabin conditioning. Cabin conditioning can begin up to 30 minutes prior to the scheduled departure time, provided the stated high voltage battery conditions are met.

The SCC will continue for a maximum of 15 minutes after the scheduled departure time.

Once a scheduled event has been created, it can be applied to one or more days of the week. The scheduled event can also be set to occur only during the current week, or repeat every week until the feature is turned off or the event is changed.

All of the following conditions must be met before the vehicle will initiate a scheduled SCC event:

- Gear selector in PARK
- Doors Closed
- Hood Closed
- Liftgate Closed
- Hazard switch off
- 12 Volt battery at an acceptable charge level
- Key fob not located inside the vehicle
- Ignition in the OFF position
- Remote Start has not been activated

Scheduling An SCC Event:

1. Select the Hybrid Electric App on the touchscreen
2. Select "Schedules"



Schedules Screen

3. Select the schedule to be set (1,2, or 3) by pressing the appropriate arrow on the right side of the touchscreen

4. Choose “Climate Schedule”

**Select Climate Schedule**

5. Select if SCC should stop when the high voltage battery drops to 25% or lower
6. Set the Departure Time: Hours, Minutes, and AM/PM

**Set Climate Schedule**

7. Select the days that this SCC event will occur. The “Repeat” indicator illuminates to indicate that SCC will occur every week on the selected day(s), at the selected time
If you uncheck the “Repeat” option, all the days of the week will be grayed out and the vehicle will perform only one SCC event, which will occur at the next available time that matches the SCC event time (regardless of what day it was originally set to occur before “Repeat” was unchecked)

8. To schedule another SCC event, press the X and repeat these steps

HOOD OPENING

WARNING!

Always place the ignition in the OFF position before opening the hood. If the ignition is in the ON/RUN position and the Propulsion System is active when the hood is opened, the engine will automatically start, and persons not clear of the vehicle could be injured by the engine’s moving parts.


The hood release lever (to open the primary latch) and safety latch (to open the secondary latch) must be released to open the hood.

1. Pull the hood release lever located under the driver’s side of the instrument panel.

**Hood Release Lever**

2. Move to the outside of the front of the vehicle.

3. Push the safety latch release lever toward the passenger side of the vehicle. The safety latch is located behind the center front edge of the hood.

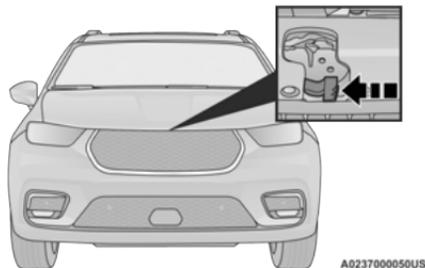

Safety Latch Location

4. Remove the support rod from the locking tab and insert it into the seat located on the underside of the hood.

NOTE:

- Before lifting the hood, check that the wiper arms are not in motion and not in the lifted position.
- While lifting the hood, use both hands.

- Vehicle must be at a stop and the gear selector must be in PARK.
- If the vehicle was actively charging the high voltage battery when the hood was opened, the vehicle will stop charging until the hood is closed.

CLOSING

1. Hold up the hood with one hand and with the other hand remove the support rod from its seat and reinsert it into the locking tab.
2. Lower the hood to approximately 12 inches (30 cm) from the engine compartment and drop it. Make sure that the hood is completely closed.

NOTE:

If the vehicle stopped charging the high voltage battery when the hood was opened, the vehicle will resume charging when the hood closes.

WARNING!


Be sure the hood is fully latched before driving your vehicle. If the hood is not fully latched, it could open when the vehicle is in motion and block your vision. Failure to follow this warning could result in serious injury or death.

CAUTION!

To prevent possible damage, do not slam the hood to close it. Lower hood to approximately 12 inches (30 cm) and drop the hood to close. Make sure hood is fully closed for both latches. Never drive vehicle unless hood is fully closed, with both latches engaged.

GETTING TO KNOW YOUR INSTRUMENT PANEL

INSTRUMENT CLUSTER

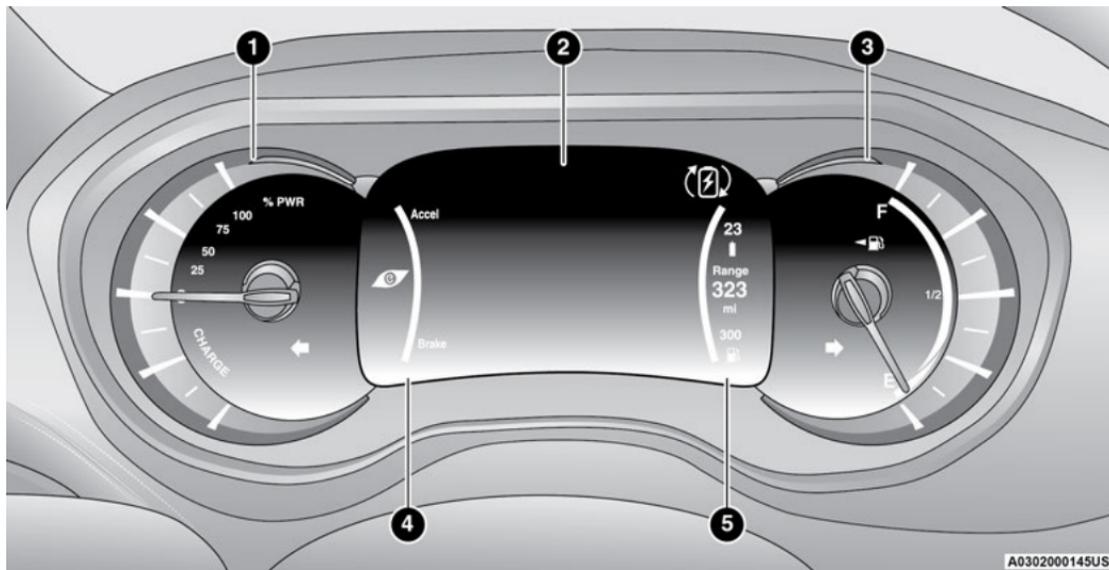

Instrument Cluster

INSTRUMENT CLUSTER DESCRIPTIONS

1. % Power Gauge

- Indicates vehicle power. The upper half of the gauge is a summation of the engine and high voltage battery power applied to move the vehicle. Bottom half indicates when the high voltage battery is charging via regenerative braking, while slowing the vehicle down.

2. Instrument Cluster Display

- The instrument cluster display features a driver interactive display. When the appropriate conditions exist, this display shows messages → page 28.



- Max Regeneration symbol appears in the upper right corner of the Instrument Cluster Display when you are driving at the maximum efficiency → page 37.

3. Fuel Gauge

- The gauge shows the level of fuel in the fuel tank when the ignition switch is in the ON/RUN position.



- The fuel pump symbol points to the side of the vehicle where the fuel door is located.

4. Left Reconfigurable Screen With Four Customer Programmable Options

- Efficiency Coach: This gauge provides visual awareness on how to achieve maximum energy efficiency while driving. When accelerating and braking, the most efficient operation will be represented with the gauge color being green. Less efficient operation will be represented by yellow, followed by orange, as the level of efficiency decreases.
- Charge/Power: This gauge represents the source of the power utilized to accelerate the vehicle. The teal outer ring represents the High Voltage (HV) battery output during acceleration, and input power during regeneration. The blue inner ring represents the engine output power.
- Energy Economy: this gauge represents the combined MPG (or km/L, or L/100km) obtained through engine use and MPG (or km/L, or L/100km) equivalent obtained through HV battery use. The outer ring represents current energy economy. The white inner ring represents average energy economy.
- NONE

5. Right Reconfigurable Screen With Four Customer Programmable Options

- EV Range & Battery %: shows values for electric range and battery %, along with a teal gauge showing battery % (state of charge <1 to 100%).
- Electric Range: shows the vehicle's electric range capability, based on the High Voltage Battery State of Charge (state of charge <1 to 100%).
- All Range Values: shows values for electric, hybrid and total range, along with a white gauge showing the total range.
- NONE


INSTRUMENT CLUSTER DISPLAY

Your vehicle is equipped with an instrument cluster display, which offers useful information to the driver. Changing the ignition to the OFF mode will activate the display for viewing, and display the total miles or kilometers in the odometer. Your instrument cluster display is designed to display important information about your vehicle's systems and features. Using a driver interactive display located on the instrument panel, your instrument cluster display can show you how systems are working and give you warnings when

they are not. The steering wheel mounted controls allow you to scroll through and enter the main menus and submenus. You can access the specific information you want and make selections and adjustments.

INSTRUMENT CLUSTER DISPLAY LOCATION AND CONTROLS

The Instrument Cluster Display is located in the center of the instrument cluster.

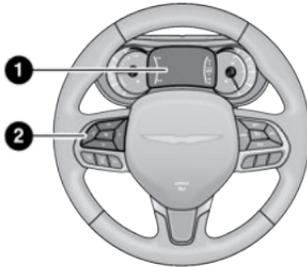


A0302000131US

Instrument Cluster Display Location And Controls

- 1 – Instrument Cluster Display Screen
- 2 – Instrument Cluster Display Controls

The system allows the driver to select information by pushing the following buttons mounted on the steering wheel:

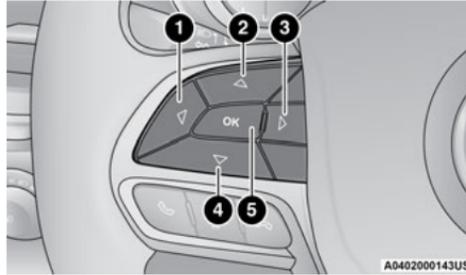

A0402000143US

Instrument Cluster Display Control Buttons

- 1 – Left Arrow Button
- 2 – Up Arrow Button
- 3 – Right Arrow Button
- 4 – Down Arrow Button
- 5 – OK Button

- **Back/Left Arrow Button**

Push and release the **left** ◀ arrow button to access the information screens or submenu screens of a main menu item.

- **Up Arrow Button**

Push and release the **up** ▲ arrow button to scroll upward through the Main Menu items.

- **Right Arrow Button**

Push and release the **right** ▶ arrow button to access the information screens or submenu screens of a main menu item.

- **Down Arrow Button**

Push and release the **down** ▼ arrow button to scroll downward through the Main Menu items.

- **OK Button**

Push the **OK** button to access/select the information screens or submenu screens of a Main Menu item. Push and hold the **OK** arrow button for one second to reset displayed/selected features that can be reset.

3

Max Regen

- When Rotary Shifter is shifted to L:



○ Max Regen Telltale is displayed in the upper right hand corner of the instrument cluster

- Max Regeneration ON' Message is displayed for 5 seconds

NOTE:

While attempting to shift into L, if "vehicle speed is too high to shift to L" message is displayed, the Max Regen ON/OFF message/TT should not be Displayed ↪ page 28

- When Rotary Shifter is shifted back to P/R/N/D:

- Max Regen Telltale goes away
- Max Regeneration OFF' Message is displayed for 5 seconds

NOTE:

While attempting to shift out of L, if “vehicle speed is too High to shift to P (or R)” message is displayed, the Max Regen OFF/ON message should not be displayed. The Telltale should continue to display as long as the vehicle is in L gear.

OIL LIFE RESET

- Your vehicle is equipped with an engine oil change indicator system. The “Oil Change Due” message will display for approximately five seconds after a single chime has sounded, to indicate the next scheduled oil change interval has been reached. The engine oil change indicator system is duty cycle based, which means the engine oil change interval may fluctuate, dependent upon your personal driving style.
- Unless reset, this message will continue to display each time the ignition is cycled to the ON/RUN position.
- To reset the oil change indicator, refer to the following procedure.

NOTE:

This procedure should only be performed after scheduled maintenance is completed. Resetting oil life other than when associated with a scheduled maintenance may result in damage due to not properly maintaining the engine oil.

1. Without pressing the brake pedal, push the ENGINE START/STOP button and place the ignition in the ON/RUN position (do not start the vehicle).

Push and release the **up** ▲ or **down** ▼ arrow button until the menu displays the “Vehicle Info” screen.

Push the **left** ◀ arrow button or **right** ▶ arrow button to access the “Oil Life” submenu.

2. Hold the **OK** button to reset the “Oil Life” to 100%.

NOTE:

This procedure must be completed within one (1) minute of changing the ignition mode from OFF to RUN. Otherwise you will need to cycle the ignition to OFF and then back to RUN again (this is to prevent inadvertent resetting of the oil life).

Secondary Method For Oil Life Reset Procedure

1. Without pushing the brake pedal, place the ignition in the ON/RUN position (do not start the engine).
2. Fully press the accelerator pedal, slowly, three times within 10 seconds.
3. Without pushing the brake pedal, place the ignition in the OFF position.

NOTE:

If the indicator message illuminates when you start the vehicle, the oil change indicator system did not reset. If necessary, repeat this procedure.

CAUTION!

If the instrument cluster instructs you to change the engine oil, do not reset the service indicator without changing the oil. Engine damage may result.

FUEL AND OIL REFRESH MODE

Since it is possible to operate this vehicle for extended periods of time without running the gas engine, the fuel within the vehicle’s fuel tank can become stale or the engine oil’s lubricating properties can be reduced. To prevent engine and/or fuel system damage due to stale fuel, as well as maintaining internal engine lubrication, this vehicle is equipped with a Fuel and Oil Refresh Mode.

The vehicle will automatically enter into the Fuel and Oil Refresh Mode to minimize potential for stale fuel, and to ensure lubrication of internal engine components. When operating in this mode, the gas engine will run to provide vehicle propulsion (electric only operation is inhibited). A message will be displayed in the instrument cluster whenever Fuel and Oil Refresh Mode is active.

The vehicle will automatically exit the Fuel and Oil Refresh Mode when conditions have been satisfied. If the vehicle enters Fuel and Oil Refresh

Mode, due to fuel which has been in the fuel tank for a long period of time (becoming stale fuel), the engine will run whenever the vehicle is operational (no electric only operation) until the low fuel level warning is activated. It is also possible to exit the Fuel and Oil Refresh Mode sooner by adding a minimum of four gallons of new fuel to the vehicle's fuel tank.

NOTE:

If the vehicle enters Fuel and Oil Refresh Mode to maintain engine lubrication, adding fuel will not exit the mode sooner.

If the vehicle enters Fuel and Oil Refresh Mode to maintain engine lubrication properties, the engine may run for a period of up to 2.5 hours when fully

warm whenever the vehicle is operational (no electric only operation). If the vehicle is shut down before conditions to exit the refresh mode have been satisfied, the engine may run for additional time on subsequent trips. Oil refresh may take significantly longer in freezing temperatures.

NOTE:

Frequent short trips at low ambient temperature conditions are more likely to trigger the lubrication based mode.

Electric drive mode will be temporarily unavailable while the Fuel Oil Refresh Mode is active. Do not attempt to return to Electric Mode until the Fuel Oil Refresh Mode cycle is complete.

INSTRUMENT CLUSTER MESSAGES — IF EQUIPPED

KeySense Cluster Messages — If Equipped



When the KeySense key is in use there will be:

- Continuous, dedicated telltale
- Unique Display Splash Screen

With KeySense in use there will be multiple associated messages shown in the following table:

| Setting | Instrument Cluster Display Message |
|---------------------------------|---|
| None – With vehicle ignition ON | “KeySense in use. Max vehicle speed set to xx MPH/or km/h” |
| Max Vehicle Speed | <ul style="list-style-type: none"> • “Max speed reached. KeySense in use” supported by a chime • “Approaching max speed xx MPH/km/h” supported by a chime |
| Start Up Fuel Alert message | “Range to empty xxx miles or km” |
| Early Low Fuel Alert Message | “Fuel Low” |
| ParkSense | “Feature cannot be disabled. KeySense in use” |
| Blind Spot | “Feature cannot be disabled. KeySense in use” |
| Forward Collision Warning | “Feature cannot be disabled. KeySense in use” |

Stop Safely Vehicle Will Shut Off Soon



Stop Safely Vehicle Will Shut Off Soon Warning Message

This warning will be displayed on the instrument panel display when the vehicle has determined an operational issue will occur shortly, which will cause the vehicle's propulsion system to turn off. If the light turns on while driving, stop the vehicle in a safe location as soon as possible. Have the vehicle transported to an authorized dealer.

- This is a high priority message
- This message will be displayed continuously
- Cannot be cleared with button press
- A single chime will sound

INSTRUMENT CLUSTER DISPLAY MENU ITEMS

NOTE:

The Instrument Cluster Display menu items display in the center of the instrument cluster. Menu items may vary depending on your vehicle features.

Speedometer

Push and release the **up** \triangle or **down** ∇ arrow button until Speedometer is highlighted in the instrument cluster display. Push and release the **OK** button to toggle between mph and km/h.

Vehicle Info

Push and release the **up** \triangle or **down** ∇ arrow button until Vehicle Info is highlighted in the instrument cluster display. Push the **left** \triangleleft or **right** \triangleright arrow button to scroll through the following information submenus:

- **Tire Pressure**

If tire pressure is **OK** for all tires, a vehicle **ICON** is displayed with tire pressure values in each corner of the **ICON**.

If one or more tires have low pressure, "Inflate Tire To XX" is displayed with the vehicle **ICON**, and the tire pressure values in each corner of the **ICON** with the pressure value of the low tire displayed in a different color than the other tire pressure value.

If the Tire Pressure system requires service, "Service Tire Pressure System" is displayed.

Tire Pressure is an information only function and cannot be reset.

- **Coolant Temperature**

Displays the actual coolant temperature.

- **Oil Temperature**

Displays the actual oil temperature.

- **Oil Pressure**

Displays the actual oil pressure.

- **Oil Life**

Displays the remaining engine oil life as a percentage.

To reset the Oil Life, you must hold the **OK** button. The "Hold OK to Reset" instruction will be displayed at all times, but the following conditions will need to be met in order to reset Oil Life:

- The vehicle propulsion system must be OFF
- The ignition must be in the ON/RUN position

If the conditions are met, holding the **OK** button will reset the gauge and the numeric display will return to 100%.

If the conditions are not met, a pop-up message will display for five seconds, describing the required conditions, and then the Oil Life screen will reappear.

NOTE:

This procedure should only be performed after scheduled maintenance is completed. Resetting oil life other than when associated with a scheduled maintenance may result in severe engine damage due to not properly maintaining the engine oil.

- **Battery Voltage**

Displays the actual Low Voltage Battery System's Voltage.

- **Engine Hours — If Equipped**

Displays the number of hours of engine operation.

Driver Assist — If Equipped

Push and release the **up** ▲ or **down** ▼ arrow button until Driver Assist is highlighted in the instrument cluster display.

Adaptive Cruise Control and LaneSense:

- Driver Assist Screen shows the current status of both the ACC and the LaneSense systems
- Pop-up messages also indicate the status of the system and/or the conditions that need to be met

Adaptive Cruise Control (ACC) Feature

The instrument cluster display will show the current ACC system settings. The information displayed depends on ACC system status. Push the

Adaptive Cruise Control (ACC) on/off button (located on the steering wheel) until one of the following displays in the instrument cluster display:

- Adaptive Cruise Control Off: when ACC is deactivated, the display will read "Adaptive Cruise Control Off."
- Adaptive Cruise Control Ready: when ACC is activated but the vehicle speed setting has not been selected, the display will read "Adaptive Cruise Control Ready." Push the SET + or the SET- button (located on the steering wheel).

ACC SET

When ACC is set, the set speed will display in the instrument cluster.

The ACC screen may display once again if any ACC activity occurs, which may include any of the following:

- Distance Setting Change
- System Cancel
- Driver Override
- System Off
- ACC Proximity Warning
- ACC Unavailable Warning

For further information, refer to "Adaptive Cruise Control (ACC) — If Equipped" in "Starting And Operating" in the Owner's Manual.

LaneSense — If Equipped

The instrument cluster displays the current LaneSense system settings. The information displayed depends on LaneSense system status and the conditions that need to be met.

For further information, refer to "LaneSense — If Equipped" in "Starting And Operating" in the Owner's Manual.

Hybrid Info

Push and release the **up** ▲ or **down** ▼ arrow button until Hybrid Info is highlighted in the instrument cluster display. Push the **left** ◀ or **right** ▶ arrow button to scroll through the following information submenus:


Energy Economy

- Average MPG gauge + value (hold OK to reset)
- Current Energy Economy gauge + value
- Total Range

Range to Empty

- Electric Range
- Hybrid Range
- Total Range

Efficiency Coach

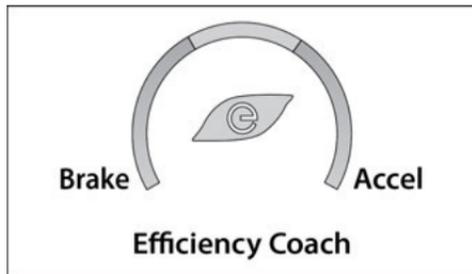


Efficiency Coach Gauge

Efficiency Coach will monitor your current driving to help you drive as efficient as possible.

- “Accel” is based on amount of acceleration (Different from MPG).
 - The gauge will only move up when accelerator pedal is pushed (or accelerating with Cruise Control or ACC).
 - Above a certain rate of change will be considered inefficient.
 - The color of the gauge bar will change from green to yellow to orange.
- “Brake” is based on amount of deceleration (slowing down).

- The gauge will only move down when brake pedal is pushed (or decelerating with Cruise Control or ACC).
- The color of the gauge bar will change from green to yellow to orange.
- The gauge bar color will transition smoothly up and down, and have a gradual change based on efficiency.
 - Center of gauge is 0% Accel and 0% Brake.
 - +/-0-35% of gauge fills green, +/-36-80% yellow, and +/-81-100% orange (with a blend between each color).

Charge/Power

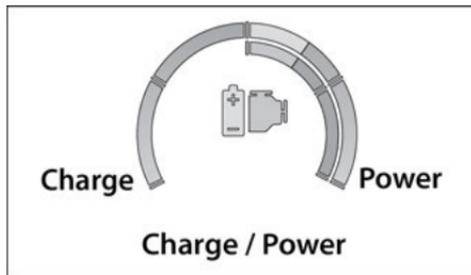

Charge/Power Gauge

- Charging is represented by the gauge filling on the left hand side.
- Power is represented by the gauge filling on the right hand side.

Trip Info

Push and release the **up** Δ or **down** ∇ arrow button until Trip Info is highlighted in the instrument cluster display. Push the **left** \triangleleft or **right** \triangleright arrow button to scroll through the Trip A and Trip B submenus. The Trip information will display the following:

Trip A

- Distance Electric
- Distance Hybrid
- Distance Total
- Average Energy Economy
- Elapsed Time

Hold the **OK** button to reset feature information.

Trip B

- Distance Electric
- Distance Hybrid
- Distance Total
- Average Energy Economy
- Elapsed Time

Hold the **OK** button to reset feature information.

Audio

Push and release the **up** ▲ or **down** ▼ arrow button until Audio is highlighted in the instrument cluster display.

- Current Media Source
- Song title
- Artist (if available)
- Phone status

Messages

Push and release the **up** ▲ or **down** ▼ arrow button until Messages is highlighted in the instrument cluster display. This feature shows the number of stored warning messages. Pushing the **right** ► arrow button will allow you to see what the stored messages are.

NOTE:

The pop-up messages indicate the status of the system and/or the conditions that need to be met. Messages remain in the stored stack until condition is cleared.

Screen Setup

| Left Side | | |
|---------------|----------------|------------------|
| None | Energy Economy | Efficiency Coach |
| Charge/ Power | | |

| Upper Left and Upper Right | | |
|---------------------------------------|---------------------------------------|-------------------------|
| None | Compass | Outside Temp |
| Time | Average MPG (or "L/100km", or "km/L") | Hybrid Range |
| Current MPG (or "L/100km", or "km/L") | Electric Range | Trip A (Total Distance) |
| Trip B (Total Distance) | Battery % | Total Range |

| Right Side | | |
|----------------------|----------------------|----------------|
| None | Battery % & EV Range | Electric Range |
| All (3) Range Values | | |

Odometer

- Show
- Hide (unless door open)

Defaults

- Restore
- Cancel

BATTERY SAVER ON/BATTERY SAVER MODE MESSAGE — ELECTRICAL LOAD REDUCTION ACTIONS — IF EQUIPPED

The vehicle is equipped with an Intelligent Battery Sensor (IBS) to perform additional monitoring of the 12 Volt electrical system and status of the 12 Volt vehicle battery.

In cases when the IBS detects charging system failure, or the 12 Volt vehicle battery conditions are deteriorating, electrical load reduction actions will take place to extend the driving time and distance of the vehicle. This is done by reducing power to or turning off non-essential 12 Volt electrical loads. Load reduction will be functional when the vehicle propulsion system is active.

The vehicle may not be running depending on the High Voltage (HV) battery SOC or temperature. It will display a message if there is a risk of battery depletion to the point where the vehicle may stall due to lack of electrical supply, or will not restart after the current drive cycle.

When 12 Volt load reduction is activated, the message "Battery Saver On" or "Battery Saver Mode" will appear in the Instrument Cluster Display.

These messages indicate the 12 Volt vehicle battery has a low state of charge and continues to lose electrical charge at a rate that the charging system cannot sustain.

NOTE:

- The charging system is independent from load reduction. The charging system performs a diagnostic on the charging system continuously.
- If the Battery Charge Warning Light is on it may indicate a problem with the charging system.

The electrical loads that may be switched off (if equipped), and vehicle functions which can be affected by load reduction:

- Heated Seat/Vented Seats/Heated Wheel
- Heated/Cooled Cup Holders – If Equipped
- Rear Defroster And Heated Mirrors
- HVAC System
- 115 Volt AC Power Inverter System
- Audio and Telematics System

Loss of the battery charge may indicate one or more of the following conditions:

- The charging system cannot deliver enough electrical power to the vehicle system because the electrical loads are larger than the capability of charging system, even though the charging system is still functioning properly.
- Turning on all possible vehicle electrical loads (e.g. HVAC to max settings, exterior and interior lights, overloaded power outlets +12 Volts, 115 Volt AC, USB ports) during certain driving conditions (city driving, frequent stopping).

- Installing options like additional lights, upfitter electrical accessories, audio systems, alarms and similar devices.
- Unusual driving cycles (short trips separated by long parking periods).
- The vehicle was parked for an extended period of time (weeks, months).
- The 12 Volt battery was recently replaced and was not charged completely.
- The 12 Volt battery was discharged by an electrical load left on when the vehicle was parked.
- The 12 Volt battery was used for an extended period with the vehicle not running to supply radio, lights, chargers, +12 Volt portable appliances like vacuum cleaners, game consoles and similar devices.

What to do when an electrical load reduction action message is present (“Battery Saver On” or “Battery Saver Mode”)

During a trip:

- Reduce power to unnecessary loads if possible:
 - Turn off redundant lights (interior or exterior)
 - Check what may be plugged in to power outlets +12 Volts, 115 Volt AC, USB ports
 - Check HVAC settings (blower, temperature)
 - Check the audio settings (volume)

After a trip:

- Check if any aftermarket equipment was installed (additional lights, upfitter electrical accessories, audio systems, alarms) and review specifications if any (load and Ignition Off Draw currents).
- Evaluate the latest driving cycles (distance, driving time and parking time).
- The vehicle should have service performed if the message is still present during consecutive trips and the evaluation of the vehicle and driving pattern did not help to identify the cause.

WARNING LIGHTS AND MESSAGES

The warning/indicator lights will illuminate in the instrument panel together with a dedicated message and/or acoustic signal when applicable. These indications are indicative and precautionary and as such must not be considered as exhaustive and/or alternative to the information contained in the Owner’s Manual, which you are advised to read carefully in all cases. Always refer to the information in this chapter in the event of a failure indication. All active telltales will display first if applicable. The system check menu may appear different based upon equipment options and current vehicle status. Some telltales are optional and may not appear.

RED WARNING LIGHTS

Hybrid Electric Vehicle System Service Light



This warning light will illuminate when service to the hybrid electric system is needed. It will be accompanied by a "Service Hybrid Electric Vehicle System" message in the cluster. If the telltale stays on or continues to come on, contact an authorized dealer as soon as possible.

Plug Status Fault Warning Light



This warning light will illuminate when a plug status fault is detected (when vehicle not in motion). It will be accompanied by a cluster message indicating the type of fault. You may receive one of the following messages if a fault is detected:

- "Service Charging System" – If you see this message, it is recommended to unplug and plug in again, or try a different charging station. If an issue continues, contact an authorized dealer to service your high voltage charging system.
- "Issue Detected Check External Charging Station" – If you see this message, the charging station maybe powered off, having internal fault or being scheduled to charge later. It is recommended to try a different charging station. If an issue continues, then contact an authorized dealer.

NOTE:

- Older or non-compliant J1772 EVSE models may not support charging of this vehicle. If this vehicle does not charge, it may be connected to a non-compliant Level 2 EVSE, and will flash indicators. Please identify this failure to the site operator and/or EVSE provider.
- Before this vehicle can be driven, the EVSE Charging Cord must be disconnected from the vehicle.

Torque Limited Warning Light



This warning light illuminates when vehicle acceleration is limited due to a reduction in engine or electric motor performance. Contact an authorized dealer for service if illumination persists.

GREEN INDICATOR LIGHTS

Max Regeneration Indicator Light



This indicator light will illuminate to indicate that Max Regeneration is on and capable.

When the switch is pressed, the following instrument cluster messages will be seen:

- "Max Regeneration On" – appears when the feature is turned on.
- "Max Regeneration Off" – appears when the feature is turned off.

- "Max Regeneration Unavailable" – appears when the feature is requested, but the vehicle is unable to comply. LED will flash for five seconds to indicate unavailability → page 33.

Ready To Drive Indicator Light



This indicator light will illuminate to indicate that the vehicle has enough power to be driven, regardless of the speed of the vehicle.

3

Plug Status Indicator Light



When plugged in, the green plug indicator light will illuminate if the EVSE charging plug is securely attached to the charging port. This indicates that the plug is detected, but doesn't mean it is charging. It will be accompanied with a cluster message indicating the charge status:

- "Plugged In And Charging"
- "Plugged In And Waiting to Charge On A Set Schedule"
- "Plugged in and Charging Complete"

NOTE:

The vehicle cannot be driven until it is unplugged.

STARTING AND OPERATING

STARTING THE VEHICLE

Before starting your vehicle, adjust your seat, adjust both inside and outside mirrors, and fasten your seat belts.

WARNING!

- When exiting the vehicle, always remove the key fob from the vehicle and lock your vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle.
- Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the transmission gear selector.
- Do not leave the key fob in or near the vehicle, or in a location accessible to children, and do not leave the ignition of a vehicle equipped with Keyless Enter 'n Go™ in the ACC or ON/RUN position. A child could operate power windows, other controls, or move the vehicle.

(Continued)

WARNING!

- Do not leave children or animals inside parked vehicles in hot weather. Interior heat buildup may cause serious injury or death.

To achieve Propulsion System Active (PSA) or Vehicle is Ready to Drive mode, press the brake pedal while pushing the ENGINE START/STOP button.

In extreme temperatures, high or low, the high voltage battery may need to be conditioned, and therefore may require the vehicle to be plugged in  page 8.

NOTE:

In case the ignition switch does not change with the push of a button, the key fob may have a low or depleted battery. In this situation, a back-up method can be used to operate the ignition switch. Put the nose side of the key fob (side opposite of the Emergency Key) against the ENGINE START/STOP button and push to operate the ignition switch.

NORMAL STARTING

NOTE:

Normal starting of either a cold or a warm engine is obtained without pumping or pressing the accelerator pedal.

Achieving vehicle READY using the ENGINE START/STOP button.

1. The transmission must be in PARK or NEUTRAL.
2. Press and hold the brake pedal while pushing the ENGINE START/STOP button once.
3. The READY indicator will appear in the cluster when the Vehicle is in Ready to Drive mode, which may include the start of the engine depending on conditions such as battery state of charge and engine temperature.
4. If you wish to terminate Vehicle is Ready to Drive mode, push the button again.

ENGINE START/STOP Button Functions – With Driver's Foot OFF The Brake Pedal (In PARK Or NEUTRAL Position)

The ENGINE START/STOP button operates similar to an ignition switch by providing three positions: OFF, ACC and RUN. To change the ignition mode without starting the vehicle (to power certain accessories), follow these steps:

1. Start with the ignition in the OFF position.
2. Push the ENGINE START/STOP button once, without brake pedal being pressed, to place the ignition in the ACC position (instrument cluster will display "ACC").
3. Push the ENGINE START/STOP button a second time, without brake pedal being pressed, to place the ignition in the RUN position (instrument cluster will display "Ignition or Accessory On").

NOTE:

- The vehicle is not able to be driven in the Ignition or Accessory On position, see "Achieving Vehicle Is Ready To Drive Mode Using the ENGINE START / STOP Button" previously defined in this section for further information.
- The rotary gear selector will turn but only PARK and NEUTRAL are accessible in the Ignition or Accessory On position.

4. Push the ENGINE START/STOP button a third time, without brake pedal being pressed, to return the ignition to the OFF position (instrument cluster will display "OFF").

NOTE:

Only press one pedal at a time while driving the vehicle. Torque performance of the vehicle could be reduced if both pedals are pressed at the same time. If pressure is detected on both pedals simultaneously, a warning message will display in the instrument cluster.

AUTOPARK

AutoPark is a supplemental feature to assist in placing the vehicle in PARK should the situations on the following pages occur. It is a back-up system and should not be relied upon as the primary method by which the driver shifts the vehicle into PARK.

The conditions under which AutoPark will engage are outlined on the following pages.

WARNING!

- Driver inattention could lead to failure to place the vehicle in PARK. ALWAYS DO A VISUAL CHECK that your vehicle is in PARK by verifying that a solid (not blinking) "P" is indicated in the instrument cluster display and near the gear selector. If the "P" indicator is blinking, your vehicle is not in PARK. As an added precaution, always apply the parking brake when exiting the vehicle.
- AutoPark is a supplemental feature. It is not designed to replace the need to shift your vehicle into PARK. It is a back-up system and should not be relied upon as the primary method by which the driver shifts the vehicle into PARK.

ALWAYS DO A VISUAL CHECK that your vehicle is in PARK by looking for the "P" in the instrument cluster display and on the gear selector. As an added precaution, always apply the parking brake.

If the vehicle is not in PARK and the driver attempts to turn off the engine, if certain conditions are met, the vehicle will AutoPark, automatically shifting the vehicle's transmission to the PARK position. The rotary shifter will automatically reset itself to the PARK position. The vehicle's ignition will then move to the OFF position (Engine off). When AutoPark is activated the instrument cluster will display the message "AutoPark Engaged".

AutoPark will engage when all of these conditions are met:

- Vehicle is equipped with a gear selector
- Vehicle is not in PARK
- Vehicle speed is 1.2 mph (1.9 km/h) or less
- Driver has pushed the ENGINE START/STOP button

If the vehicle is not in PARK and the driver exits the vehicle with the engine running, if certain conditions are met, the vehicle will AutoPark, automatically shifting the vehicle's transmission to the PARK position. The Electric Park Brake SAFE HOLD feature will also activate in some conditions. Refer to "Parking Brake" in "Starting And Operating" in your Owner's Manual for further information.

CAUTION!

Engine will remain running.

AutoPark will engage when all of these conditions are met:

- Vehicle is equipped with a gear selector
- Vehicle is not in PARK
- Vehicle speed is 1.2 mph (1.9 km/h) or less
- Driver's door is ajar
- Driver's seat belt is unbuckled
- Brake pedal is not pressed

The message "AutoPark Engaged" will display in the instrument cluster.

AutoPark In Stop/Start Autostop Mode

AutoPark will engage when all of these conditions are met:

- Vehicle is equipped with a gear selector
- Vehicle is not in PARK
- Vehicle speed is 1.2 mph (1.9 km/h) or less
- Driver's door is ajar
- Driver's seat belt is unbuckled or brake pedal is not pressed

The message "AutoPark Engaged" will display in the instrument cluster.

WARNING!

- Never use the PARK (P) position as a substitute for the parking brake. Always apply the parking brake fully when exiting the vehicle to guard against vehicle movement and possible injury or damage.
- Your vehicle could move and injure you and others if it is not in PARK. Check by trying to move the transmission gear selector out of PARK with the brake pedal released. Make sure the transmission is in PARK before exiting the vehicle.
- The transmission may not engage PARK if the vehicle is moving. Always bring the vehicle to a complete stop before shifting to PARK, and verify that the transmission gear position indicator solidly indicates PARK without blinking. Ensure that the vehicle is completely stopped, and the PARK position is properly indicated, before exiting the vehicle.
- It is dangerous to shift out of PARK or NEUTRAL if your foot is not firmly pressing the brake pedal. The vehicle could accelerate quickly forward or in reverse. You could lose control of the vehicle and hit someone or something. Only shift into gear when your foot is firmly pressing the brake pedal.

(Continued)

WARNING!

- Unintended movement of a vehicle could injure those in or near the vehicle. As with all vehicles, you should never exit a vehicle while the engine is running or the propulsion system is active. Before exiting a vehicle, always come to a complete stop, then apply the parking brake, shift the transmission into PARK, and turn the ignition OFF. When the ignition is in the OFF position, the transmission is locked in PARK, securing the vehicle against unwanted movement.
- When leaving the vehicle, always make sure the ignition is in the OFF position, remove the key fob from the vehicle, and lock the vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the transmission gear selector.
- Do not leave the key fob in or near the vehicle (or in a location accessible to children), and do not leave the ignition in the ACC or ON/RUN position. A child could operate power windows, other controls, or move the vehicle.

CAUTION!

Damage to the transmission may occur if the following precautions are not observed:

- Shift into PARK or into or out of REVERSE only after the vehicle has come to a complete stop.
- Before shifting into any gear, make sure your foot is firmly pressing the brake pedal with the exception of shifting between DRIVE and LOW. Shifting between DRIVE and LOW can occur without any brake application.

Achieving Propulsion System Active (PSA) Using ENGINE START/STOP Button

1. The transmission must be in PARK or NEUTRAL.
2. Press and hold the brake pedal while pushing the ENGINE START/STOP button once.

To release the parking brake manually, the ignition switch must be in the ON/RUN position. Press on the brake pedal, then push the parking brake switch momentarily.

If the driver shifts into PARK while moving, the vehicle may park.

Park will engage **ONLY** when vehicle speed is 1.2 mph (1.9 km/h) or less.

The message “**Vehicle Speed is Too High to Shift to P**” will display in the instrument cluster display if vehicle speed is above 1.2 mph (1.9 km/h). The gear position indicator will blink continuously until the selector is returned to the proper position, or the requested shift can be completed.

WARNING!

If vehicle speed is not below 1.2 mph (1.9 km/h) when the driver shifts into PARK, the transmission will default to NEUTRAL until the vehicle speed drops below 1.2 mph (1.9 km/h) and the above condition is met, enabling AutoPark. A vehicle left in the NEUTRAL position can roll. As an added precaution, always apply the parking brake when exiting the vehicle.

4

AFTER STARTING

To optimize energy efficiency, the vehicle will automatically control engine operation.

TO TURN OFF THE VEHICLE USING ENGINE START/STOP BUTTON

1. Place the gear selector in PARK, then push and release the ENGINE START/STOP button.
2. The ignition button indicator will return to the OFF position.

3. If the gear selector is not in PARK, with vehicle speed less than 5 mph (8 km/h), when the ENGINE START/STOP button is pushed, the instrument cluster display will display a "Vehicle Not In Park" message, and the vehicle will remain running.
4. If the gear selector is not in PARK, with vehicle speed greater than 5 mph (8 km/h), when the ENGINE START/STOP button is pushed continuously for at least two seconds (or three short pushes in a row) the vehicle ignition mode will exit Drive Ready mode and enter Accessory mode. Never leave a vehicle out of the PARK position, or it could roll.

NOTE:

- This vehicle is equipped with an automatic shut-down feature. If the vehicle is left in a READY state (vehicle running) with the gear selector in PARK for one hour, the vehicle will automatically turn itself off.
- The vehicle provides automatic notification, using a three Horn Chirp Alert, cluster chiming, and a cluster message ("Key Fob has Left the Vehicle") if the vehicle was not turned OFF (still "Ready to Drive") and a valid key fob for the vehicle is not detected within the passenger cabin, following the opening and closing of any passenger compartment door (requires all doors to be closed before the key fob check will

occur). These automatic alerts are to remind the driver to turn off the vehicle before leaving it, as well as, to let the driver know that the vehicle's key fob may have been unintentionally removed from the vehicle by an exiting passenger. After providing the Horn Chirp Alert, additional auto chirps will be inhibited until the gear selector has been moved out of park or ignition cycled.

AUTOMATIC TRANSMISSION

You must press and hold the brake pedal while shifting out of PARK.

WARNING!

- Never use the PARK (P) position as a substitute for the parking brake. Always apply the parking brake fully when exiting the vehicle to guard against vehicle movement and possible injury or damage.
- Your vehicle could move and injure you and others if it is not in PARK. Check by trying to move the transmission gear selector out of PARK with the brake pedal released. Make sure the transmission is in PARK before exiting the vehicle.

(Continued)

WARNING!

- The transmission may not engage PARK if the vehicle is moving. Always bring the vehicle to a complete stop before shifting to PARK, and verify that the transmission gear position indicator solidly indicates PARK without blinking. Ensure that the vehicle is completely stopped, and the PARK position is properly indicated, before exiting the vehicle.
- It is dangerous to shift out of PARK or NEUTRAL if your foot is not firmly pressing the brake pedal. The vehicle could accelerate quickly forward or in reverse. You could lose control of the vehicle and hit someone or something. Only shift into gear when your foot is firmly pressing the brake pedal.
- Unintended movement of a vehicle could injure those in or near the vehicle. As with all vehicles, you should never exit a vehicle while the engine is running or the propulsion system is active. Before exiting a vehicle, always come to a complete stop, then apply the parking brake, shift the transmission into PARK, and turn the ignition OFF. When the ignition is in the OFF position, the transmission is locked in PARK, securing the vehicle against unwanted movement.

(Continued)

WARNING!

- When leaving the vehicle, always make sure the ignition is in the OFF position, remove the key fob from the vehicle, and lock the vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the transmission gear selector.
- Do not leave the key fob in or near the vehicle (or in a location accessible to children), and do not leave the ignition in the ACC or ON/RUN position. A child could operate power windows, other controls, or move the vehicle.

CAUTION!

Damage to the transmission may occur if the following precautions are not observed:

- Shift into PARK or into or out of REVERSE only after the vehicle has come to a complete stop.

(Continued)

CAUTION!

- Before shifting into any gear, make sure your foot is firmly pressing the brake pedal with the exception of shifting between DRIVE and LOW. Shifting between DRIVE and LOW can occur without any brake application.

IGNITION PARK INTERLOCK

Your vehicle is equipped with an Ignition Park Interlock which requires the transmission to be in PARK before the ignition can be turned to the OFF position. This helps the driver avoid inadvertently leaving the vehicle without placing the transmission in PARK. This system also locks the transmission in PARK whenever the ignition is in the OFF position.

BRAKE/TRANSMISSION SHIFT INTERLOCK (BTSI) SYSTEM

Your vehicle is equipped with a BTSI system that holds the transmission gear selector in PARK unless the brakes are applied. To shift the transmission out of PARK, the ignition must be in the ON/RUN position (engine running or not) and the brake pedal must be pressed. The brake pedal must also be pressed to shift from NEUTRAL (N) into DRIVE (D) or REVERSE (R) when the vehicle is stopped or moving at low speeds.

HYBRID TRANSMISSION

The transmission is controlled using a rotary electronic gear selector located on the center console. The transmission gear selector has PARK, REVERSE, NEUTRAL, DRIVE, and LOW shift positions. Using the LOW (L) position will increase the rate of deceleration along with increasing regeneration of power into the vehicle's High Voltage (HV) battery (in comparison to the DRIVE position). The transmission gear range (PRNDL) is displayed both above the gear selector and in the instrument cluster display. To select a gear range, simply rotate the gear selector. Push down on the gear selector, and then rotate it, to access the L position. You must also press the brake pedal to shift the transmission out of PARK (or NEUTRAL, when the vehicle is stopped). To shift past multiple gear ranges at once (such as PARK to DRIVE), simply rotate the gear selector to the appropriate detent. Select the DRIVE range for normal driving.

NOTE:

In the event of a mismatch between the gear selector position and the actual transmission gear (for example, driver selects PARK while driving), the transmission will shift into NEUTRAL and the position indicator will blink continuously until the selector is returned to the proper position, or the requested shift can be completed.

Only shift from DRIVE to PARK or REVERSE when the accelerator pedal is released and the vehicle is stopped. Be sure to keep your foot on the brake pedal when shifting between these gears.



Transmission Gear Selector

GEAR RANGES

Do not press the accelerator pedal when shifting from PARK (P) or NEUTRAL (N) into another gear range.

PARK (P)

This range supplements the parking brake by locking the transmission. The vehicle propulsion system can be started in this range. Never attempt to use PARK while the vehicle is in motion. Apply the parking brake when exiting the vehicle in this range.

When parking on a hill, apply the parking brake before shifting the transmission to PARK. As an added precaution, turn the front wheels toward the curb on a downhill grade and away from the curb on an uphill grade.

When exiting the vehicle, always:

- Apply the parking brake.
- Shift the transmission into PARK.
- Turn the ignition OFF.
- Remove the key fob from the vehicle.

NOTE:

This vehicle incorporates an Electric Park Brake activation feature which engages automatically when the vehicle is parked on a 9% sloped surface, with the vehicle pointing up the grade or down the grade.

CAUTION!

- Before moving the transmission gear selector out of PARK, you must turn the ignition to the ON/RUN position, and also press the brake pedal. Otherwise, damage to the gear selector could result.
- DO NOT press the accelerator pedal when shifting from PARK or NEUTRAL into another gear range, as this can damage the drivetrain.

The following indicators should be used to ensure that you have properly engaged the transmission into the PARK position:

- Look at the transmission gear position display and verify that it indicates the PARK position (P), and is not blinking.
- With the brake pedal released, verify that the gear selector will not move out of PARK.

REVERSE (R)

This range is for moving the vehicle backward. Shift into REVERSE only after the vehicle has come to a complete stop.

NOTE:

Based on the drive gear and/or speed of the vehicle, the Vehicle Pedestrian Alert Module (VPAM) will broadcast a sound from the rear of the vehicle to warn nearby pedestrians that a vehicle is approaching. In addition, the module will indicate a change in speed by varying the volume of sound.

NEUTRAL (N)

Use this range when the vehicle is standing for prolonged periods with the propulsion system active. The vehicle may be started in this range. Apply the parking brake and shift the transmission into PARK if you must exit the vehicle.

NOTE:

Based on the drive gear and/or speed of the vehicle, the Vehicle Pedestrian Alert Module (VPAM) will broadcast a sound from the rear of the vehicle (if moving in the rearward direction) or from the front (if moving in the forward direction) or from both the front and rear if vehicle direction cannot be determined, to warn nearby pedestrians that a vehicle is approaching. In addition, the module will indicate a change in speed by varying the volume of sound.

WARNING!

Do not coast in NEUTRAL and never turn off the ignition to coast down a hill. These are unsafe practices that limit your response to changing traffic or road conditions. You might lose control of the vehicle and have a collision.

CAUTION!

Towing the vehicle, coasting, or driving for any other reason with the transmission in NEUTRAL can cause severe transmission damage.

Refer to “Recreational Towing” in “Starting And Operating” and “Towing A Disabled Vehicle” in “In Case Of Emergency” in the Owner’s Manual for further information.

DRIVE (D)

This range should be used for most city and highway driving. The DRIVE position provides optimum driving characteristics under all normal operating conditions.

NOTE:

- If the transmission becomes too hot, the Transmission Temperature Warning Light may illuminate, a warning message may appear in the instrument cluster display and the torque level may be reduced until the transmission cools down.
- Based on the drive gear and/or speed of the vehicle, the Vehicle Pedestrian Alert Module (VPAM) will broadcast a sound from the front of the vehicle to warn nearby pedestrians that a vehicle is approaching. In addition, the module will indicate a change in speed by varying the volume of sound.

LOW (L)

This range should be used when descending very steep grades or when increased regeneration is desired. The vehicle transmission can be operated continuously in LOW without damaging the vehicle or causing issues. Using the LOW position will increase the rate of deceleration (along with increasing regeneration of power into the vehicle’s high voltage battery) when the accelerator pedal is released in comparison to the DRIVE position. To

access the LOW position, push down on the gear selector and rotate it fully clockwise. Shifting between DRIVE and LOW can be done at any speed.

NOTE:

- Driving the vehicle in LOW will make the transitions between vehicle accelerating and coasting, as well as, vehicle coasting and accelerating more noticeable.
- Based on the drive gear and/or speed of the vehicle, the Vehicle Pedestrian Alert Module (VPAM) will broadcast a sound from the front of the vehicle to warn nearby pedestrians that a vehicle is approaching. In addition, the module will indicate a change in speed by varying the volume of sound.

Transmission Limp Home Mode

Transmission function is monitored electronically for abnormal conditions. If a condition is detected that could result in transmission damage, Transmission Limp Home Mode is activated. In this mode, vehicle speed is limited to about 45 mph (72 km/h). In addition to the Malfunction Indicator Light (MIL), the Service Hybrid System Telltale, the Red Turtle indication, and a pop-up message indicating that vehicle speed may be limited may all be illuminated. Limp Home Mode allows the vehicle to be driven to an authorized dealer for service without damaging the transmission.

In the event of a momentary problem, the transmission can be reset to regain functionality by performing the following steps:


1. Stop the vehicle in a safe location.
2. Place the transmission in PARK, if possible. If not, place the transmission in NEUTRAL.
3. Push and hold the ignition switch until the vehicle turns OFF.
4. Wait approximately 30 seconds.
5. Restart the vehicle.
6. Shift into the desired gear range. If the problem is no longer detected, the transmission will return to normal operation.

NOTE:

Even if the transmission can be reset, we recommend that you visit an authorized dealer at your earliest possible convenience. An authorized dealer has diagnostic equipment to assess the condition of your transmission. If the transmission cannot be reset, authorized dealer service is required.


REFUELING THE VEHICLE

1. Put the vehicle in the PARK position.
2. Push the fuel filler door release button (located in the driver's door in the upper map pocket).

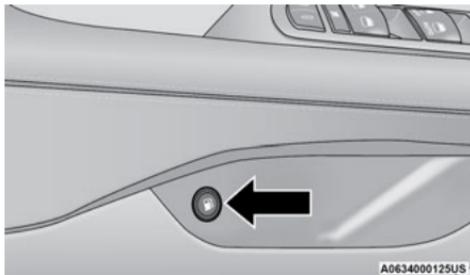

Fuel Filler Door Release Switch

3. The button push will initiate a sequence of events to depressurize the fuel system. A message will display in the cluster when the vehicle is ready to be fueled.

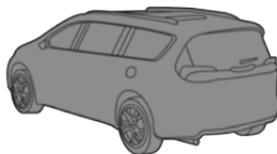

**Ready to
Refuel**

A0634000163US

Instrument Cluster Message


NOTE:

- After pushing the release button you will have 20 minutes to fuel the vehicle; beyond 20 minutes you will need to push the release button again.
- Under normal circumstances, the fuel door could take up to 15 seconds to open. It may take longer to open in some situations, such as high ambient temperatures.
- If you hear a hissing sound when the nozzle is inserted into the filler pipe, wait to begin fueling the vehicle until after the hissing sound stops.
- 4. The fuel door pops away from the vehicle when it has been released. To finish opening the fuel door, manually rotate it away from the vehicle.

NOTE:

- If the service station fuel pump repeatedly clicks off (stops delivering fuel) before the fuel tank has been filled, push the fuel door release button again.
- If pushing the fuel door release button a second time does not correct the problem, try using a different fuel pump. If premature fuel pump shutoff continues to be a problem, take the vehicle to an authorized dealer for service.

- If the fuel door does not re-latch upon closure, push the fuel door release button again to reset the latch. If pushing the fuel door release button a second time does not correct the problem, take the vehicle to an authorized dealer for service.

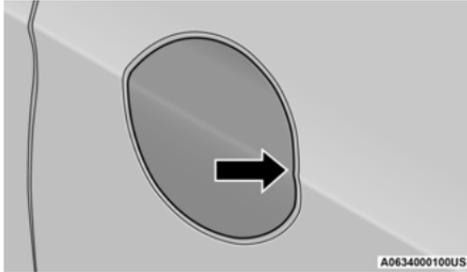

Fuel Filler Door

NOTE:

In certain cold conditions, ice may prevent the fuel door from opening. If this occurs, lightly push on the fuel door to break the ice buildup and re-release the fuel door using the inside release button. Do not pry on the door.

5. There is no fuel filler cap. Two flapper doors inside the pipe seal the system.
6. Insert the fuel nozzle fully into the filler pipe, the nozzle opens and holds both flapper doors while refueling.

7. Fill the vehicle with fuel. When the fuel nozzle "clicks" or shuts off the fuel tank is full.
8. Wait five seconds before removing the fuel nozzle to allow fuel to drain from nozzle.
9. Remove the fuel nozzle and close the fuel door.

WARNING!

- Never have any smoking materials lit in or near the vehicle when the fuel door is open or the tank is being filled.
- Never add fuel when the engine is running. This is in violation of most state and federal fire regulations and may cause the Malfunction Indicator Light to turn on.
- A fire may result if fuel is pumped into a portable container that is inside of a vehicle. You could be burned. Always place fuel containers on the ground while filling.

CAUTION!

To avoid fuel spillage and overfilling, do not "top off" the fuel tank after filling.

Emergency Fuel Door Release


1. Place the vehicle's ignition to the RUN position (Propulsion System Not Active).

NOTE:

If this is not performed, then the tank vent valve will not open. This will result in premature fuel pump shut-offs.


2. Access the storage bin located behind the rear cargo trim panel.
3. Remove access cover in the upper right corner.

4

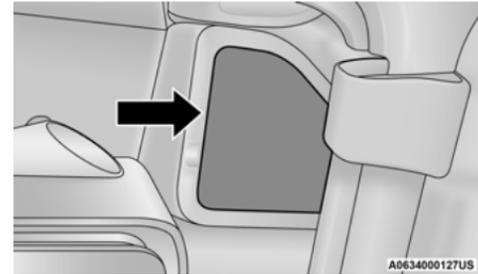

Access Cover Location

4. After removing green handle from retention bracket, pull the green handle directly away from the bracket to release the fuel door.

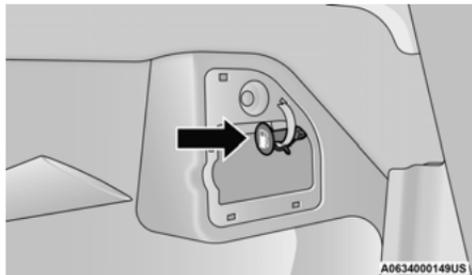

Fuel Door Emergency Release

5. Reinstall handle back into bracket when completed.
6. Wait 15 seconds and then begin fueling your vehicle.

TRAILER TOWING

Trailer towing is not permitted with this vehicle.

SAFETY

SAFETY FEATURES

REGENERATIVE BRAKING SYSTEM (RBS)

The RBS replenishes the vehicle's high voltage battery during deceleration, and is particularly useful in stop-and-go city traffic. The electric motors that propel the vehicle forward can operate as generators when braking. The RBS recharges the high voltage battery under certain braking conditions by recapturing energy that would otherwise be lost while braking. The electric power that is generated goes back into the high voltage battery for later use, for example when acceleration is desired.

The RBS uses conventional hydraulic friction brakes, regenerative braking, or a combination to slow the vehicle. If the system detects slippery conditions while braking, ONLY friction is used to slow the vehicle. The RBS can result in extended life of the hydraulic service brakes; however, all inspection, scheduled maintenance, and service intervals for the vehicle service brakes must be followed.

AUDIBLE PEDESTRIAN WARNING SYSTEM

Your vehicle is equipped with an Audible Pedestrian Warning system. The Audible Pedestrian Warning system uses distinct sounds to alert pedestrians that your vehicle is approaching. In addition, the module will indicate changes in vehicle speed by varying the relative volume.

The system uses an in-vehicle sound synthesizer with two external speakers. One is located in the under-hood compartment and the other is in the rear of the vehicle. The Audible Pedestrian Warning system is active when the vehicle is not in PARK and is stopped or traveling at lower speeds. Depending on the selected gear (REVERSE, DRIVE, LOW or NEUTRAL), the system activates the corresponding speaker location based on the intended direction of travel.

NOTE:

The system is active when driving in Electric Mode only.

WARNING!

The Audible Pedestrian Warning system is not intended to avoid a collision. It is always the driver's responsibility to be attentive to the vehicle's distance between other vehicles, people, and objects, and most importantly brake operation to ensure safe operation of the vehicle under all road conditions. Your complete attention is always required while driving to maintain safe control of your vehicle. Failure to follow this warning could result in a collision or serious personal injury.

5


OCCUPANT RESTRAINT SYSTEMS

SEAT BELT SYSTEMS

This supplement describes the features of the seat belt systems that are unique to your hybrid vehicle. The vehicle Owner's Manual contains the complete instructions for these important safety features. Please read the complete instructions for the seat belt systems in the vehicle Owner's Manual.

Switchable Automatic Locking Retractors (ALR)

The seat belts in the passenger seating positions are equipped with a Switchable Automatic Locking Retractor (ALR) which is used to secure a child restraint system. For additional information, refer to “Installing Child Restraints Using The Vehicle Seat Belt” under the “Child Restraints” section of the Owner’s Manual. The figure below illustrates the locking feature for each seating position.

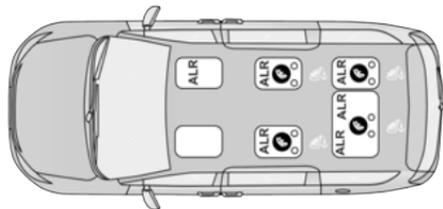

A0503000713US

7 Passenger Quad Seat Automatic Locking Retractor (ALR) Locations

ALR — Switchable Automatic Locking Retractor

If the passenger seating position is equipped with an ALR and is being used for normal usage, only pull the seat belt webbing out far enough to comfortably wrap around the occupant’s

mid-section so as to not activate the ALR. If the ALR is activated, you will hear a clicking sound as the seat belt retracts. Allow the webbing to retract completely in this case and then carefully pull out only the amount of webbing necessary to comfortably wrap around the occupant’s mid-section. Slide the latch plate into the buckle until you hear a “click.”

In Automatic Locking Mode, the shoulder belt is automatically pre-locked. The seat belt will still retract to remove any slack in the shoulder belt. Use the Automatic Locking Mode anytime a child restraint is installed in a seating position that has a seat belt with this feature. Children 12 years old and under should always be properly restrained in the rear seat of a vehicle with a rear seat.

WARNING!

- Never place a rear-facing child restraint in front of an air bag. A deploying passenger front air bag can cause death or serious injury to a child 12 years or younger, including a child in a rear-facing child restraint.
- Never install a rear-facing child restraint in the front seat of a vehicle. Only use a rear-facing child restraint in the rear seat. If the vehicle does not have a rear seat, do not transport a rear-facing child restraint in that vehicle.

How To Engage The Automatic Locking Mode

1. Buckle the combination lap and shoulder belt.
2. Grab the shoulder portion and pull downward until the entire seat belt is extracted.
3. Allow the seat belt to retract. As the seat belt retracts, you will hear a clicking sound. This indicates the seat belt is now in the Automatic Locking Mode.

How To Disengage The Automatic Locking Mode

Unbuckle the combination lap/shoulder belt and allow it to retract completely to disengage the Automatic Locking Mode and activate the vehicle sensitive (emergency) locking mode.

WARNING!

- The seat belt assembly must be replaced if the switchable Automatic Locking Retractor (ALR) feature or any other seat belt function is not working properly when checked according to the procedures in the Service Manual.
- Failure to replace the seat belt assembly could increase the risk of injury in collisions.

(Continued)

WARNING!

- Do not use the Automatic Locking Mode to restrain occupants who are wearing the seat belt or children who are using booster seats. The locked mode is only used to install rear-facing or forward-facing child restraints that have a harness for restraining the child.

SUPPLEMENTAL RESTRAINT SYSTEMS (SRS)

This supplement describes the features of the Supplement Restraint System that are unique to your hybrid vehicle. The vehicle Owner's Manual contains the complete instructions for these important safety features. Please read the complete instructions for the Supplemental Restraint System in the vehicle Owner's Manual.

Enhanced Accident Response System Reset Procedure

After an event occurs requiring activation of the Enhanced Accident Response System, when the system is active, a "Service Hybrid Electric Vehicle System" message will be displayed on the instrument cluster. The vehicle is not drivable in this state.


In order to reset the high voltage battery and engine, the vehicle must be towed to an authorized dealer immediately to be inspected and have the Enhanced Accident Response System reset.

In order to immediately reset the hazard flashers, interior lights, power door locks, HVAC blower motor, the ignition switch must be changed from START or ON/RUN to ignition OFF.

CHILD RESTRAINTS

This supplement describes the features of the Child Restraint System that are unique to your hybrid vehicle. The vehicle Owner's Manual contains the complete instructions for these important safety features. Please read the complete instructions for the Child Restraint System in the vehicle Owner's Manual.

LATCH Positions For Installing Child Restraints In This Vehicle

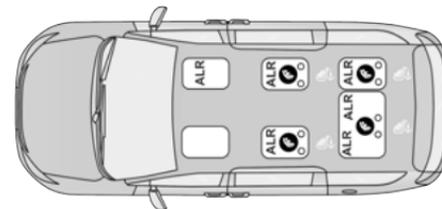

7 Passenger LATCH Positions Second Row Quad

- Lower Anchorage Symbol (2 Anchorages Per Seating Position)
- Top Tether Anchorage Symbol

A0503000713US


| Frequently Asked Questions | | |
|---|------------------|--|
| What is the weight limit (child's weight + weight of the child restraint) for using the LATCH anchorage system to attach the child restraint? | 65 lbs (29.5 kg) | Use the LATCH anchorage system until the combined weight of the child and the child restraint is 65 lbs (29.5 kg). Use the seat belt and tether anchor instead of the LATCH system once the combined weight is more than 65 lbs (29.5 kg). |
| Can the LATCH anchorages and the seat belt be used together to attach a rear-facing or forward-facing child restraint? | No | Do not use the seat belt when you use the LATCH anchorage system to attach a rear-facing or forward-facing child restraint. Booster seats may be attached to the LATCH anchorages if allowed by the booster seat manufacturer. See your booster seat owner's manual for more information. |
| Can two child restraints be attached using a common lower LATCH anchorage? | No | Never "share" a LATCH anchorage with two or more child restraints. If the center position does not have dedicated LATCH lower anchorages, use the seat belt to install a child seat in the center position next to a child seat using the LATCH anchorages in an outboard position. |
| Can the rear-facing child restraint touch the back of the front passenger seat? | Yes | The child seat may touch the back of the front passenger seat if the child restraint manufacturer also allows contact. See your child restraint owner's manual for more information. |
| Can the rear head restraints be removed? | Yes | The second row head restraints can be removed if they interfere with the installation of the child restraint. The third row center head restraint is removable, but the third row outboard head restraints are not removable. Refer to "Head Restraints" in the "Getting To Know Your Vehicle" section of the Owner's Manual for further information. |

NOTE:

If the folding, non-adjustable head restraint interferes with the installation of the child restraint, the head restraint may be folded and the child seat installed in front of it.

WARNING!

Always make sure the head restraint is in its upright position when the seat is to be used by an occupant who is not in a child restraint. Sitting in a seat with the head restraint in its lowered position could result in serious injury or death in a collision.

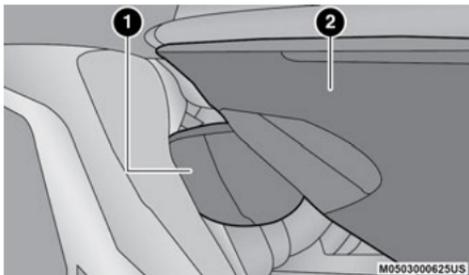

Car Seat With Head Restraint Folded


- 1 – Folded Headrest
- 2 – Child Restraint

Locating The LATCH Anchorages



The lower anchorages are round bars that are found at the rear of the seat cushion where it meets the seatback, below the anchorage symbols on the seatback. They are just visible when you lean into

the rear seat to install the child restraint. You will easily feel them if you run your finger along the gap between the seatback and seat cushion.

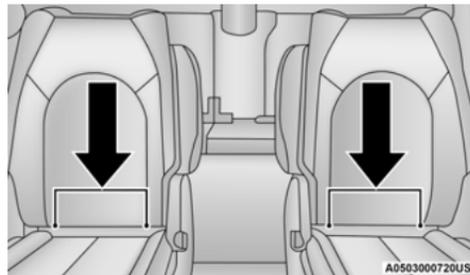


**LATCH Anchorages (Second Row Anchorages Shown)
7 Passenger Quad Seating**

Locating The Upper Tether Anchorages



There are tether strap anchorages located behind all second row seating positions. The third row has a tether anchor on the 40% seat for the right outboard position and in the center of the 60% seat for either the center or left outboard seating position. All tether anchorages are located on the back of the seat, near the floor.

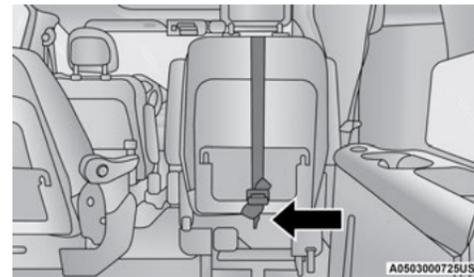

**Tether Strap Anchorages
(Second Row 7 Passenger Quad Anchorage Shown)**


LATCH-compatible child restraint systems will be equipped with a rigid bar or a flexible strap on each side. Each will have a hook or connector to attach to the lower anchorage and a way to tighten the connection to the anchorage. Forward-facing child restraints and some rear-facing child restraints will also be equipped with a tether strap. The tether strap will have a hook at the end to attach to the top tether anchorage and a way to tighten the strap after it is attached to the anchorage.

Refer to “Child Restraints” in the “Safety” section of the Owner’s Manual for further information, including installing child restraints in the third row.

Lap/Shoulder Belt Systems For Installing Child Restraints In This Vehicle

ALR – Switchable Automatic Locking Retractor

 Top Tether Anchorage Symbol

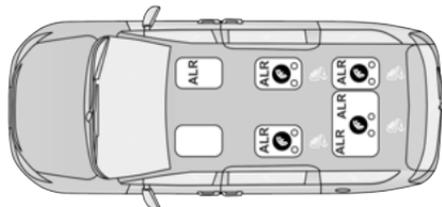

A0503000713US

7 Passenger Quad Seat Automatic Locking Retractor (ALR) Locations


| Frequently Asked Questions About Installing Child Restraints With Seat Belts | | |
|--|-------------------------------------|--|
| What is the weight limit (child's weight + weight of the child restraint) for using the Tether Anchor with the seat belt to attach a forward facing child restraint? | Weight limit of the Child Restraint | Always use the tether anchor when using the seat belt to install a forward facing child restraint, up to the recommended weight limit of the child restraint. |
| Can the rear-facing child restraint touch the back of the front passenger seat? | Yes | Contact between the front passenger seat and the child restraint is allowed, if the child restraint manufacturer also allows contact. |
| Can the rear head restraints be removed? | Yes | The second row head restraints can be removed if they interfere with the installation of the child restraint. The third row center head restraint is removable, but the third row outboard head restraints are not removable. Refer to "Head Restraints" in the "Getting To Know Your Vehicle" section of the Owner's Manual for further information. |
| Can the buckle stalk be twisted to tighten the seat belt against the belt path of the child restraint? | No | Do not twist the buckle stalk in a seating position with an ALR retractor. |

NOTE:

If the folding, non-adjustable head restraint interferes with the installation of the child restraint, the head restraint may be folded and the child seat installed in front of it.

WARNING!

Always make sure the head restraint is in its upright position when the seat is to be used by an occupant who is not in a child restraint. Sitting in a seat with the head restraint in its lowered position could result in serious injury or death in a collision.

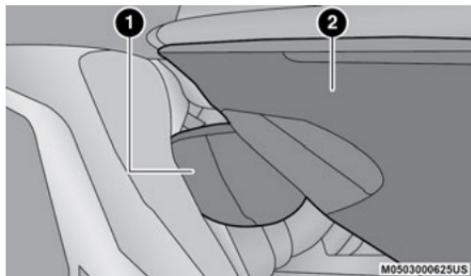

Car Seat With Head Restraint Folded

- 1 – Folded Headrest
- 2 – Child Restraint


Installing Child Restraints Using the Top Tether Anchorage

WARNING!

Do not attach a tether strap for a rear-facing car seat to any location in front of the car seat, including the seat frame or a tether anchorage. Only attach the tether strap of a rear-facing car seat to the tether anchorage that is approved for that seating position, located behind the top of the vehicle seat. See the section “Lower Anchors and Tethers for Children (LATCH) Restraint System” in “Occupant Restraint Systems” in the Owner’s Manual for the location of approved tether anchorages in your vehicle.



1. Look behind the seating position where you plan to install the child restraint to find the tether anchorage. You may need to move the seat forward to provide better access to the tether anchorage. If there is no top tether anchorage for that seating position, move the child restraint to another position in the vehicle if one is available.

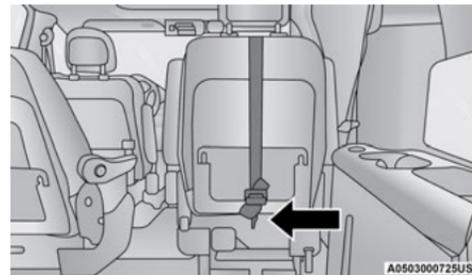

Rear Seat Tether Strap Attachment (Second Row 7 Passenger Quad Anchorage Shown)

2. Route the tether strap to provide the most direct path for the strap between the anchor and the child seat. If your vehicle is equipped with adjustable rear head restraints, raise the head restraint, and where possible, route the tether strap under the head restraint and between the two posts. If not possible, lower the head restraint and pass the tether strap around the outboard side of the head restraint.
3. Attach the tether strap hook of the child restraint to the top tether anchorage as shown in the diagram.
4. Remove slack in the tether strap according to the child restraint manufacturer’s instructions.

WARNING!

- An incorrectly anchored tether strap could lead to increased head motion and possible injury to the child. Use only the anchorage position directly behind the child seat to secure a child restraint top tether strap.
- If your vehicle is equipped with a split rear seat, make sure the tether strap does not slip into the opening between the seatbacks as you remove slack in the strap.

Refer to “Child Restraints” in the “Safety” section of the Owner’s Manual for further information, including installing child restraints in the third row.

IN CASE OF EMERGENCY

JUMP STARTING

The vehicle requires its 12 Volt battery power to turn-on the vehicle's high voltage battery. The high voltage battery is used to charge the 12 Volt battery, provide electric vehicle operation, and to start the vehicle's gas engine. If the 12 Volt battery has been discharged, the vehicle can be jump started using a set of jumper cables and a battery in another vehicle or by using a portable battery booster pack.

If the vehicle's high voltage battery has also been discharged, it will need to be recharged to a minimum operating State Of Charge (SOC) before the vehicle can be started:

- If the vehicle can be connected to a Level 1 or Level 2 charger where it is currently parked, the vehicle will still require a jump start to allow the vehicle to begin the battery charging process. Once the vehicle charging has begun (indicated by the charge status indicator on top of the vehicle's instrument panel), the jumper cables can be removed from the vehicle jump posts.
- If the vehicle cannot be connected to a Level 1 or Level 2 charger where it is currently parked, the vehicle can be moved by connecting 12 Volt power to the vehicle's jump posts and then

shifting the transmission from PARK (P) into NEUTRAL (N). Power provided by the jumper cables will also allow the Electric Park Brake to be released. Carefully move the vehicle to a Level 1 or Level 2 charge location. While the vehicle is being moved, the external 12 Volt power must remain connected to the vehicle jump posts.

NOTE:

Be careful when moving the vehicle - ensure that control of the vehicle is maintained. Also, ensure that vehicle is secured to prevent unintentional movement during and after moving the vehicle. If the external 12 Volt power becomes disconnected from the vehicle jump posts or there is an interruption of the 12 Volt power while moving the vehicle, the vehicle's transmission may engage PARK. Do not allow the jumper cables to come in contact with each other or to the vehicle, this will result in a short.

When the vehicle is at the charging location, shift the transmission back to PARK, apply the Electric Park Brake, and start the high voltage battery charging. Once the vehicle has been secured against unintentional movement and high voltage battery charging has been initiated, the jumper cables can be removed from the vehicle jump posts.

Jump starting can be dangerous if done improperly so please follow the procedures in this section carefully.

NOTE:

When using a portable battery booster pack, follow the manufacturer's operating instructions and precautions.

WARNING!


Do not attempt jump starting if the battery is frozen. It could rupture or explode and cause personal injury.

CAUTION!

Do not use a portable battery booster pack or any other booster source with a system voltage greater than 12 Volts or damage to the battery, alternator or electrical system may occur.

PREPARATIONS FOR JUMP START

The remote battery posts in your vehicle are located on the driver's side of the engine compartment.

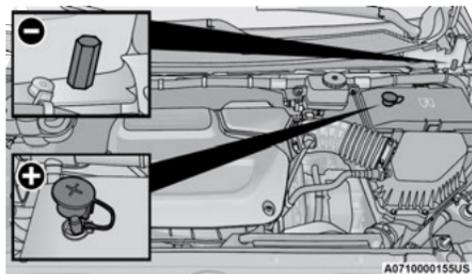

Jump Starting Posts

WARNING!

You can be seriously injured or killed working on or around a motor vehicle:

- Keep hands away from the radiator cooling fan when the hood is raised. The fan starts automatically and may start at any time, whether the engine is running or not.
- Remove any jewelry such as rings, watches and bracelets that could make an inadvertent electrical contact.

(Continued)

WARNING!

- Keep open flames or sparks away from the battery. Batteries contain sulfuric acid that can burn your skin or eyes and generate hydrogen gas which is flammable and explosive.

1. Apply the parking brake and place the ignition to OFF.

NOTE:

If the 12 Volt Battery has been sufficiently discharged, this may not be possible.

2. Turn off the heater, radio, and all electrical accessories.
3. If using another vehicle to jump start the 12 Volt electrical system, park the vehicle within the jumper cables reach, set the parking brake and make sure the ignition is OFF.

WARNING!

Do not allow vehicles to touch each other as this could establish a ground connection and personal injury could result.

JUMP STARTING PROCEDURE

WARNING!

Failure to follow this jump starting procedure could result in personal injury or property damage due to battery explosion.

CAUTION!

Failure to follow these procedures could result in damage to the charging system of the booster vehicle or the discharged vehicle.

Connecting The Jumper Cables

1. Connect the positive (+) end of the jumper cable to the remote positive (+) post of the vehicle with the discharged battery.
2. Connect the opposite end of the positive (+) jumper cable to the positive (+) post of the booster battery.
3. Connect the negative (-) end of the jumper cable to the negative (-) post of the booster battery.
4. Connect the opposite end of the negative (-) jumper cable to the remote negative (-) post (exposed metallic/unpainted post of the discharge vehicle) near the windshield cowl.

WARNING!

Do not connect the jumper cable to the negative (-) post of the discharged battery. The resulting electrical spark could cause the battery to explode and could result in personal injury.

5. Start the vehicle that has the booster battery, let the vehicle run a few minutes, and then cycle the ignition to ON/RUN in the vehicle with the discharged battery.
6. After a couple minutes (depending on the level of 12 Volt battery discharge), attempt to start the vehicle. Once the vehicle starts, follow the disconnecting procedure below.

Disconnecting The Jumper Cables

1. Disconnect the negative (-) end of the jumper cable from remote negative post of the vehicle with the discharged battery.
2. Disconnect the opposite end of the negative (-) jumper cable from the negative (-) post of the booster battery.
3. Disconnect the positive (+) end of the jumper cable from the positive (+) post of the booster battery.
4. Disconnect the opposite end of the positive (+) jumper cable from the remote positive (+) post of the vehicle with the discharged battery.

If frequent jump starting is required to start your vehicle, have the battery and charging system inspected at an authorized dealer.

CAUTION!

The rear 12 Volt DC outlet is not controlled by the vehicle's ignition (the outlet provides power even when the ignition is OFF). Accessories (i.e., cellular devices, etc.) plugged into the rear 12 Volt power outlet may draw sufficient power, even when they are OFF (in standby mode), to discharge the vehicle's 12 Volt battery. If the device is allowed to continue drawing power, eventually the vehicle's 12 Volt battery will discharge sufficiently to degrade battery life and/or prevent the engine from starting.

SERVICING AND MAINTENANCE

SCHEDULED SERVICING

Your vehicle is equipped with an automatic oil change indicator system. The oil change indicator system will remind you that it is time to take your vehicle in for scheduled maintenance.

Based on engine operation conditions, the oil change indicator message will illuminate. This means that service is required for your vehicle. Operating conditions such as frequent short-trips, or extremely hot or cold ambient temperatures will influence when the “Oil Change Required” message is displayed. Have your vehicle serviced as soon as possible, within the next 500 miles (805 km). Additional information regarding the oil quality of your vehicle can be found by checking the Oil Life display that shows the percentage life remaining on the current oil → page 32.

NOTE:

Even though the vehicle may not have been driven, both the fuel in the tank and oil in the engine will still degrade over time. Additionally, there will be a notification to the driver if the engine is being run to maintain the oil and fuel systems.

An authorized dealer will reset the oil change indicator message after completing the scheduled oil change. If a scheduled oil change is performed by someone other than an authorized dealer, the message can be reset → page 32.

NOTE:

Under no circumstances should oil change intervals exceed 10,000 miles (16,000 km) (engine on miles), 12 months or 350 hours of engine run time; whichever comes first. The 350 hours of engine run or idle time is generally only a concern for fleet customers.

Once A Month Or Before A Long Trip:

- Check engine oil level.
- Check windshield washer fluid level.
- Check tire pressure and look for unusual wear or damage. Rotate tires at the first sign of irregular wear, even if it occurs before the oil indicator system turns on.
- Check the fluid levels of the coolant reservoir and brake master cylinder, fill as needed.
- Check function of all interior and exterior lights.

MAINTENANCE PLAN

Refer to the maintenance schedules on the following page for the required maintenance intervals.

| At Every Oil Change Interval As Indicated By Oil Change Indicator System: |
|--|
| ● Change oil and filter. |
| ● Rotate the tires at the first sign of irregular wear, even if it occurs before the oil indicator system turns on. |
| ● Inspect 12 Volt battery and clean and tighten terminals as required. |
| ● Inspect the CV/Universal joints. |
| ● Inspect brake pads, shoes, rotors, drums, hoses and parking brake. |
| ● Inspect engine cooling system protection and hoses. |
| ● Inspect exhaust system. |
| ● Inspect engine air cleaner if using in dusty or off-road conditions, replace the engine air cleaner filter if necessary. |


| Mileage or time passed (whichever comes first) | 20,000 | 30,000 | 40,000 | 50,000 | 60,000 | 70,000 | 80,000 | 90,000 | 100,000 | 110,000 | 120,000 | 130,000 | 140,000 | 150,000 |
|---|--------|--------|--------|--------|--------|---------|---------|---------|---------|---------|---------|---------|---------|---------|
| Or Years: | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
| Or Kilometers: | 32,000 | 48,000 | 64,000 | 80,000 | 96,000 | 112,000 | 128,000 | 144,000 | 160,000 | 176,000 | 192,000 | 208,000 | 224,000 | 240,000 |
| Flush and replace the engine, power electronics, and battery coolant at 10 years or 150,000 miles (240,000 km), whichever comes first. ² | | | | | | | | | X | | | | | X |
| Replace PCV valve. | | | | | | | | | X | | | | | |

1. The spark plug change interval is mileage-based only, yearly intervals do not apply.
2. Some vehicles require special tools to add coolant properly. Failure to fill these systems properly could lead to severe internal damage. If any coolant needs to be added to the system please contact your local authorized dealer.

WARNING!

- You can be badly injured working on or around a motor vehicle. Do only service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.
- Failure to properly inspect and maintain your vehicle could result in a component malfunction and affect vehicle handling and performance. This could cause an accident.

ENGINE COMPARTMENT — HYBRID

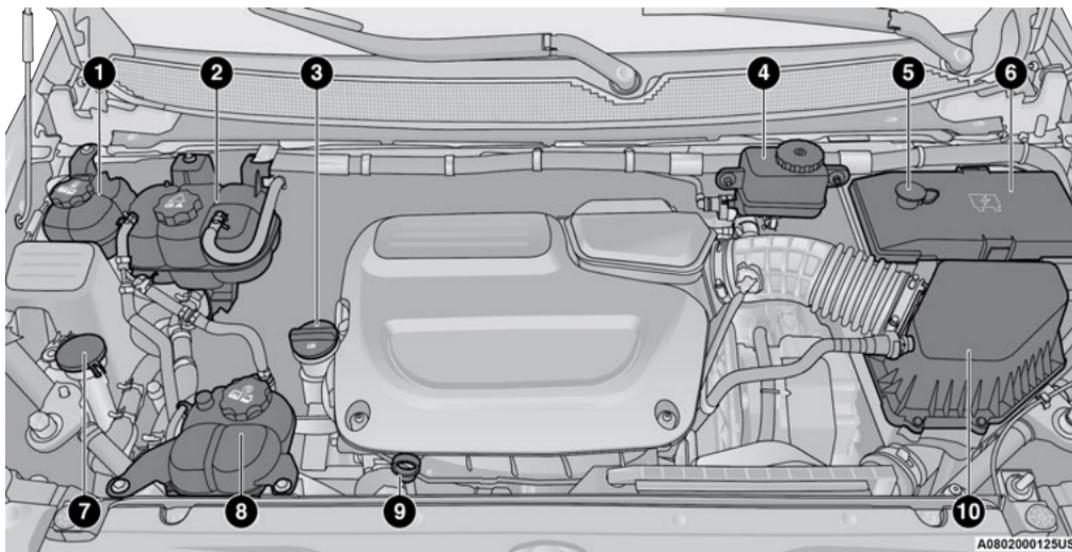

- 1 — Battery Coolant Reservoir¹
- 2 — Engine Coolant Pressure Reservoir
- 3 — Engine Oil Fill
- 4 — Brake Fluid Reservoir
- 5 — Remote Jump Start Positive Terminal

- 6 — Power Distribution Center (Fuses)
- 7 — Washer Fluid Reservoir Cap
- 8 — Power Electronics Coolant Reservoir¹
- 9 — Engine Oil Dipstick
- 10 — Engine Air Cleaner Filter

1. See an authorized dealer for service.

VEHICLE MAINTENANCE

An authorized dealer has the qualified service personnel, special tools, and equipment to perform all service operations in an expert manner. Service Manuals are available which include detailed service information for your vehicle. Refer to these Service Manuals before attempting any procedure yourself.

NOTE:

Intentional tampering with emissions control systems may void your warranty and could result in civil penalties being assessed against you.

WARNING!

You can be badly injured working on or around a motor vehicle. Only do service work for which you have the knowledge and the proper equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.

COOLING SYSTEM

WARNING!

- Turn vehicle off and disconnect the fan motor lead before working near the radiator cooling fan.

(Continued)

WARNING!

- You or others can be badly burned by hot engine coolant (antifreeze) or steam from your radiator. If you see or hear steam coming from under the hood, do not open the hood until the radiator has had time to cool. Never open a cooling system pressure cap when the radiator or coolant bottle is hot.
- Do not put your hands, tools, clothing, and jewelry near the radiator cooling fan. The fan may start at any time, whether the ignition is on or off.



0804113806US

Cooling Fan Warning Label

This vehicle is equipped with an electric cooling fan mounted behind the radiator that starts automatically, and may start at any time. Your vehicle may determine the fan needs to start and to run if vehicle coolant is too hot, or if the ambient

air temperature is too high. Even after the vehicle is turned off, the fan may start without warning and run for several minutes. Be aware of this if you are working in the engine compartment. Always keep fingers and tools away from the fan blades.

The radiator fan and surrounding components must be serviced by an authorized dealer.

Engine Coolant Checks

Check the engine coolant (antifreeze) every 12 months (before the onset of freezing weather, where applicable). If the engine coolant is dirty, the system should be drained, flushed, and refilled with fresh Organic Additive Technology (OAT) coolant (conforming to MS.90032) by an authorized dealer. Check the front of the A/C condenser for any accumulation of bugs, leaves, etc. If dirty, clean by gently spraying water from a garden hose vertically down the face of the condenser.

NOTE:

If the engine coolant is changed for low temperature capability, you must also change the coolant for the Electric/Battery systems
 ⇨ page 66.

Check the engine cooling system hoses for brittle rubber, cracking, tears, cuts, and tightness of the connection at the coolant recovery bottle and radiator. Inspect the entire system for leaks. DO NOT REMOVE THE COOLANT PRESSURE CAP WHEN THE COOLING SYSTEM IS HOT.

Cooling System – Drain, Flush And Refill

NOTE:

Some vehicles require special tools to add coolant properly. Failure to fill these systems properly could lead to severe internal engine or electrical system damage. If any coolant is needed to be added to the system please contact an authorized dealer.

If the engine coolant (antifreeze) is dirty or contains visible sediment, have an authorized dealer clean and flush with Organic Additive Technology (OAT) coolant (conforming to MS.90032).

For the proper maintenance intervals ⇨ page 61.

Electric/Battery Coolant System

These coolant systems must be serviced by an authorized dealer. If the coolant level is below what is specified on the reservoir, contact an authorized dealer for service.

These systems require the use of high purity water, such as deionized, or distilled water, when mixing the water and coolant (antifreeze) solution. The use of lower quality water will reduce the amount of corrosion protection in the cooling systems. If the coolant level of the battery coolant system is low, the Hybrid Electric Vehicle System Service Light will illuminate on the instrument cluster.

Selection Of Coolant

NOTE:

- Mixing of engine coolant (antifreeze) other than specified Organic Additive Technology (OAT) engine coolant, may result in engine damage and may decrease corrosion protection. OAT engine coolant is different and should not be mixed with Hybrid Organic Additive Technology (HOAT) engine coolant or any “globally compatible” coolant. If a non-OAT engine coolant is introduced into the cooling system in an emergency, the cooling system will need to be drained, flushed, and refilled with fresh OAT coolant (conforming to MS.90032), by an authorized dealer as soon as possible.
- Do not use water alone or alcohol-based engine coolant products. Do not use additional rust inhibitors or antirust products, as they may not be compatible with the radiator engine coolant and may plug the radiator.
- This vehicle has not been designed for use with propylene glycol-based engine coolant. Use of propylene glycol-based engine coolant is not recommended.
- Some vehicles require special tools to add coolant properly. Failure to fill these systems properly could lead to severe internal engine damage. If any coolant is needed to be added to the system please contact an authorized dealer.

Adding Coolant

Your vehicle has been built with an improved coolant (OAT coolant conforming to MS.90032) that allows extended maintenance intervals. This coolant (antifreeze) can be used up to ten years or 150,000 miles (240,000 km) before replacement. To prevent reducing this extended maintenance period, it is important that you use the same coolant (OAT coolant conforming to MS.90032) throughout the life of your vehicle.

Please review these recommendations for using Organic Additive Technology (OAT) coolant that meets the requirements of the manufacturer Material Standard MS.90032. When adding coolant:

- We recommend using Mopar® Antifreeze/Coolant 10 Year/150,000 Mile (240,000 km) Formula OAT that meets the requirements of the manufacturer Material Standard MS.90032.
- Mix a minimum solution of 50% OAT coolant that meets the requirements of the manufacturer Material Standard MS.90032 and deionized, or distilled water. Use higher concentrations (not to exceed 70%) if temperatures below -34°F (-37°C) are anticipated.

CAUTION!

Use only high purity water such as deionized, or distilled water when mixing the water/ coolant (antifreeze) solution for the engine, battery or high voltage electronics cooling systems. The use of lower quality water will reduce the amount of corrosion protection in the engine cooling system.

Please note that it is the owner's responsibility to maintain the proper level of protection against freezing according to the temperatures occurring in the area where the vehicle is operated.

NOTE:

- Mixing coolant types is not recommended and can result in cooling system damage. If HOAT and OAT coolant are mixed in an emergency, if the proper OAT coolant is not available, add only water to the cooling system, then have an authorized dealer drain, flush, and refill with OAT coolant (conforming to MS.90032) as soon as possible. Under no circumstances should HOAT coolant be added to the cooling system.
- Low pressure expansion bottles for power electronics and battery cooling require a special tool for removing the cap from the expansion bottle. For the battery coolant bottle, it is important to not add coolant if level is low. The vehicle should

be taken to an authorized dealer for proper servicing of the battery coolant loop if this should occur.

Cooling System Pressure Cap

The cap must be fully tightened to prevent loss of engine coolant (antifreeze), and to ensure that engine coolant will return to the radiator from the coolant expansion bottle/recovery tank (if equipped).

The cap should be inspected and cleaned if there is any accumulation of foreign material on the sealing surfaces.

WARNING!

- Do not open a hot engine cooling system. Never add engine coolant (antifreeze) when the engine is overheated. Do not loosen or remove the cap to cool an overheated engine. Heat causes pressure to build up in the cooling system. To prevent scalding or injury, do not remove the pressure cap while the system is hot or under pressure.
- Do not use a pressure cap other than the one specified for your vehicle. Personal injury or engine damage may result.

Disposal Of Used Coolant

Used ethylene glycol-based coolant (antifreeze) is a regulated substance requiring proper disposal. Check with your local authorities to determine the disposal rules for your community. To prevent ingestion by animals or children, do not store ethylene glycol-based coolant in open containers or allow it to remain in puddles on the ground, clean up any ground spills immediately. If ingested by a child or pet, seek emergency assistance immediately.

Coolant Level

The coolant expansion bottle provides a quick visual method for determining that the coolant level is adequate. With the engine off and cold, the level of the coolant (antifreeze) in the bottle should be between the "MAX" and "MIN" lines marked on the bottle.

As long as the engine operating temperature is satisfactory, the coolant bottle need only be checked once a month.

When additional coolant is needed to maintain the proper level, it should be added to the coolant bottle. Do not overfill.

See an authorized dealer for service.

Cooling System Notes

NOTE:

When the vehicle is stopped after a few miles/kilometers of operation, you may observe vapor coming from the front of the engine compartment. This is normally a result of moisture from rain, snow, or high humidity accumulating on the radiator and being vaporized when the thermostat opens, allowing hot engine coolant (antifreeze) to enter the radiator.

If an examination of the engine compartment shows no evidence of radiator or hose leaks, the vehicle may be safely driven. The vapor will soon dissipate.

- Do not overfill the coolant expansion bottle.
- Check the coolant freeze point in the radiator and in the coolant expansion bottle. If engine coolant needs to be added, the contents of the coolant expansion bottle must also be protected against freezing.
- If frequent engine coolant additions are required, the cooling system should be pressure tested for leaks.
- Maintain coolant concentration at a minimum of 50% OAT coolant (conforming to MS.90032) and deionized, or distilled water.
- Use only high purity water such as deionized, or distilled water when mixing the water/coolant solution for the engine, battery or high voltage

electronics cooling systems. The use of lower quality water will reduce the amount of corrosion protection in the cooling system.

- Make sure that the coolant expansion bottle overflow hoses are not kinked or obstructed.
- Keep the front of the radiator clean. If your vehicle is equipped with air conditioning, keep the front of the condenser clean.
- Do not change the thermostat for Summer or Winter operation. If replacement is ever necessary, install **ONLY** the correct type thermostat. Other designs may result in unsatisfactory engine cooling performance, poor gas mileage, and increased emissions.
- The coolant freeze point in the battery and power electronics loop should be checked by an authorized dealer as a special tool is required to remove the cap from those expansion bottles.
- Electric/Battery coolant system must be serviced by an authorized dealer. If the coolant level is below what is specified on the reservoir, contact an authorized dealer for service. These systems require the use of high purity water such as deionized, or distilled water when mixing the water and coolant solution. The use of lower quality water will reduce the amount of corrosion protection in the cooling systems.

FUSES

General Information


WARNING!

- When replacing a blown fuse, always use an appropriate replacement fuse with the same amp rating as the original fuse. Never replace a fuse with another fuse of higher amp rating. The use of a fuse with a rating other than indicated may result in a dangerous electrical system overload. If a properly rated fuse continues to blow, it indicates a problem in the circuit that must be corrected. Never replace a blown fuse with metal wires or any other material. Do not place a fuse inside a circuit breaker cavity or vice versa. Failure to use proper fuses may result in serious personal injury, fire and/or property damage.
- Before replacing a fuse, make sure that the ignition is off and that all the other services are switched off and/or disengaged.
- If the replaced fuse blows again, contact an authorized dealer.
- If a general protection fuse for safety systems (air bag system, braking system), power unit systems (engine system, transmission system) or steering system blows, contact an authorized dealer.

The fuses protect electrical systems against excessive current.

When a device does not work, you must check the fuse element inside the blade fuse for a break/melt.

Also, please be aware that using power outlets for extended periods of time with the vehicle off may result in vehicle battery discharge.

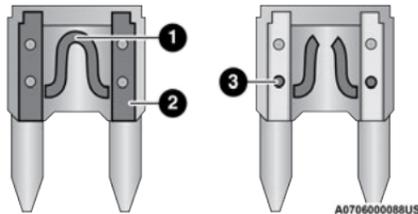

Blade Fuses

1 – Fuse Element

2 – Blade fuse with a good/functional fuse element

3 – Blade fuse with a bad/not functional fuse element (blown fuse)

Underhood Fuses

The Power Distribution Center (PDC) is located in the engine compartment near the driver's side hood hinge. This center contains cartridge fuses, mini-fuses, micro-fuses, circuit breakers and relays. A label that identifies each component is printed on the inside of the cover.


Before any procedure is done on the PDC, make sure the vehicle ignition mode is OFF.

Remove the cover by unlatching the two locks located at each side of the PDC cover, avoid the usage of screw drivers or any other tool to remove the cover, since they may apply excessive force and result on a broken/damaged part.

After service is done, secure the cover with its two locks.

CAUTION!

When installing the Power Distribution Center cover, it is important to ensure the cover is properly positioned and fully latched. Failure to do so may allow water to get into the Power Distribution Center and possibly result in an electrical system failure.

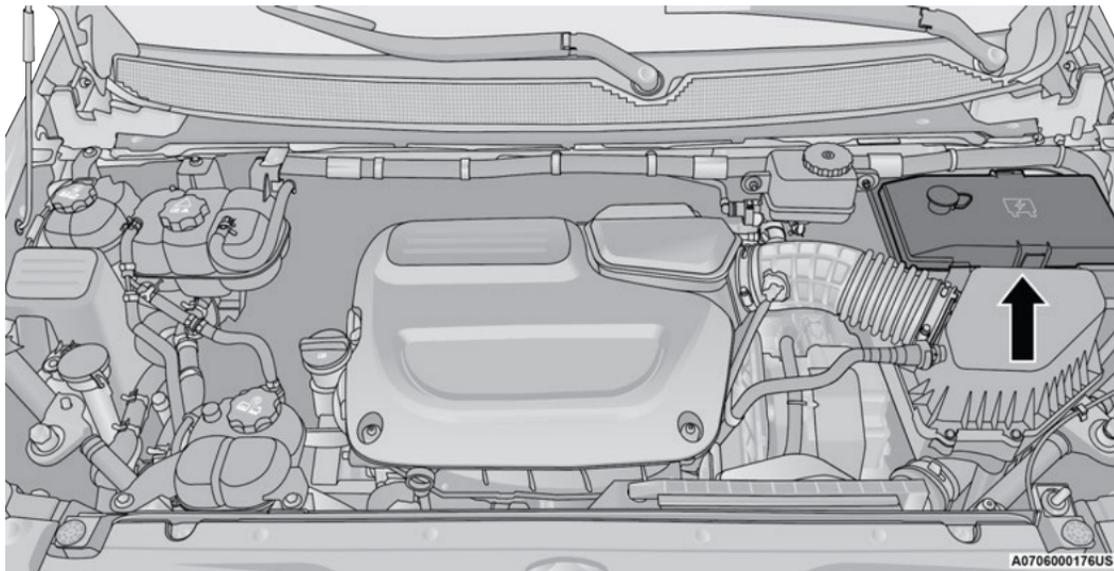

Underhood Power Distribution Center

| Cavity | Cartridge Fuse | Blade Fuse | Description |
|---------------|----------------|------------|-----------------------|
| * If Equipped | | | |
| F01 | 70 Amp | - | Electric Pwr Steering |
| F02 | 150 Amp | - | Spare |

| Cavity | Cartridge Fuse | Blade Fuse | Description |
|----------------------|----------------|---------------|---|
| * If Equipped | | | |
| F04 | - | - | Batt / Integrated Dual Chg Mod (IDCM) |
| F05 | 80 Amp | - | Rad Fan |
| F06 | - | 15 Amp Blue | Low Temp Active Pump |
| F07 | - | 25 Amp Clear | Ignition Coil/Fuel Injector |
| F08 | - | 25 Amp Clear | Amplifier / Active Noise Control * |
| F09 | - | - | Not Populated |
| F10 | - | 15 Amp Blue | High Temp Aux Pump / HV Elect Coolant Htr |
| F11 | - | 15 Amp Blue | ELCM / FTIV |
| F12 | - | 5 Amp Tan | Battery Sensor (IBS) |
| F13 | - | - | Not Populated |
| F14 | - | 10 Amp Red | Media Hub / Pwr Lumbar |
| F15 | 40 Amp Green | - | CBC / Power Locks |
| F16 | - | 20 Amp Yellow | ECM |
| F17 | - | - | Not Populated |
| F18 | 40 Amp Green | - | CBC / Ext Lights |
| F19 | - | - | Not Populated |
| F20 | - | 10 Amp Red | Low Temp Passive Pump |
| F21 | 20 Amp Blue | - | PIM - Park PAWL Motor |

| Cavity | Cartridge Fuse | Blade Fuse | Description |
|----------------------|----------------|---------------|--|
| * If Equipped | | | |
| F22 | - | - | Not Populated |
| F23 | - | - | Not Populated |
| F24 | - | 20 Amp Yellow | RR Wiper |
| F25 | - | 10 Amp Red | Hands Free Dr Mod / Active Grill Shutter / VRM |
| F26 | 40 Amp Green | - | Front Blower Motor |
| F27 | 25 Amp Clear | - | RR Slide Door Module - RT |
| F28 | - | 10 Amp Red | Diagnostic Port/Port USB (IP) / Video USB Port / Overhead DVD Player (Aftermarket) |
| F29 | - | - | Not Populated |
| F30 | - | 10 Amp Red | ECM / PWR Invert Mod |
| F31 | - | 10 Amp Red | 3 way Valves |
| F32 | 20 Amp Blue | - | ECM |
| F33 | 30 Amp Pink | - | Power Liftgate Module |
| F34 | 25 Amp Clear | - | Rear Door Control Module - Lt |
| F35 | 25 Amp Clear | - | Sunroof Control Module |
| F36 | - | - | Not Populated |
| F37 | 40 Amp Green | - | CBC / Ext Lights / PCM |
| F38 | - | - | Not Populated |
| F39 | 25 Amp Clear | - | Rear Blower Motor |

| Cavity | Cartridge Fuse | Blade Fuse | Description |
|----------------------|----------------|---------------|---|
| * If Equipped | | | |
| F40 | 20 Amp Blue | - | Trans Oil Pump |
| F41 | - | - | Not Populated |
| F42 | - | - | Not Populated |
| F43 | - | 20 Amp Yellow | Fuel Pump Motor |
| F44 | 30 Amp Pink | - | CBC / Interior Lights |
| F45 | 30 Amp Pink | - | Power Inverter AC |
| F46 | 30 Amp Pink | - | Driver Door Module |
| F47 | 30 Amp Pink | - | Passenger Door Module |
| F48 | 40 Amp Green | - | EBCM Motor |
| F49 | 25 Amp Clear | - | Rear Sliding Door Module - Lt |
| F50 | 25 Amp Clear | - | Rear Door Control Module - Rt |
| F51 | 30 Amp Pink | - | Front Wiper |
| F52 | - | - | Not Populated |
| F53 | - | - | Not Populated |
| F54 | 40 Amp Green | - | ESC-ECU And Valves |
| F55 | - | 15 Amp Blue | RF Hub / KIN / ESL / DVD |
| F56 | - | 10 Amp Red | FRT & RR HVAC CTRL/ OCM / ESL / EPS / ESC |
| F57 | - | 20 Amp Yellow | PIM - Main Power Supply |
| F58 | - | - | Not Populated |

| Cavity | Cartridge Fuse | Blade Fuse | Description |
|----------------------|----------------|---------------|--|
| * If Equipped | | | |
| F59 | - | - | Not Populated |
| F60 | - | 20 Amp Yellow | Rear Cargo Pwr Outlet |
| F61 | - | - | Not Populated |
| F62 | - | 20 Amp Yellow | PIM-Main PWR Supply |
| F63 | - | - | Not Populated |
| F64 | - | - | Not Populated |
| F65 | - | - | Not Populated |
| F66 | - | 15 Amp Blue | Cluster |
| F67 | - | 10 Amp Red | DASM / PARKTRONIC / HALF |
| F68 | - | - | Not Populated |
| F69 | - | 15 Amp Blue | BPCM |
| F70 | - | 5 Amp Tan | EAC |
| F71 | - | 20 Amp Yellow | Horn |
| F72 | - | - | Not Populated |
| F73 | 30 Amp Pink | - | RR Defog |
| F74 | - | - | Not Populated |
| F75 | - | 5 Amp Tan | Overhead Console / RR Center Stack |
| F76 | - | 20 Amp Yellow | Uconnect / Center Display / Telematics |

| Cavity | Cartridge Fuse | Blade Fuse | Description |
|----------------------|----------------|---------------|--|
| * If Equipped | | | |
| F77 | - | 10 Amp Red | RR Entertainment / Media HUB / USB (S) / Rain Sensors / Sunroof / RR View Mirror / Overhead DVD Player / Interior Monitoring Camera/ Wireless Charging pad |
| F78 | - | 15 Amp Blue | TCM (ZF) / E-Shifter / Cluster |
| F79 | - | 10 Amp Red | ICS / HVAC / EPB SW / STRG Column Ctrl |
| F80 | - | 5 Amp Tan | IDCM |
| F81 | - | 5 Amp Tan | Not Populated |
| F82 | - | - | Not Populated |
| F83 | - | - | Not Populated |
| F84 | - | - | Not Populated |
| F85 | - | 20 Amp Yellow | Cigar Lighter |
| F86 | - | - | Not Populated |
| F87 | - | - | Not Populated |
| F88 | - | 20 Amp Yellow | Front Heated Seats |
| F89 | - | 20 Amp Yellow | Rear Heated Seats |
| F90 | - | 5 Amp Tan | EBCM - ECU |
| F91 | - | 15 Amp Blue | Front Ventilated Seats / Heated Steering Wheel |
| F92 | - | 5 Amp Tan | Security Gateway |
| F93 | - | - | Not Populated |
| F94 | 40 Amp Green | - | ESC - Motor Pump |

| Cavity | Cartridge Fuse | Blade Fuse | Description |
|-------------------------|----------------|------------|--|
| * If Equipped | | | |
| F95A | - | 10 Amp Red | USB IP (Run / ACC) |
| F95B | - | | USB IP (Direct B+) |
| F96 | - | 10 Amp Red | Airbag |
| F97 | - | 10 Amp Red | Airbag |
| F98 | - | - | Not Populated |
| F99 | - | - | Not Populated |
| F100 | - | 10 Amp Red | Pedestrian Alert / RR Camera / Blindspot / CVPM / Humidity Snsr / In Car Temp Sensor / Headlamp SW |
| Circuit Breakers | | | |
| CB1 | 25 Amp | | Power Seat (Driver) |
| CB2 | 25 Amp | | Power Seat (Pass) * |
| CB3 | - | | Not Used |

* 30A mini fuse is substituted for 25A Circuit Breaker.

TIRES

SNOW TRACTION DEVICES

Use of traction devices require sufficient tire-to-body clearance. Due to limited clearance, the following snow traction devices are recommended. Follow these recommendations to guard against damage:

- Snow traction device must be of proper size for the tire, as recommended by the snow traction device manufacturer.
- No other tire sizes are recommended for use with the snow traction device.
- Please follow the table for the recommended tire size, axle and snow traction device:

| FWD Trim Level | Axle | Tire/Wheel Size | Snow Traction Device (maximum projection beyond tire profile or equivalent) |
|--|-------|------------------------|---|
| Base | Front | 235/60R18 | 9 mm Cable/Chain |
| Touring Touring L Touring L Plus | | 235/65R17 235/60R18 | |
| Limited Pinnacle | | 235/60R18 | |

WARNING!

Using tires of different size and type (M+S, Snow) between front and rear axles can cause unpredictable handling. You could lose control and have a collision.

CAUTION!

To avoid damage to your vehicle or tires, observe the following precautions:

- Because of restricted traction device clearance between tires and other suspension components, it is important that only traction devices in good condition are used. Broken devices can cause serious damage. Stop the vehicle immediately if noise occurs that could indicate device breakage. Remove the damaged parts of the device before further use.
- Install device as tightly as possible and then retighten after driving about ½ mile (0.8 km).
- Do not exceed 30 mph (48 km/h).
- Drive cautiously and avoid severe turns and large bumps, especially with a loaded vehicle.
- Do not drive for a prolonged period on dry pavement.
- Observe the traction device manufacturer's instructions on the method of installation, operating speed, and conditions for use. Always use the suggested operating speed of the device manufacturer's if it is less than 30 mph (48 km/h).

(Continued)

CAUTION!

- Do not use traction devices on a compact spare tire.

STORING THE VEHICLE

If the vehicle should remain stationary for more than a month, observe the following precautions:

- Park your vehicle in a covered, dry and possibly airy location with the windows open slightly.
- Check that the Electric Park Brake is not engaged.
- Disconnect the negative (-) terminal from the battery post and be sure that the battery is fully charged. During storage check battery charge quarterly.

NOTE:

Disconnecting the 12 Volt battery will prevent the High Voltage (HV) Battery from accepting a charge from the Electric Vehicle Supply Equipment (EVSE). Also, the vehicle will not condition the HV Battery (if needed and connected to a powered EVSE). If the HV Battery is not able to condition itself and it becomes cold enough (or hot enough), the vehicle will not start until the HV Battery's cell temperatures are between -22 °F (-30 °C) and 122 °F (50 °C).

- If you do not disconnect the battery from the electrical system, check the battery charge every 30 days.
- Whenever you leave the vehicle stationary for two weeks or more, idle the vehicle for approximately five minutes, with the air conditioning system on and high fan speed. This will ensure proper lubrication of the system, thus minimizing the possibility of damage to the compressor when the vehicle is put back into operation.
- Plug in the vehicle when not using it whenever possible.

NOTE:

The hybrid has a feature of periodic wake-up that occurs every 21 days. This feature charges the 12 Volt battery from the high voltage battery. This will happen as long as the high voltage battery remains above the minimum state of charge
 ⇨ page 38.

CAUTION!

Before removal of the positive and negative terminals to the battery, wait at least a minute with ignition switch in the OFF position and close the driver's door. When reconnecting the positive and negative terminals to the battery be sure the ignition switch is in the OFF position and the driver's door is closed.

TECHNICAL SPECIFICATIONS

FLUID CAPACITIES

| | US | Metric |
|-------------------------------|--------------|-------------|
| Fuel (Approximate) | | |
| 3.6L Engine | 16.5 Gallons | 62 Liters |
| Engine Oil With Filter | | |
| 3.6L Engine | 5 Quarts | 4.7 Liters |
| Cooling System* | | |
| 3.6L Engine | 14.6 Quarts | 13.8 Liters |
| Battery Coolant | 4.2 Quarts | 4 Liters |
| Power Electronics Coolant | 3.7 Quarts | 3.5 Liters |

* Includes heater and coolant reservoir filled to MAX level.

NOTE:

Battery Coolant and Power Electronics Coolant reservoir require a special tool to service the coolant system. Contact an authorized dealer for service.

ENGINE FLUIDS AND LUBRICANTS

| Component | Fluid, Lubricant, or Genuine Part |
|---|--|
| Engine Coolant, Battery Coolant, Power Electric Coolant | We recommend using Mopar® Antifreeze/Coolant 10 Year/150,000 Mile (240,000 km) Formula OAT (Organic Additive Technology) with deionized, or distilled water for proper corrosion protection or equivalent meeting the requirements of the manufacturer Material Standard MS.90032. |
| Engine Oil – 3.6L Engine | We recommend using Mopar® SAE 0W-20 Full Synthetic Engine Oil which meets the requirements of the manufacturer Material Standard MS-6395. Equivalent full synthetic SAE 0W-20 engine oil can be used but must have the API Starburst trademark. |
| Engine Oil Filter | We recommend using a Mopar® Engine Oil Filter. If a Mopar® Engine Oil Filter is unavailable only use filters that meet or exceed SAE/USCAR-36 Filter Performance Requirements. |
| Fuel Selection | 87 Octane (R+M)/2 Method, 0-15% Ethanol (Do not use E-85). |

CAUTION!

- Mixing of engine coolant (antifreeze) other than specified Organic Additive Technology (OAT) engine coolant (antifreeze), may result in engine damage and may decrease corrosion protection. Organic Additive Technology (OAT) engine coolant is different and should not be mixed with Hybrid Organic Additive Technology (HOAT) engine coolant (antifreeze) or any “globally compatible” coolant (antifreeze). If a non-OAT engine coolant (antifreeze) is introduced into the cooling system in an emergency, the cooling system will need to be drained, flushed, and refilled with fresh OAT coolant (conforming to MS.90032), by an authorized dealer as soon as possible.
- Do not use water alone or alcohol-based engine coolant (antifreeze) products. Do not use additional rust inhibitors or antirust products, as they may not be compatible with the radiator engine coolant and may plug the radiator.
- This vehicle has not been designed for use with propylene glycol-based engine coolant (antifreeze). Use of propylene glycol-based engine coolant (antifreeze) is not recommended.

CHASSIS FLUIDS AND LUBRICANTS

| Component | Fluid, Lubricant, or Genuine Part |
|------------------------|--|
| Automatic Transmission | Use only Mopar® ZF 8 & 9 Speed ATF Automatic Transmission Fluid, or equivalent. Failure to use the correct fluid may affect the function or performance of your transmission. |
| Brake Master Cylinder | We recommend using Mopar® DOT 3 Brake Fluid, SAE J1703 should be used. Use only recommended brake fluids. |

GENERAL INFORMATION

The following regulatory statement applies to all Radio Frequency (RF) devices equipped in this vehicle:

This device complies with Part 15 of the FCC Rules and with Innovation, Science and Economic Development Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Innovation, Science and Economic Development applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. l'appareil ne doit pas produire de brouillage, et
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

La operación de este equipo está sujeta a las siguientes dos condiciones:

1. es posible que este equipo o dispositivo no cause interferencia perjudicial y
2. este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

NOTE:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

INDEX

- A**
Antifreeze (Engine Coolant) 66, 79
 Disposal 67
Automatic Transaxle 42
Automatic Transmission
 Adding Fluid 81
 Fluid Type..... 81
AutoPark 39
Axle Lubrication 81
- B**
Battery 7
 Charging..... 8
 Jump Starting..... 57
Brake Fluid 81
Brake System
 Fluid Check 81
- C**
Capacities, Fluid 79
Caps, Filler
 Fuel 46
 Radiator (Coolant Pressure) 67
Chains, Tire..... 77
Change Oil Indicator 30
Charging 8
Child Restraint 51
Child Restraints
 Child Seat Installation 54
 Using The Top Tether Anchorage..... 55
Cooling Pressure Cap (Radiator Cap)..... 67
Cooling System 65
 Coolant Level..... 67
 Cooling Capacity..... 79
 Disposal Of Used Coolant..... 67
 Drain, Flush, And Refill 66
 Inspection..... 65, 67
 Pressure Cap..... 67
 Radiator Cap 67
 Selection Of Coolant (Antifreeze)... 66, 79, 80
- D**
Disposal
 Antifreeze (Engine Coolant) 67
- E**
Emergency, In Case Of
 Jump Starting 57
- Engine
 Coolant (Antifreeze) 80
 Cooling..... 65
 Oil 79, 80
 Oil Selection..... 79
 Starting..... 38
- F**
Filters
 Engine Oil 80
Fluid Capacities 79
Fluid, Brake..... 81
Fuel
 Filler Cap (Gas Cap) 46
 Octane Rating..... 80
 Specifications 80
 Tank Capacity 79
Fuses 68
- G**
Gas Cap (Fuel Filler Cap)..... 46

| | | | | | |
|--|----|--|----|---|--------|
| H | | O | | Seat Belts | 49 |
| High Voltage Battery | 7 | Occupant Restraints | 49 | Automatic Locking Retractor (ALR) | 50 |
| Hood Prop..... | 25 | Octane Rating, Gasoline (Fuel) | 80 | Child Restraints | 51 |
| Hood Release | 25 | Oil Change Indicator | 30 | Front Seat..... | 49 |
| | | Reset | 30 | Selection Of Coolant (Antifreeze) | 80 |
| I | | Oil, Engine..... | 80 | Snow Chains (Tire Chains) | 77 |
| Instrument Cluster..... | 28 | Capacity..... | 79 | Specifications | |
| Display | 28 | Filter | 80 | Oil | 80 |
| | | Recommendation | 79 | Starting | 22, 38 |
| J | | Viscosity | 79 | Remote..... | 22 |
| Jump Starting | 57 | | | Starting And Operating..... | 38 |
| | | P | | Starting Procedures | 38 |
| L | | Pedestrian Warning System..... | 49 | System, Remote Starting | 22 |
| Latches | | | | T | |
| Hood | 25 | Q | | Tires | |
| Lights | | Quiet Vehicle Pedestrian Module (QVPM) | 49 | Chains | 77 |
| Hybrid Electric Vehicle System | 37 | R | | Pressure Monitoring System (TPMS) | 32 |
| Park..... | 37 | Radiator Cap (Coolant Pressure Cap) | 67 | To Open Hood | 25 |
| Plug Status..... | 37 | Release, Hood | 25 | Towing..... | 48 |
| Torque Limited Warning | 37 | Remote Control | | Trailer Towing..... | 48 |
| Load Shed Battery Saver Mode | 35 | Starting System | 22 | Transaxle | |
| Load Shed Battery Saver On..... | 35 | Remote Starting | | Automatic | 42 |
| Load Shed Electrical Load Reduction | 35 | Exit Remote Start Mode | 23 | Operation..... | 42 |
| Load Shed Intelligent Battery Sensor | 35 | Remote Starting System | 22 | | |
| | | Restraints, Child | 51 | V | |
| M | | | | Vehicle Maintenance | 65 |
| Maintenance Schedule..... | 60 | S | | | |
| | | Schedule, Maintenance | 60 | | |







SCAN TO ACCESS YOUR
VEHICLE'S VIDEO PLAYLIST



©2022 FCA US LLC. All Rights Reserved. Tous droits réservés. Chrysler is a registered trademark of FCA US LLC or FCA Canada Inc., used under license. Chrysler est une marque déposée de FCA US LLC ou FCA Canada Inc., utilisée sous le permis. App Store is a registered trademark of Apple Inc. Google Play Store is a registered trademark of Google.

P68564563AB
Second Edition